



COMBINATION METER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

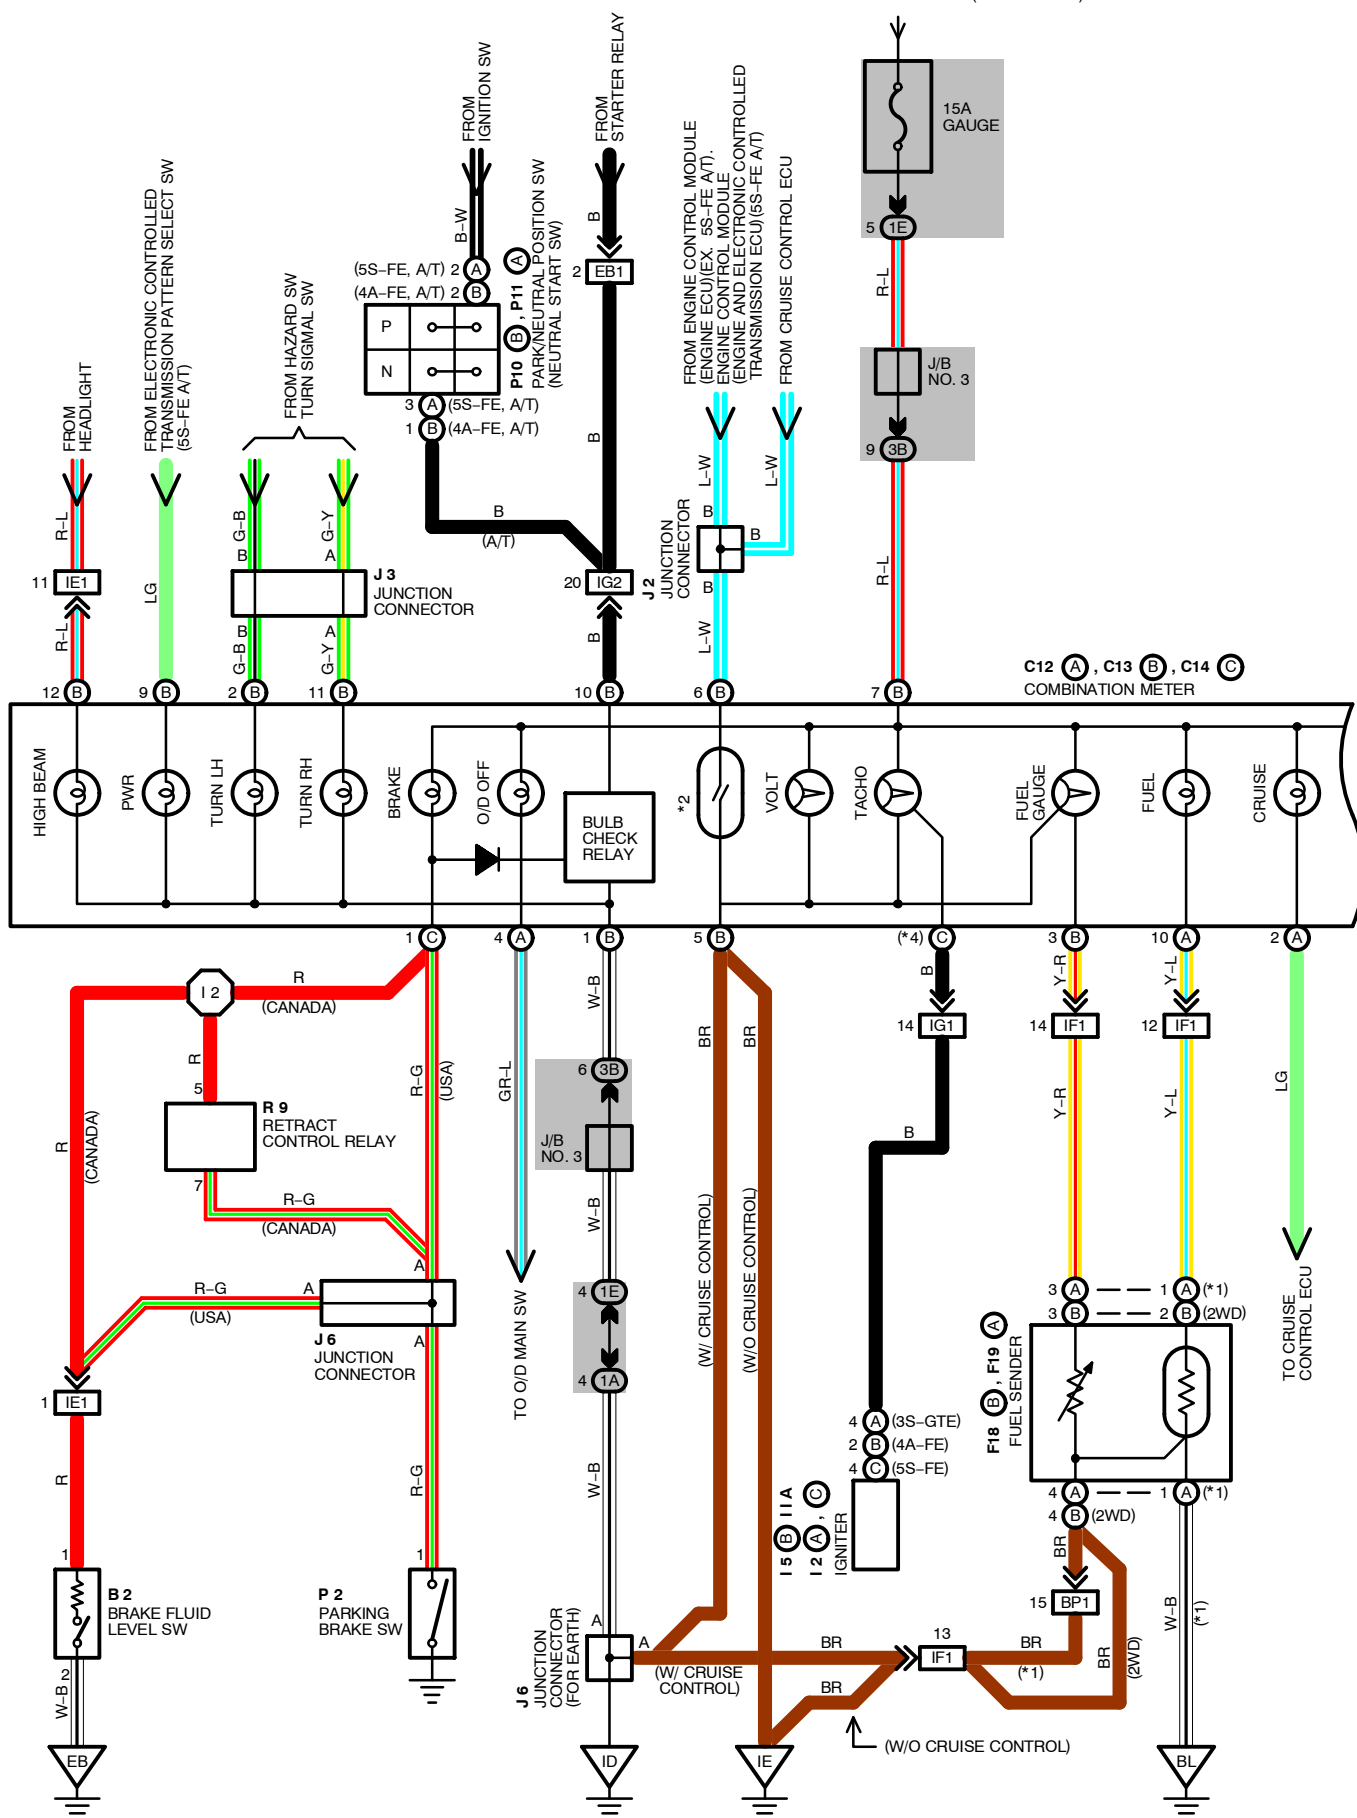

*1 : ALL-TRAC/4WD
 *2 : VEHICLE SPEED SENSOR (SPEED SENSOR)

*3 : MALFUNCTION INDICATOR LAMP (CHECK ENGINE WARNING LIGHT)
 *4 : W/O ELECTRONIC CONTROLLED TRANSMISSION

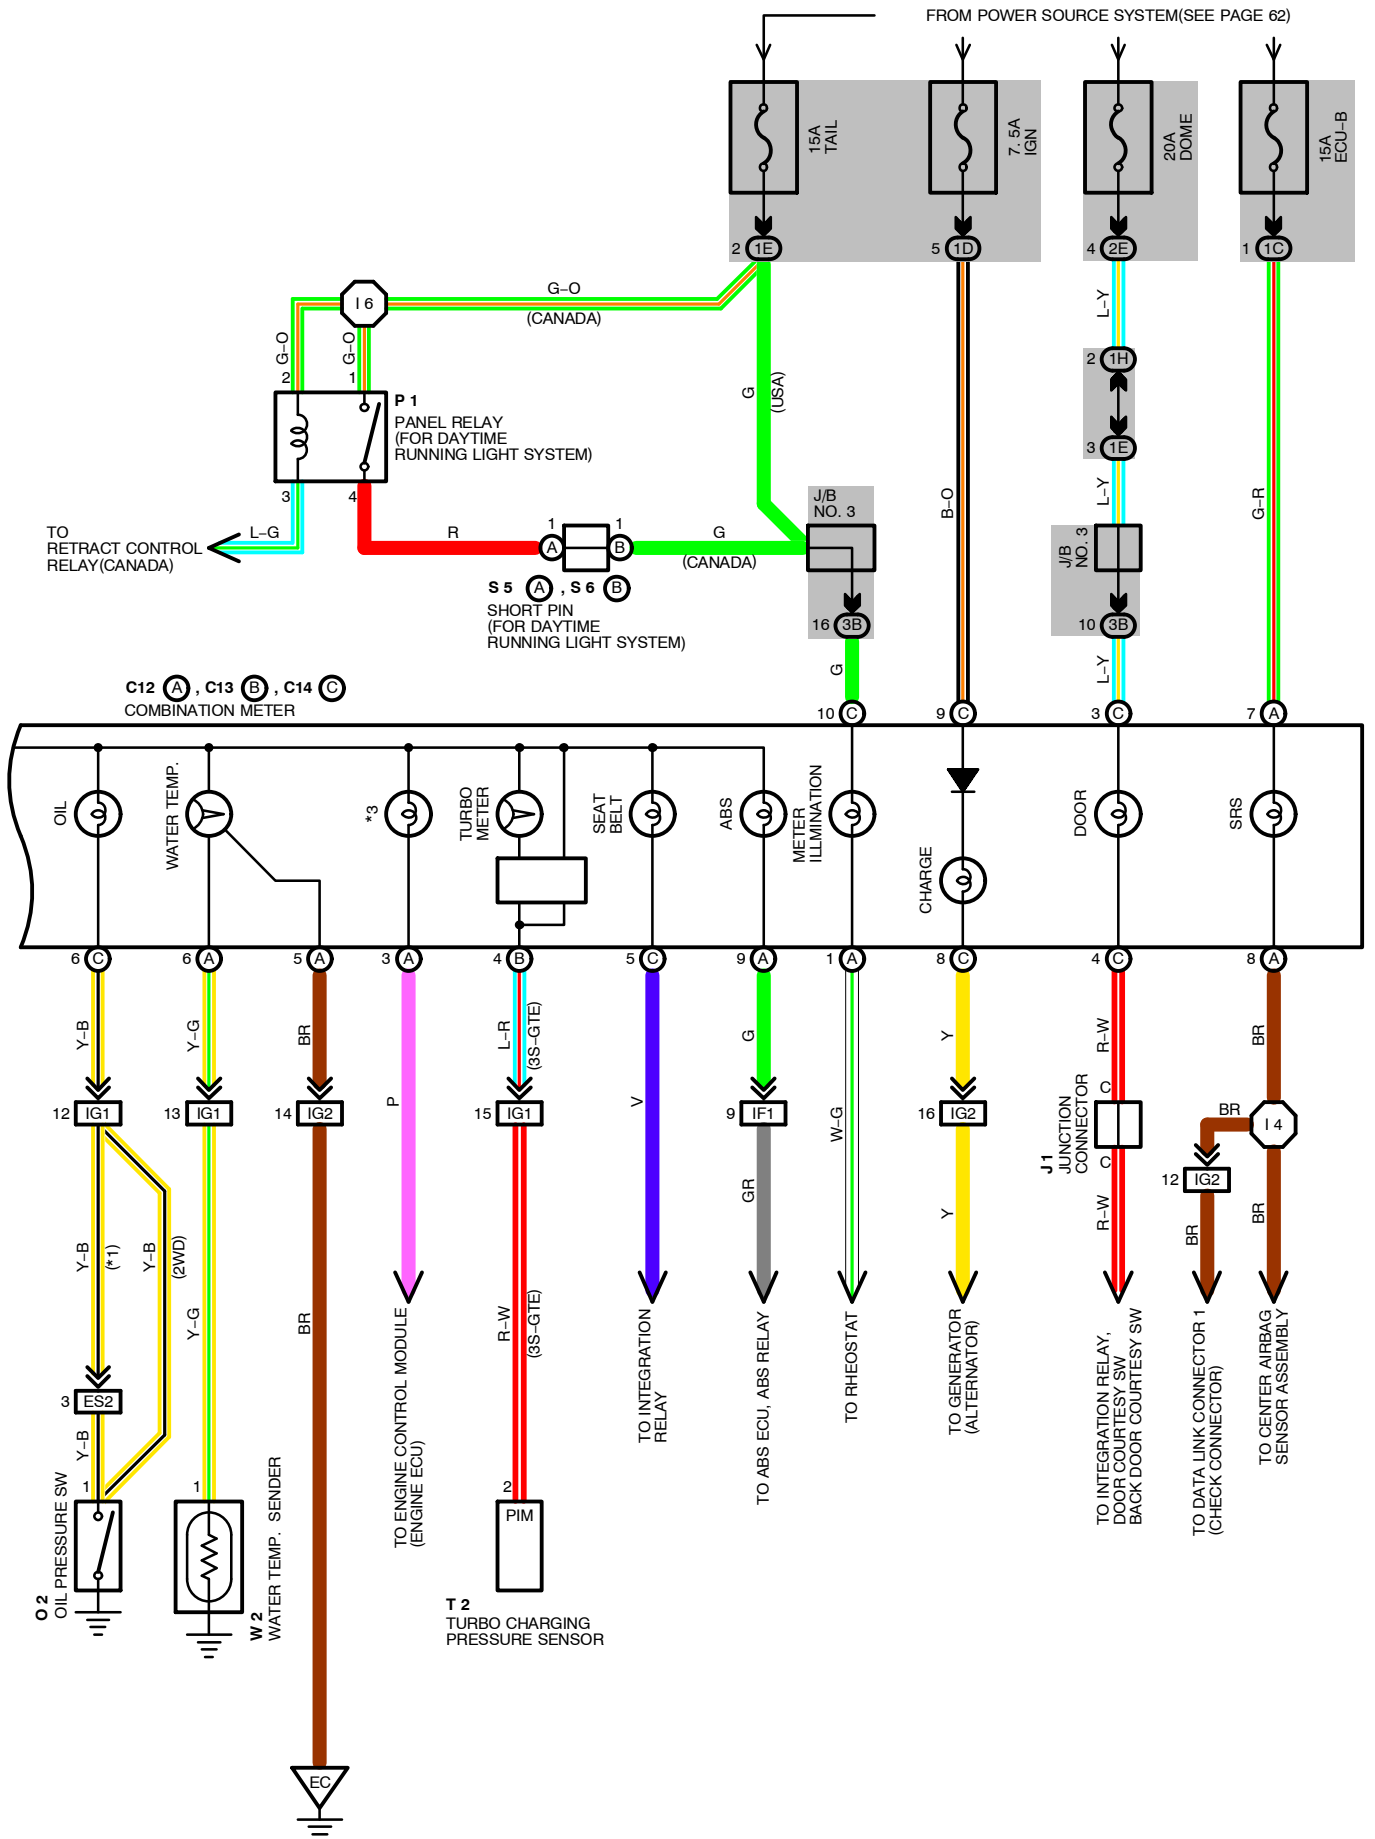

COMBINATION METER

SERVICE HINTS

B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C12(A), C13(B), C14(C) COMBINATION METER

(A) 7, (C) 3-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 7, (C) 9-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A) 5, (B) 1, (B) 5-GROUND : ALWAYS CONTINUITY

F18, F19 FUEL SENDER

3-4 : APPROX. 3 Ω WITH FUEL FULL

APPROX. 110.0 Ω WITH FUEL EMPTY

O 2 OIL PRESSURE SW

1-GROUND : CLOSED WITH OIL PRESSURE BELOW 0.2 KG/CM² (2.84 SPI, 19.61 KPA)

P 2 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

W 2 WATER TEMP. SENDER

1-GROUND : APPROX. 226 Ω AT 50°C (122°F)

APPROX. 26.4 Ω AT 115°C (239°F)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 2	28 (3S-GTE), 30 (5S-FE)	I 5	B	31 (4A-FE)	P10 B 30 (5S-FE), 31 (4A-FE)
	31 (4A-FE)	J 1		33	P11 A 30 (5S-FE)
C12	A 32	J 2		33	R 9 31
C13	B 32	J 3		33	S 5 A 31
C14	C 32	J 6		33	S 6 B 31
F18	B 34 (L/B), 35 (C/P)	O 2		29 (3S-GTE), 30 (5S-FE)	T 2 27 (3S-GTE)
F19	A 34 (L/B)			31 (4A-FE)	W 2 27 (3S-GTE), 28 (5S-FE)
I 2	A 29 (3S-GTE)	P 1		31	29 (4A-FE)
	C 30 (5S-FE)	P 2		33	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C		
1D		
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	21 (ALL-TRAC/4WD)	
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	36 (3S-GTE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
	38 (5S-FE)	
	40 (4A-FE)	
ES2	36 (3S-GTE)	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
IE1	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	42	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	42	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE CONTROL MODULE (ECU))
IG2		
BP1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (3S-GTE)	FRONT LEFT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
EC	36 (3S-GTE)	INTAKE MANIFOLD
	38 (5S-FE)	
	40 (4A-FE)	
ID	42	LEFT KICK PANEL
IE	42	INSTRUMENT PANEL BRACE LH
BL	46 (L/B)	BACK PANEL CENTER
	48 (C/P)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	44	COWL WIRE	I 6	44	COWL WIRE
I 4					

