

SERVICE HINTS

HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	32	H 1	28 (3S-GTE), 30 (5S-FE)	R 2	28 (3S-GTE), 30 (5S-FE)
C15	A 32		31 (4A-FE)		31 (4A-FE)
C16	B 32	H 2	28 (3S-GTE), 30 (5S-FE)	R 3	28 (3S-GTE), 30 (5S-FE)
F11	A 28 (3S GTE)		31 (4A-FE)		31 (4A-FE)
	B 30 (5S-FE), 31 (4A-FE)	J 6	33	R 8	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
2B	22 (2WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
2D	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
2E	22 (2WD)	
3B	23 (ALL-TRAC/4WD)	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
	25	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (3S-GTE)	FRONT LEFT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
ID	42	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	36 (3S-GTE)	ENGINE ROOM MAIN WIRE	E 3	40 (4A-FE)	ENGINE ROOM MAIN WIRE
	38 (5S-FE)		E13	36 (3S-GTE)	
	40 (4A-FE)			38 (5S-FE)	
E 3	36 (3S-GTE)		I 2	40 (4A-FE)	COWL WIRE
	38 (5S-FE)			44	






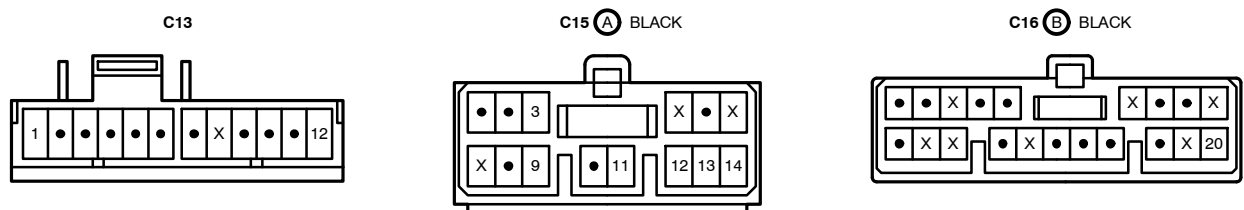


(ALL-TRAC/4WD) F11 (A) BLACK

(2WD) F11 (B) BLACK


H1, H2 BROWN

J6

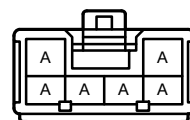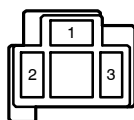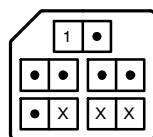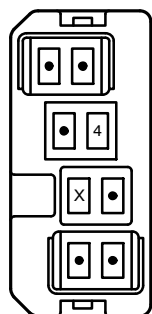


(HINT : SEE PAGE 7)

R8
RETRACT CONTROL RELAY

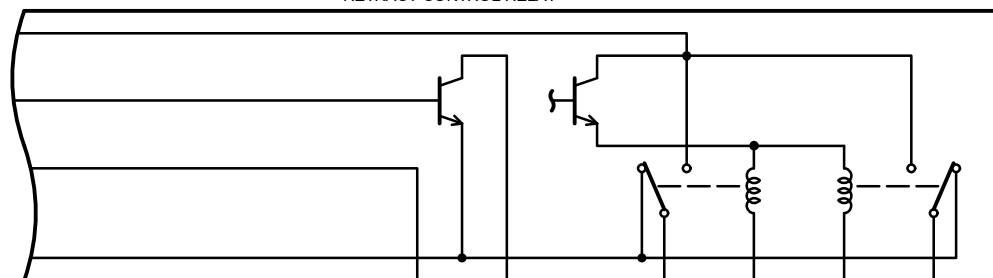

R2, R3 BLACK

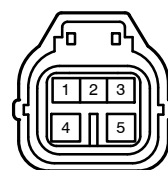

R8

