


FROM POWER SOURCE SYSTEM (SEE PAGE 62)

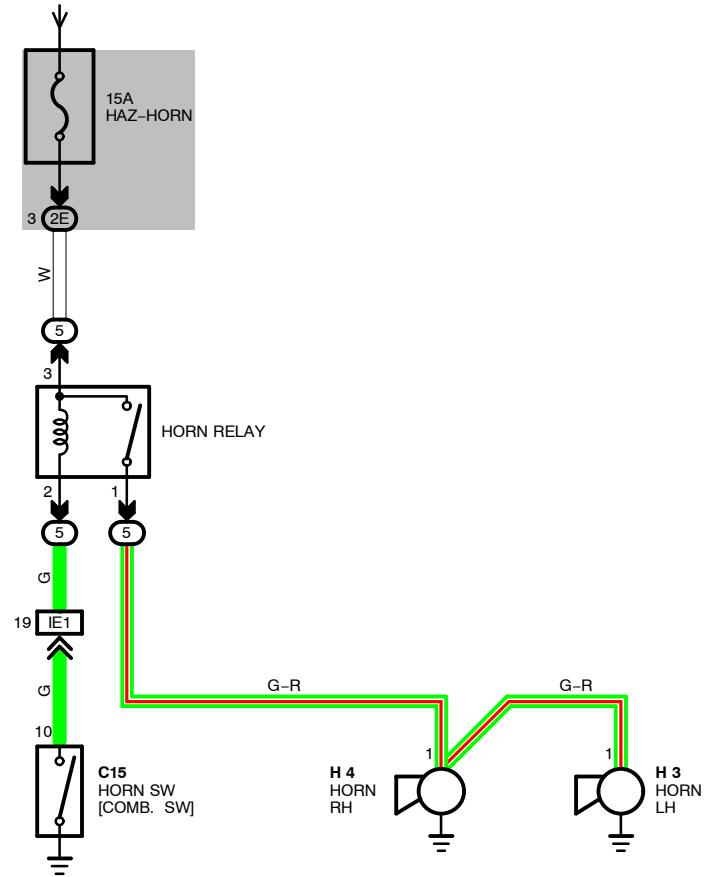

SERVICE HINTS

HORN RELAY

(5) 3- (5) 1 : CLOSED WITH HORN SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	32	H 3	31 (4A-FE)	H 4	31 (4A-FE)
H 3	29 (3S-GTE), 30 (5S-FE)	H 4	29 (3S-GTE), 30 (5S-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
5	27	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

