


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

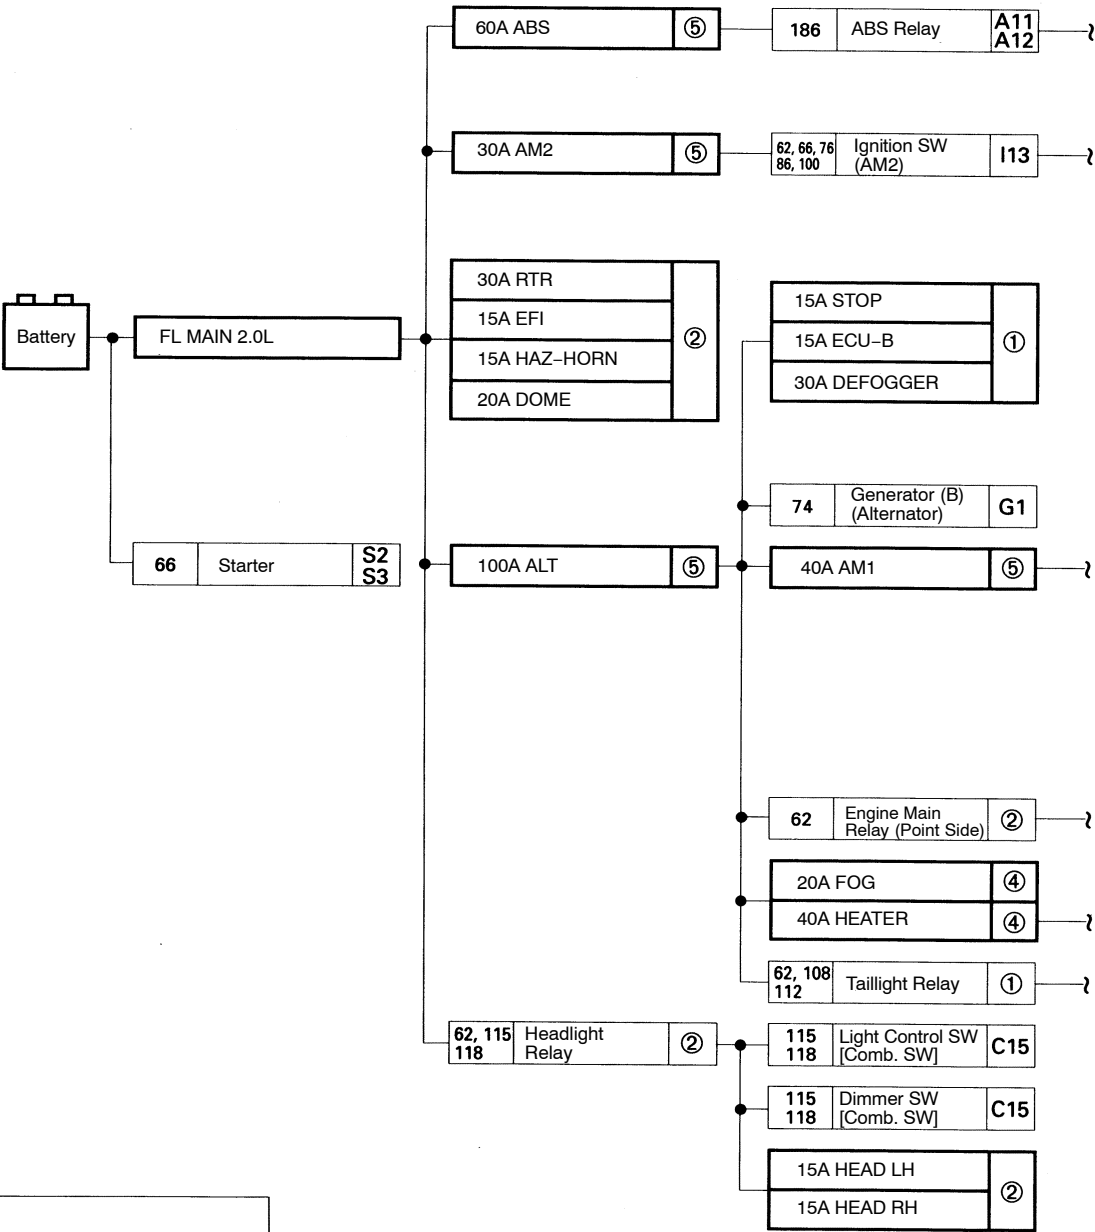

Example

2	Starter	S3
---	---------	----

Parts

Code or Location

* Page Nos. of Related Systems


15A DOME	②
----------	---

Electrical Source

Location

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

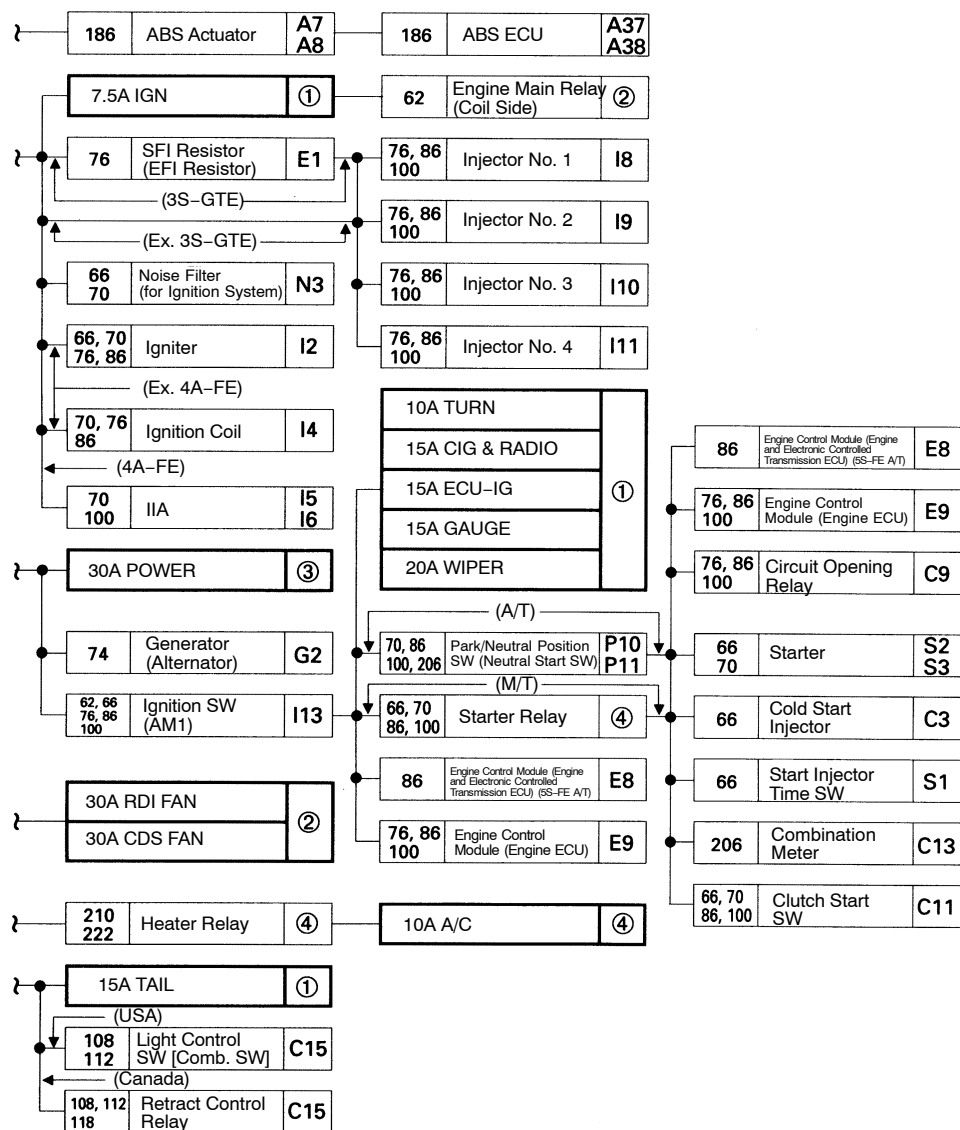

(1) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		210 222	222	210 222	186			108 210 222	210 222	210	210 222	210	210 222	210 222	108	210	170	186	186	198		
					Parts		Code or Location																		
			CB or Fuse		A/C Condenser Fan Motor	A/C Idle-Up VSV	A/C Magnetic Clutch	A/C Pressure SW	ABS Actuator	ABS Relay	A/C Amplifier	A/C Control Assembly			A/C Power Transistor	A/C System Amplifier	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Ashtray Illumination	Auto A/C Amplifier		Auto Tilt Away ECU	ABS Deceleration Sensor (All-Trac/4WD)	ABS ECU	Auto Antenna Control Relay and Motor
			A2	A3	A4	A5	A7	A11	A15	A16	A17	A18	A20	A23	A26	A28	A30	A31	A32	A35	A36	A37	A38	A41	
①	30A	DEFOGGER																							
	20A	WIPER																							
	15A	GAUGE		●	●	●	●	●	●		●	●			●	●	●			●	●				
	7.5A	IGN				●																			
	15A	ECU-B																				●			
	10A	TURN																							
	15A	CIG & RADIO														●	●						●		
	15A	TAIL									●	●													
	15A	ECU-IG																			●		●	●	
	15A	STOP																					●		
②	15A	HEAD LH																							
	15A	HEAD RH																							
	30A	RTR																							
	15A	EFI																							
	20A	DOME															●						●		
	15A	HAZ-HORN																							
	30A	RDI FAN																							
	30A	CDS FAN	●																						
③	30A	POWER																	●						
④	20A	FOG																							
	10A	A/C		●		●			●		●														
	40A	HEATER									●	●							●	●					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

(1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems																					
			Parts																					
			Code or Location																					
			CB or Fuse																					
			Interior Light	License Plate Light	Luggage Compartment Door Courtesy SW (C/P)	Luggage Compartment Light (C/P)	Luggage Compartment Light (L/B)	Noise Filter (for Defogger System)	O/D Solenoid	Oil Pressure SW	O/D Main SW	Panel Relay (for Daytime Running Light System)	Power Seat Motor (for Lumber Support)	Power Seat Motor (for Side Support)	Power Seat SW	Power Window Master SW	Power Window Motor LH	Power Window Motor LH	Power Window SW RH	Back-Up Light SW (A/T w/o Electronic Controlled Transmission)	Park/Neutral Position SW (Neutral Start SW, Back-Up Light SW (A/T w/ Electronic Controlled Transmission))	Radiator Fan Motor	Retract Motor LH	Retract Motor RH
			I14	L1	L2	L3	L4	N4	O1	O2	O7	P1	P3	P4	P5	P6	P7	P8	P9	P10	P11	R1	R2	R3
①	30A	DEFOGGER						●																
	20A	WIPER																						
	15A	GAUGE							●	●	●									●	●			
	7.5A	IGN																						
	15A	ECU-B																						
	10A	TURN																						
	15A	CIG & RADIO																						
	15A	TAIL		●								●	●											
	15A	ECU-IG																						
	15A	STOP																						
②	15A	HEAD LH																						
	15A	HEAD RH																					●	●
	30A	RTR																						
	15A	EFI																						
	20A	DOME	●		●	●	●																	
	15A	HAZ-HORN																						
	30A	RDI FAN																				●		
	30A	CDS FAN																				●		
③	30A	POWER											●	●	●	●	●	●	●					
④	20A	FOG																						
	10A	A/C																						
	40A	HEATER																			●			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (6) R/B No. 2 (See page 26)

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

