



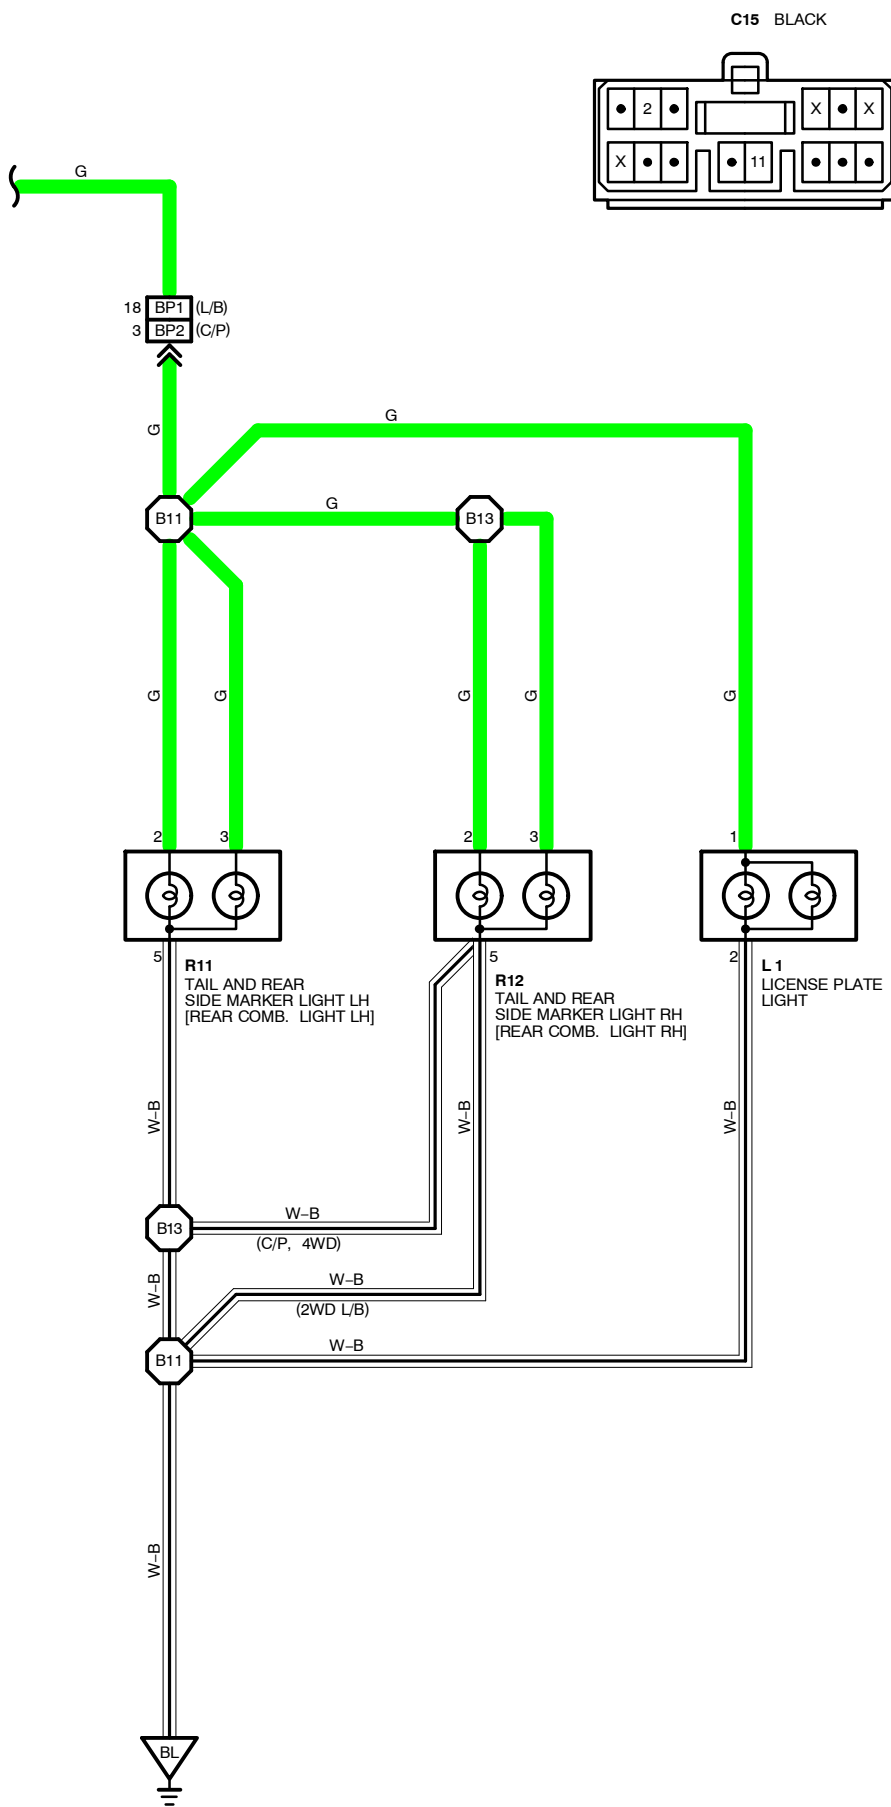



C15 BLACK

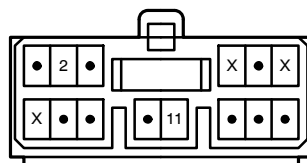


F 5, F 6




F 7, F 8 GRAY




(ALL-TRAC/4WD) F11 (A) BLACK

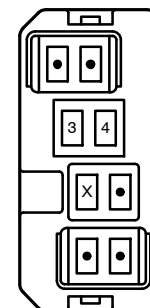

(2WD) F11 (B) BLACK

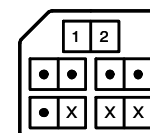

J 6

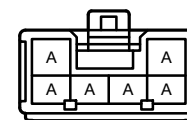


(HINT : SEE PAGE 7)


L 1



R 9



R11, R12



TAILLIGHT

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
CLOSED WITH ENGINE RUNNING AND BRAKE LEVER RELEASED (CANADA)

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	32	F 7	31 (4S-FE)	L 1	34 (L/B), 35 (C/P)
F 5	28 (3S-GTE), 30 (5S-FE)	F 8	28 (3S-GTE), 30 (5S-FE)	R 9	33
	31 (4S-FE)		31 (4S-FE)	R11	34 (L/B), 35 (C/P)
F 6	28 (3S-GTE), 30 (5S-FE)	F11	28 (3S-GTE)	R12	34 (L/B), 35 (C/P)
	31 (4S-FE)		30 (5S-FE), 31 (4S-FE)		
F 7	28 (3S-GTE), 30 (5S-FE)	J 6	33		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	20	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	36 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	38 (5S-FE)	
	40 (4A-FE)	
BP1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	48 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	36 (3S-GTE)	FRONT RIGHT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
EB	36 (3S-GTE)	FRONT LEFT FENDER
	38 (5S-FE)	
	40 (4A-FE)	
ID	42	LEFT KICK PANEL
BL	46 (L/B)	BACK PANEL CENTER
	48 (C/P)	

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	36 (3S-GTE)	ENGINE ROOM MAIN WIRE	E 4	38 (5S-FE)	ENGINE ROOM MAIN WIRE
	38 (5S-FE)			40 (4A-FE)	
	40 (4A-FE)		B11	46 (L/B)	LUGGAGE ROOM WIRE
E 3	36 (3S-GTE)			48 (C/P)	
	38 (5S-FE)		B13	46 (L/B)	
	40 (4A-FE)			48 (C/P)	
E 4	36 (3S-GTE)				