

TOYOTA–VARIABLE INDUCTION SYSTEM (T–VIS)

INSPECTION OF T–VIS


1. WARM UP AND STOP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TACHOMETER (See page [EM-26](#))


3. CONNECT VACUUM GAUGE

Using a 3–way connector, connect the vacuum gauge to the hose between the VSV and actuator.

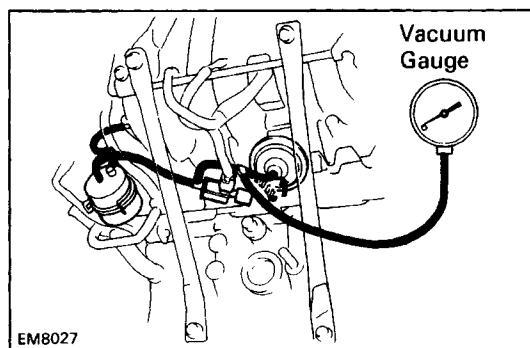

4. INSPECT T–VIS OPERATION

(a) Check that the vacuum gauge indicates vacuum at idling.

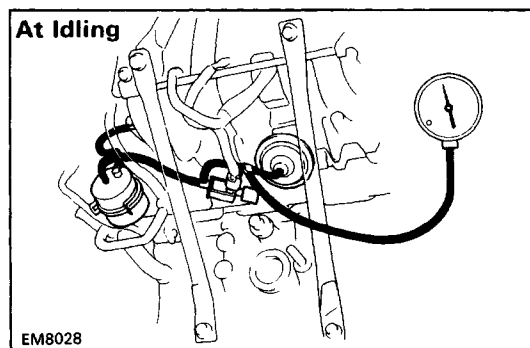

(b) Check that the vacuum gauge indicates zero at 4,200 rpm or more.

HINT: If regular unleaded gasoline is used, the vacuum gauge also indicates zero below 4,200 rpm.

