


VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-01

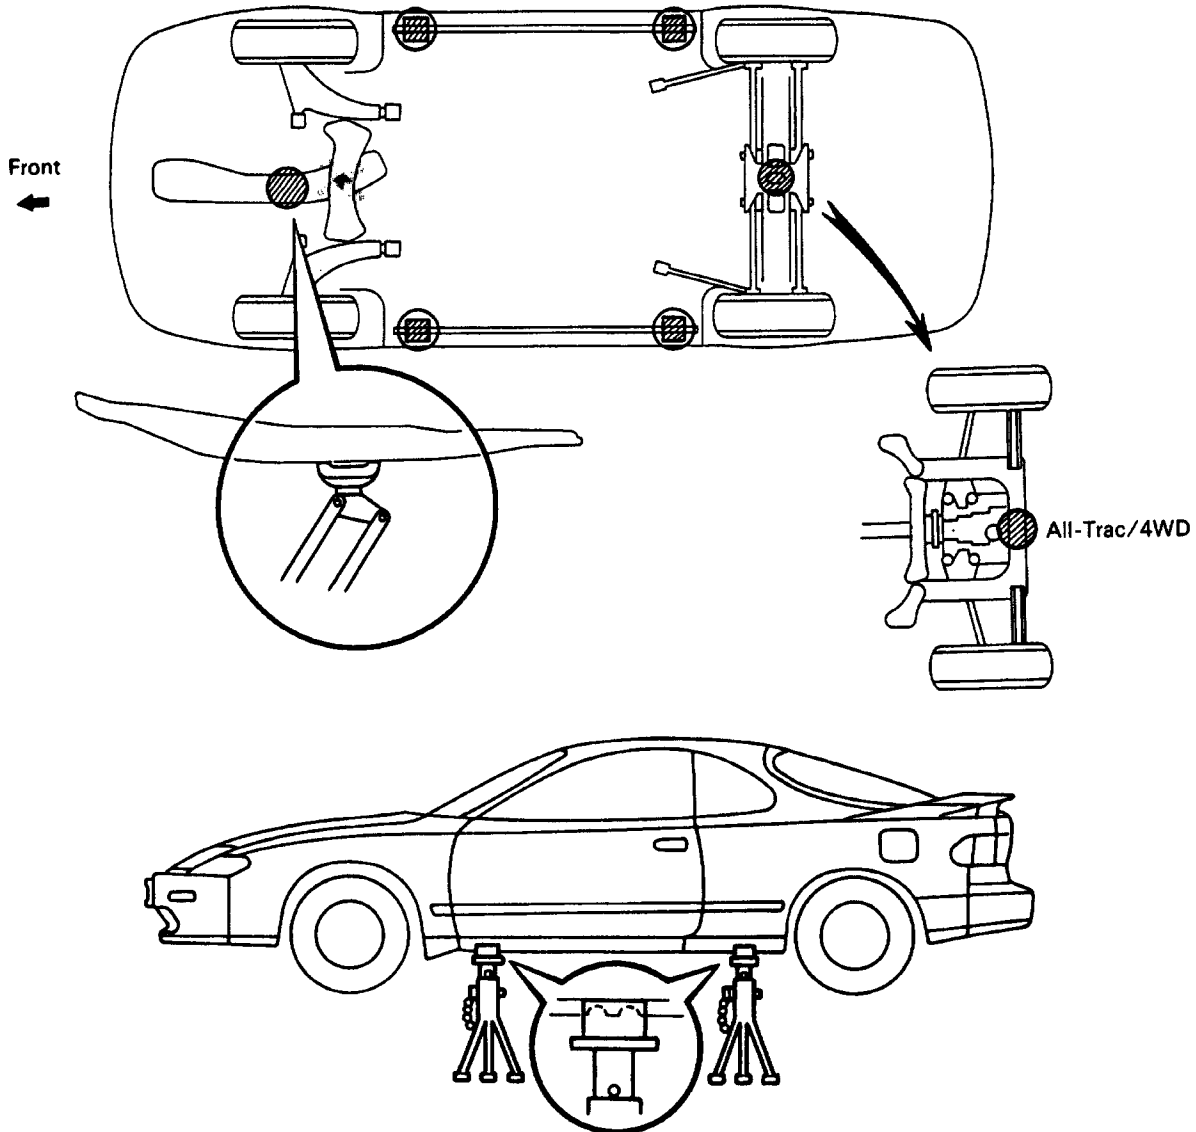

JACK POSITION

Front Center of engine mounting center member
 Rear Jack up support of rear subframe

NOTICE: Place the jack only in the positions indicated above. Never place the jack in the position marked "X" as this will bend the cross-member and damage the vehicle.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift