

PRECAUTIONS

1. Before working on the fuel system, disconnect the cable from negative (–) terminal of the battery.

HINT: Any diagnostic trouble code retained by the computer will be erased when the battery terminal is removed. Therefore, if necessary, read the diagnosis before removing the battery terminal.

2. Do not smoke or work near an open flame when working on the fuel system.
3. Keep gasoline away from rubber or leather parts.

INSPECTION PRECAUTIONS



MAINTENANCE PRECAUTIONS

1. CHECK CORRECT ENGINE TUNE-UP

(See page [EM-12](#))

2. PRECAUTIONS WHEN CONNECTING GAUGE

- (a) Use the battery as the power source for the timing light, tachometer, etc.
- (b) Connect the tester probe of a tachometer to the terminal IGO of the data link connector 1.

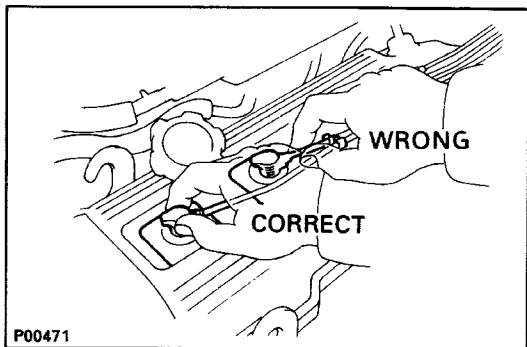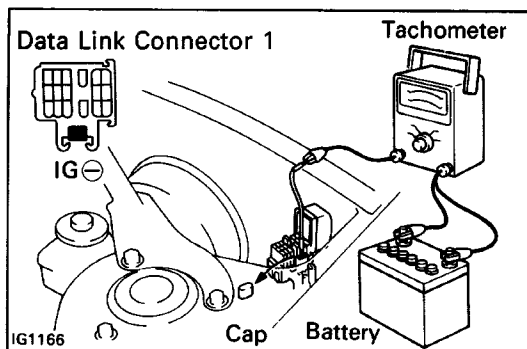

3. IN EVENT OF ENGINE MISFIRE, FOLLOWING PRECAUTIONS SHOULD BE TAKEN

- (a) Check proper connection of battery terminals, etc.
- (b) Handle high-tension cords carefully.
- (c) After repair work, check that the ignition coil terminals and all other ignition system lines are reconnected securely.
- (d) When cleaning the engine compartment, be especially careful to protect the electrical system from water.

4. PRECAUTIONS WHEN HANDLING OXYGEN SENSOR

- (a) Do not allow oxygen sensor to drop or hit against an object.
- (b) Do not allow the sensor to come into contact with water.