


THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM

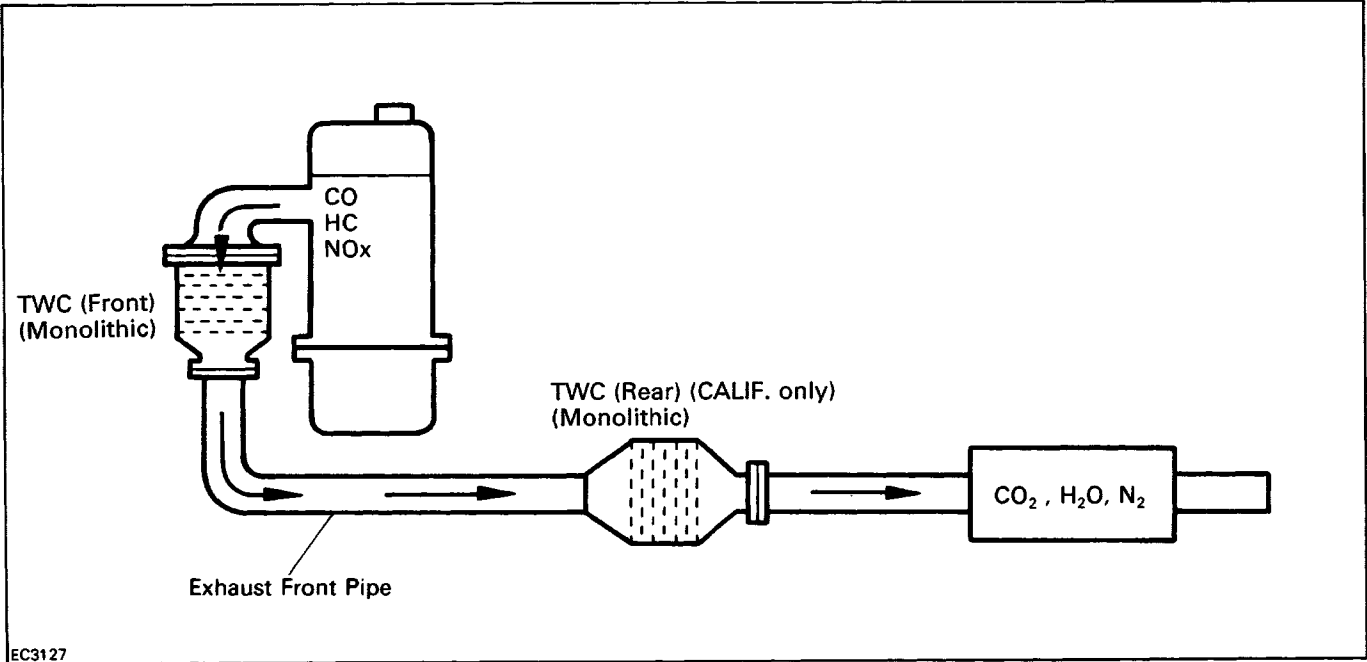


To reduce CO, HC and NOx emissions, they are oxidized, and converted to carbon dioxide (CO₂), water (H₂O) and nitrogen (N₂) by the three-way catalytic converter

Exhaust Port		TWC (Front)		TWC (Rear) (CALIF. only)		Exhaust Gas
CO HC NOx	➡	OXIDATION AND REDUCTION	➡	OXIDATION AND REDUCTION	➡	CO ₂ H ₂ O N ₂

INSPECTION OF EXHAUST PIPE ASSEMBLY


1. INSPECT CONNECTIONS FOR LOOSENESS OR DAMAGE
2. INSPECT CLAMPS FOR WEAKNESS, CRACKS OR DAMAGE

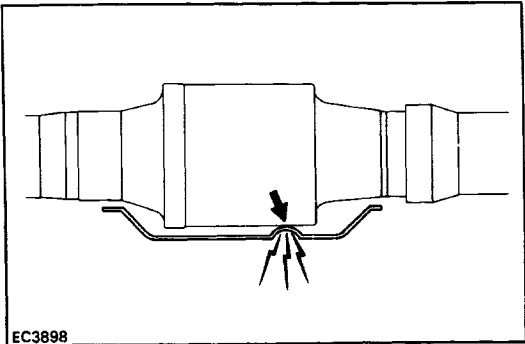

INSPECTION OF THREE-WAY CATALYTIC CONVERTER (Three-Way Catalytic Converter-Rear (CALIF. only))

INSPECT FOR DENTS OR DAMAGE

If any part of protector is damaged or dented to the extent that it contacts the three-way catalytic converter, repair or replace it.

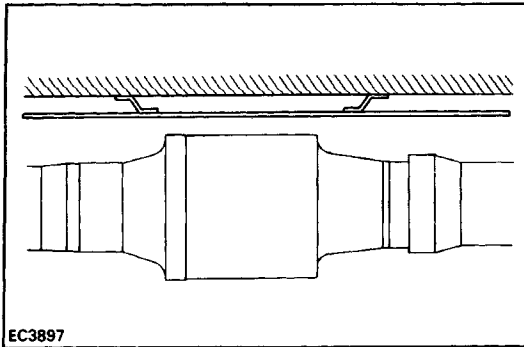

INSPECTION OF HEAT INSULATOR (Three-Way Catalytic Converter-Rear (CALIF. only))

1. INSPECT HEAT INSULATOR FOR DAMAGE
2. INSPECT FOR ADEQUATE CLEARANCE BETWEEN
THREE-WAY CATALYTIC CONVERTER AND HEAT
INSULATOR

REPLACEMENT OF THREE-WAY CATALYTIC CONVERTER

(Three-Way Catalytic Converter (Front))

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL
OF BATTERY

CAUTION: Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

2. REMOVE RH ENGINE UNDER COVER

3. REMOVE FRONT EXHAUST PIPE

(See step 2 on page [EC-45](#))

4. REMOVE THREE-WAY CATALYTIC CONVERTER
(FRONT)



(a) Check that the three-way catalytic converter is cool

(b) Disconnect the main oxygen sensor connector.

(c) (CALIF. only)


Disconnect the sub-oxygen sensor connector.

(d) Remove the two bolts, two nuts and three-way catalytic converter stay.

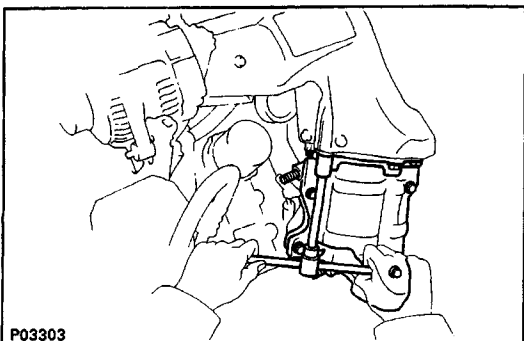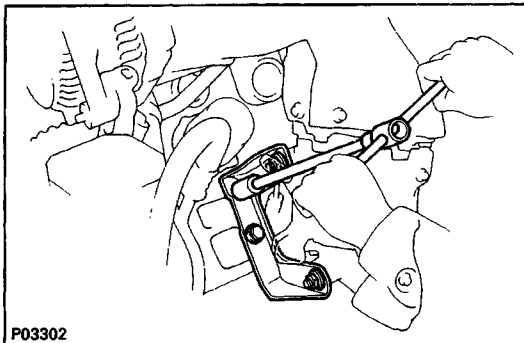


(e) Remove the three bolts, two nuts, three-way catalytic converter, gasket, retainer and cushion.

(f) Remove the eight bolts and two heat insulators from the three-way catalytic converter.

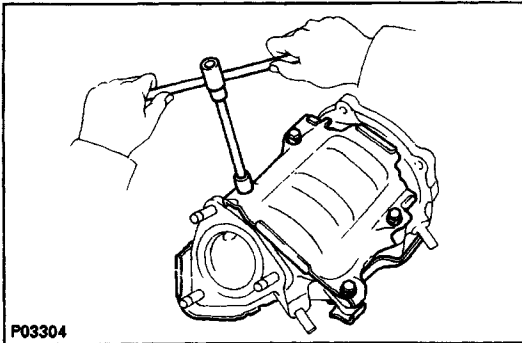


5. REINSTALL THREE-WAY CATALYTIC CONVERTER (FRONT)

- (a) Install the two heat insulators to a new three-way catalytic converter with the eight bolts.

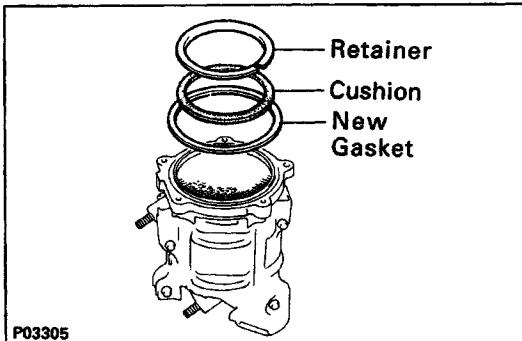


- (b) Place the cushion, retainer and a new gasket on the three-way catalytic converter.

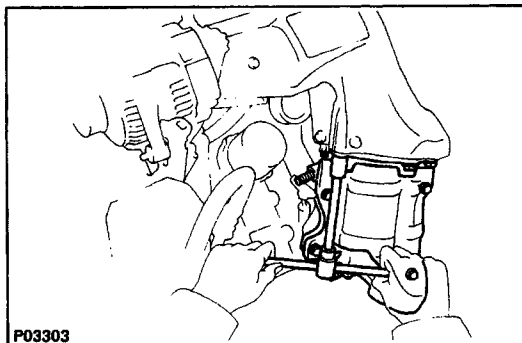

- (c) Install the three-way catalytic converter with the three bolts and two new nuts.

Torque: 29 N-m (300 kgf-cm, 21 ft-lbf)

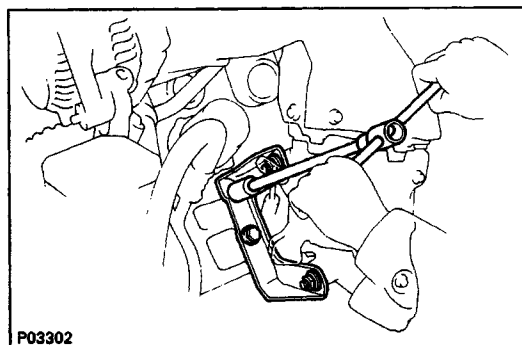

- (d) Install the three-way catalytic converter stay with the two bolts and two nuts.

Torque: 42 N-m (425 kgf-cm, 31 ft-lbf)

- (e) Connect the main oxygen sensor connector.

- (f) (CALIF. only)


Connect the sub-oxygen sensor connector.

6. REINSTALL FRONT EXHAUST PIPE

(See step 3 on page [EC-45](#))

7. REINSTALL RH ENGINE UNDER COVER

8. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

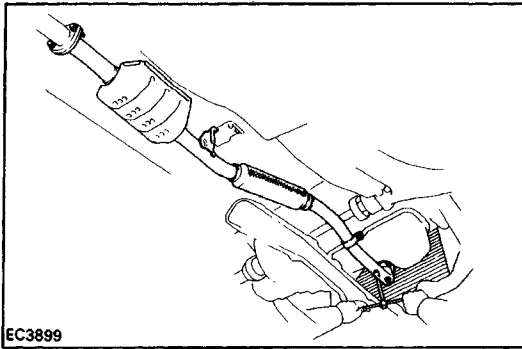

(Three-Way Catalytic Converter–Rear (CALIF. only))

1. REMOVE RH ENGINE UNDER COVER

2. REMOVE FRONT EXHAUST PIPE (THREE-WAY CATALYTIC CONVERTER–REAR)

- (a) Loosen the bolt, and disconnect the clamp from the bracket.
- (b) Remove the two bolts and nuts holding the front exhaust pipe to the center exhaust pipe.
- (c) Using a 14 mm deep socket wrench, remove the three nuts holding the front exhaust pipe to the three-way catalytic converter (front).
- (d) Disconnect the support hook on the front exhaust pipe from the support bracket, and remove the front exhaust pipe and two gaskets.

3. REINSTALL FRONT EXHAUST PIPE (THREE-WAY CATALYTIC CONVERTER–REAR)

- (a) Install the support hook on the front exhaust pipe to the support bracket.
- (b) Place two new gaskets on the front and rear of the front exhaust pipe.
- (c) Temporarily install the two bolts and two new nuts holding the front exhaust pipe to the center exhaust pipe.
- (d) Using a 14 mm deep socket wrench, install the three new nuts holding the front exhaust pipe to the three-way catalytic converter (front).

Torque: 62 N-m (630 kgf-cm, 46 ft-lbf)

- (e) Tighten the two bolts and nuts holding the front exhaust pipe to the center exhaust pipe.

Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)

- (f) Install the clamp with the bolt.

4. REINSTALL RH ENGINE UNDER COVER