
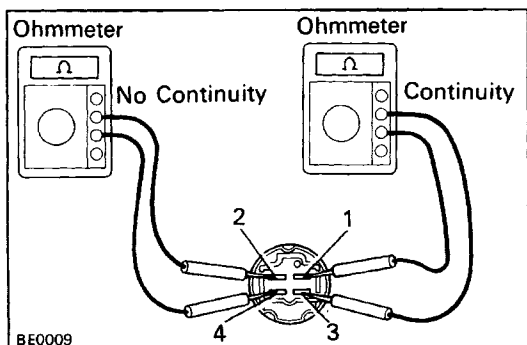


MFI and SFI Main Relay

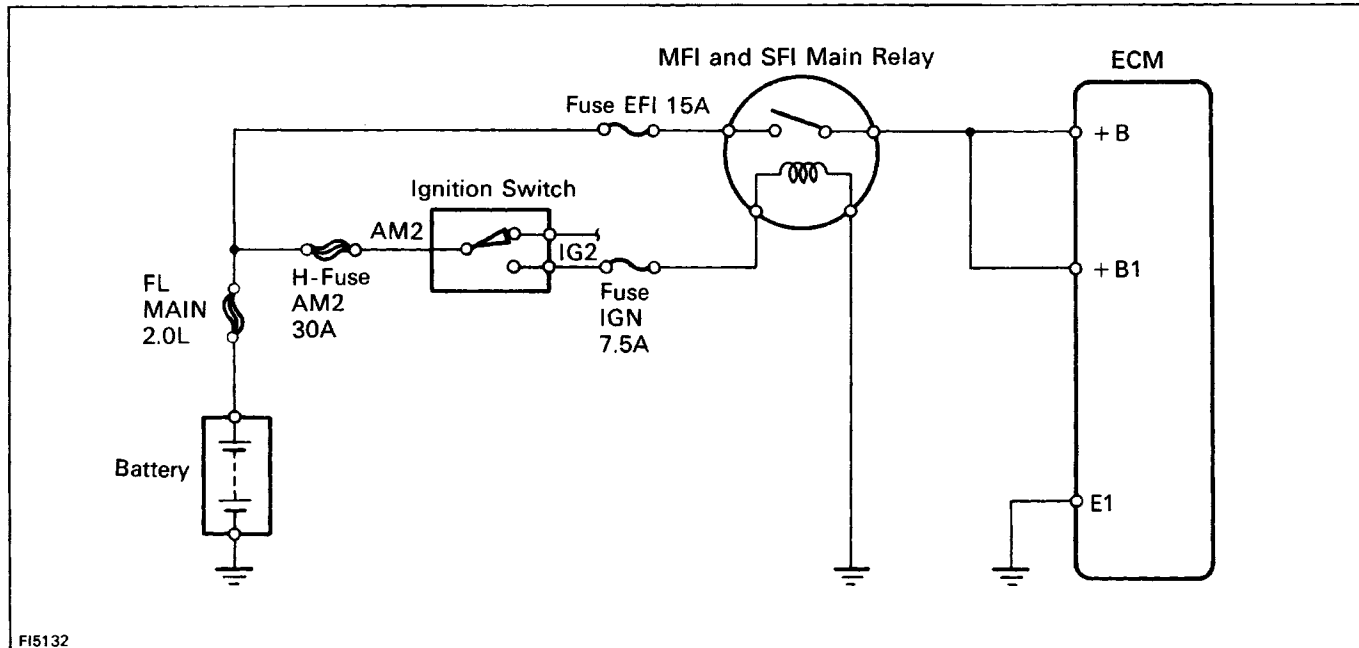


INSPECTION OF MFI AND SFI MAIN RELAY

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.


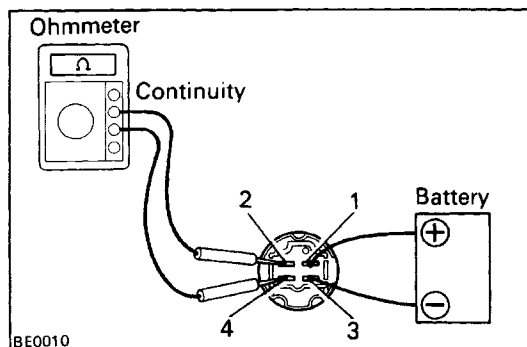


2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

Circuit Opening Relay (4A-FE and 5S-FE)

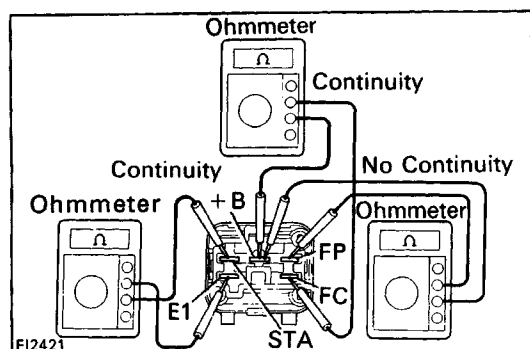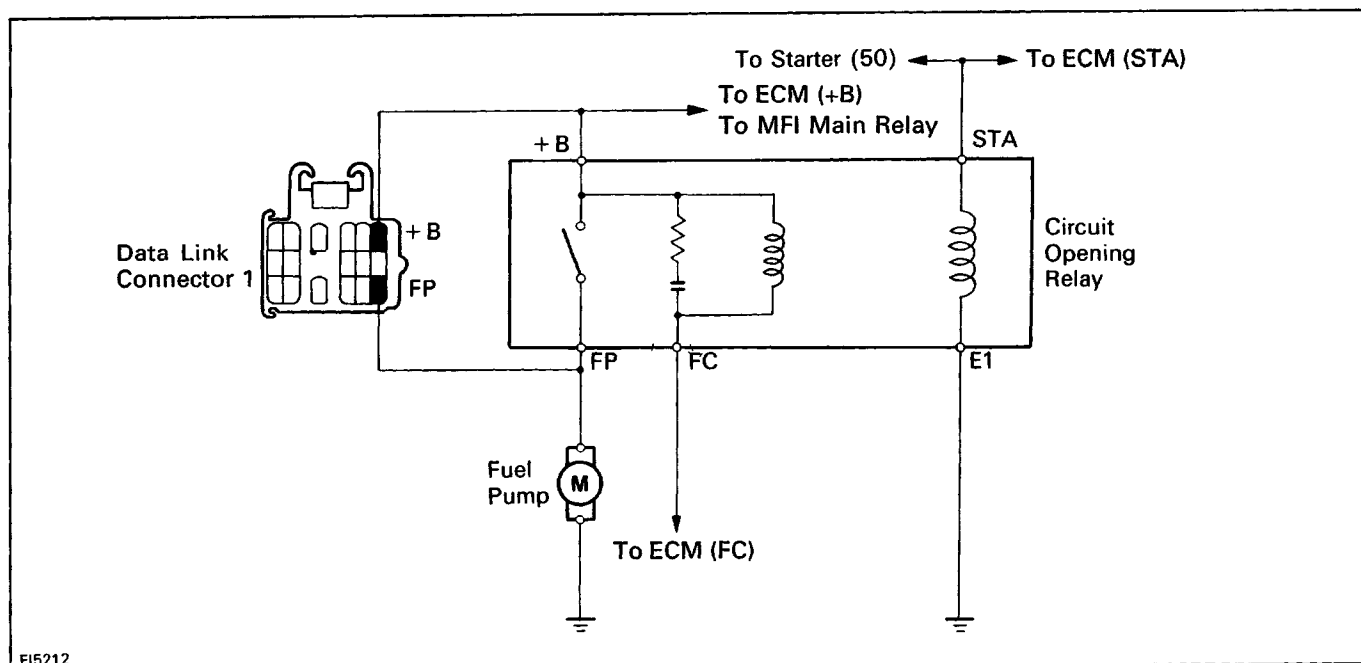


INSPECTION OF CIRCUIT OPENING RELAY

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals + B and FC.
- Check that there is no continuity between terminals + B and FP.

If continuity is not as specified, replace the relay.

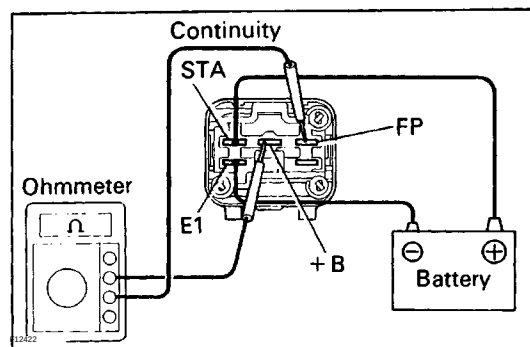


2. INSPECT RELAY OPERATION


- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals + B and FP.

If operation is not as specified, replace the relay.


Circuit Opening Relay (3S-GTE)

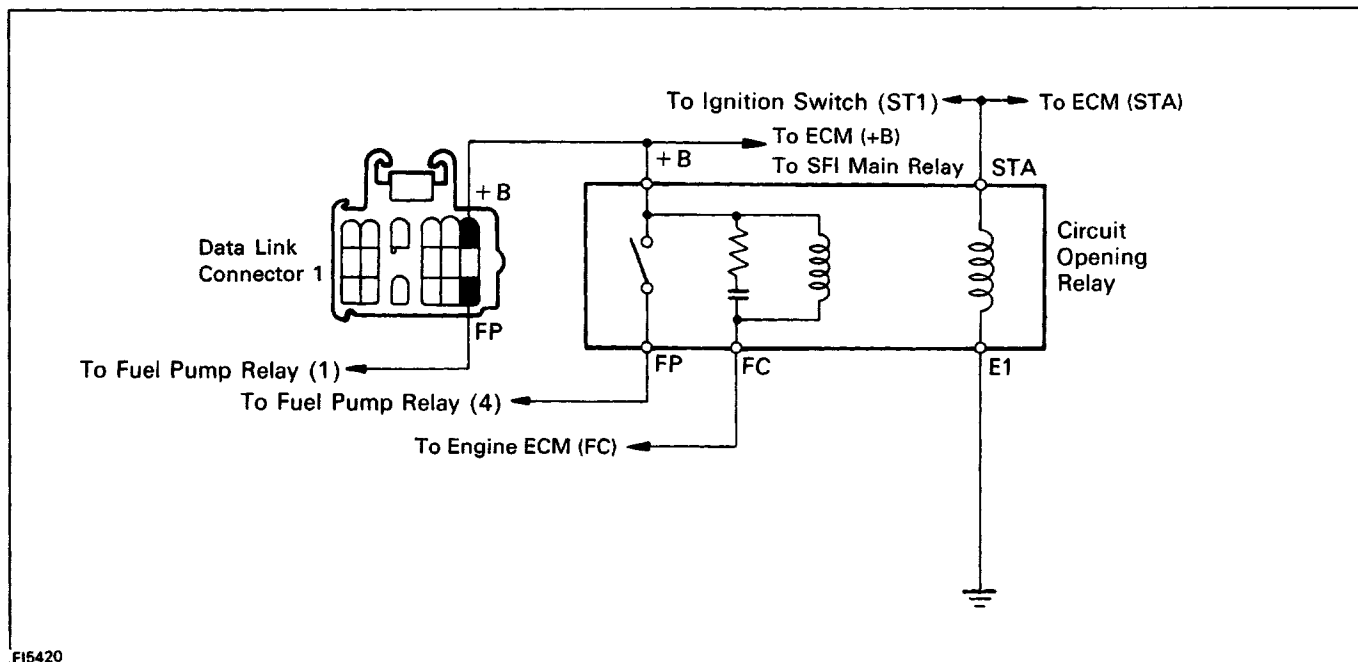

FI5420

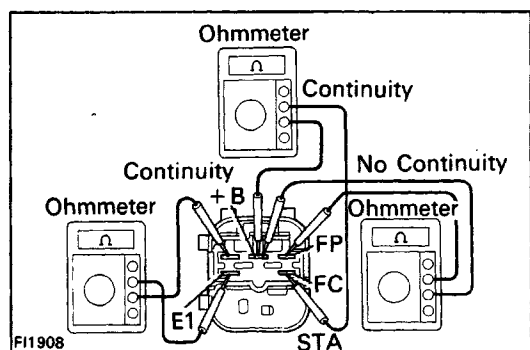

FI1908

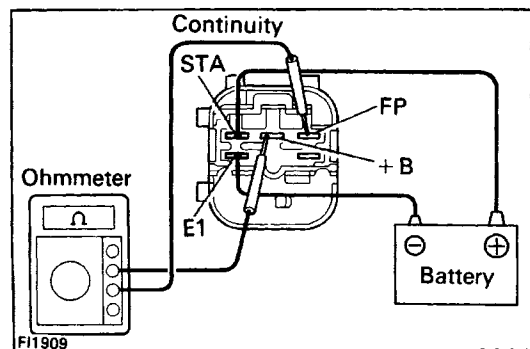

FI1909

INSPECTION OF CIRCUIT OPENING RELAY

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals + B and FC.
- Check that there is no continuity between terminals + B and FP.


If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION


- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals + B and FP.

If operation is not as specified, replace the relay.

Cold Start Injector Time Switch (3S-GTE)

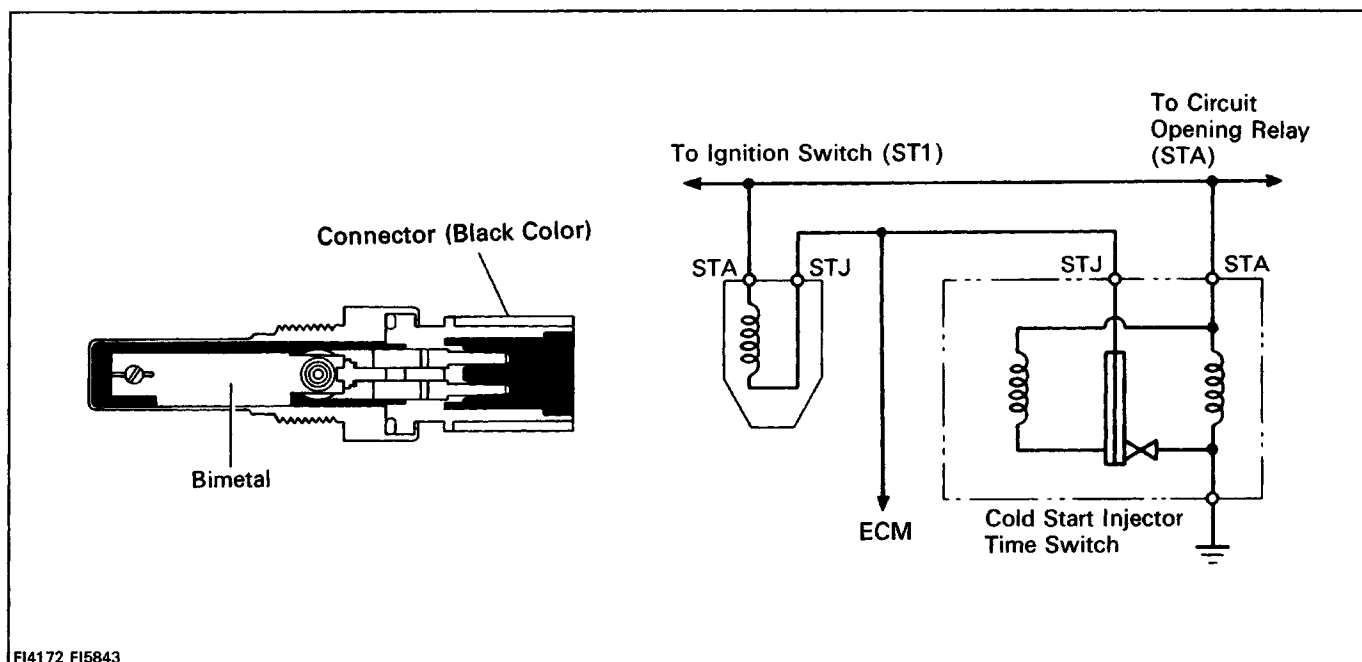

FI4172 FI5843

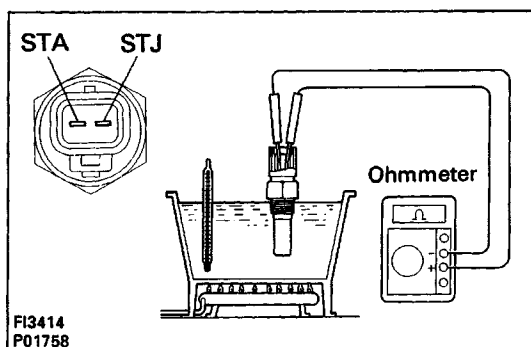

FI3414
P01758

INSPECTION OF COLD START INJECTOR TIME SWITCH

INSPECT RESISTANCE OF COLD START INJECTOR TIME SWITCH

Using an ohmmeter, measure the resistance between each terminal.

Resistance:

STA – STJ	30 – 50	below 10°C (50°F)
	70 – 90	above 25°C (77°F)
STA – Ground	30–90	

If the resistance is not as specified, replace the switch.