



Solenoid Resistor (3S-GTE)

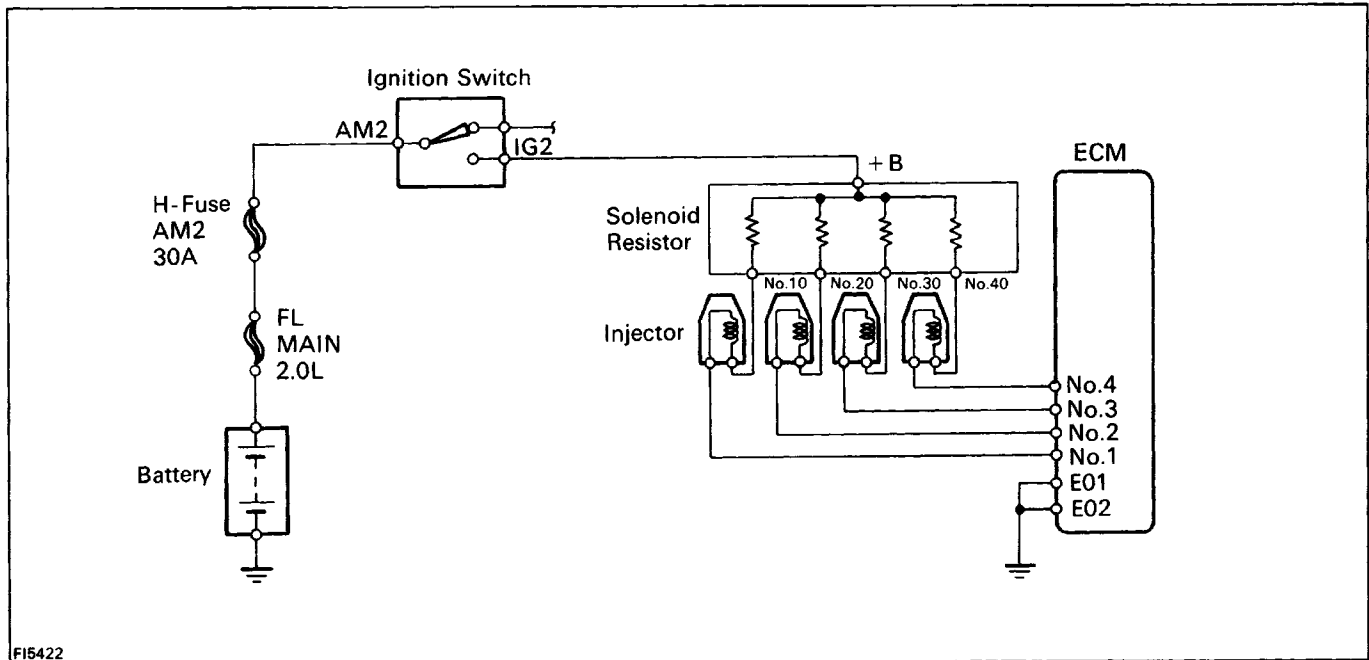

FI5422

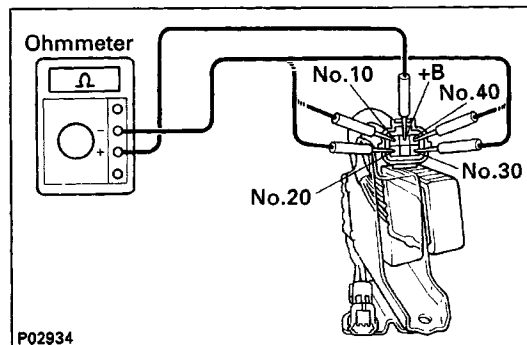

P02934

INSPECTION OF SOLENOID RESISTOR


INSPECT SOLENOID RESISTOR

Using an ohmmeter, measure the resistance between terminal + B and other terminals.


Resistance: 4 – 6

If the resistance is not as specified, replace the resistor.

Fuel Pump Relay and Resistor (3S-GTE)

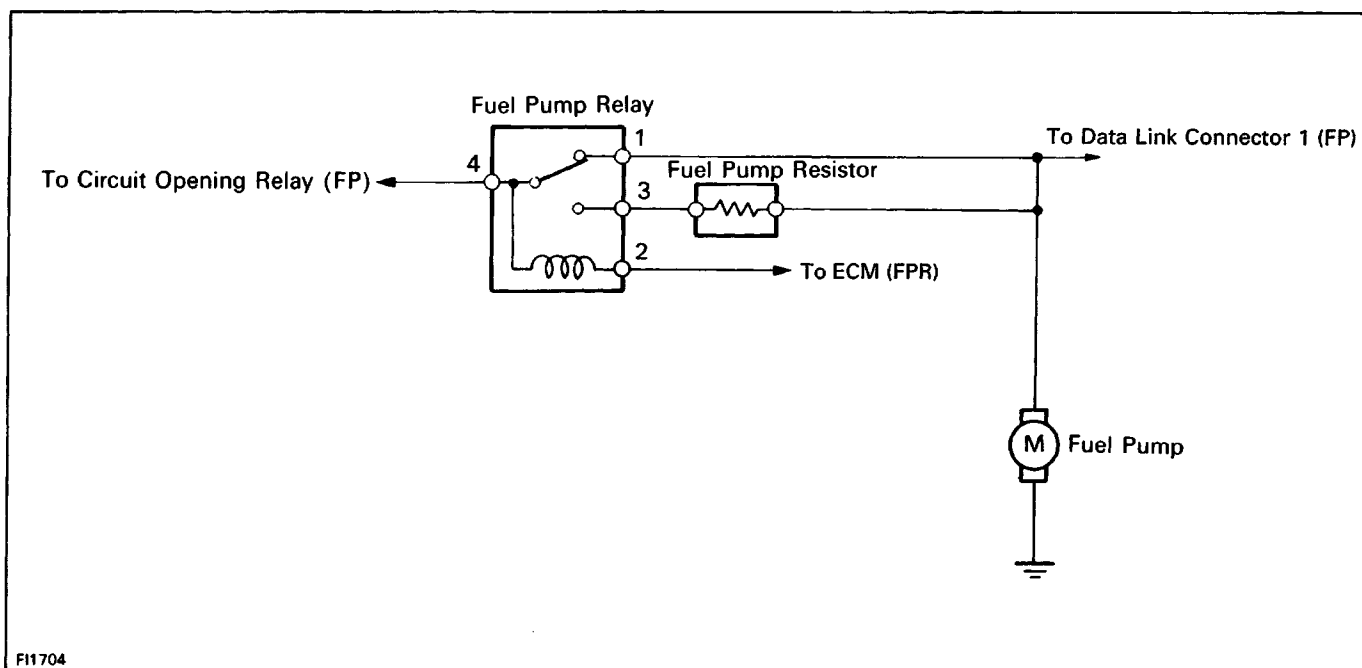

FI1704

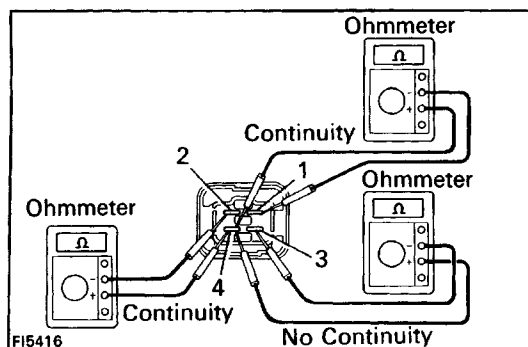

FI5416

INSPECTION OF FUEL PUMP RELAY AND RESISTOR

1. INSPECT FUEL PUMP RELAY

A. Inspect relay continuity


- Using an ohmmeter, check that there is continuity between terminals 2 and 4.
- Check that there is continuity between terminals 1 and 4.
- Check that there is no continuity between terminals 3 and 4.

If continuity is not as specified, replace the relay.


B. Inspect relay operation

- Apply battery voltage across terminals 2 and 4.
- Using an ohmmeter, check that there is no continuity between terminals 1 and 4.
- Check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

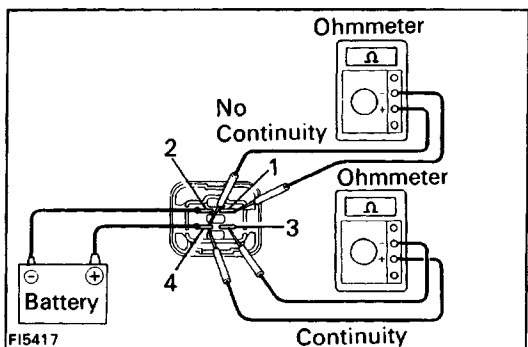

FI5417

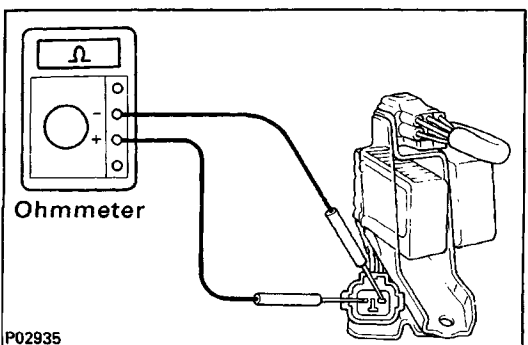

P02935


2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.


Resistance: Approx. 0.73

If the resistance is not as specified, replace the resistor.

Air Control Valve (ACV) (4A-FE)

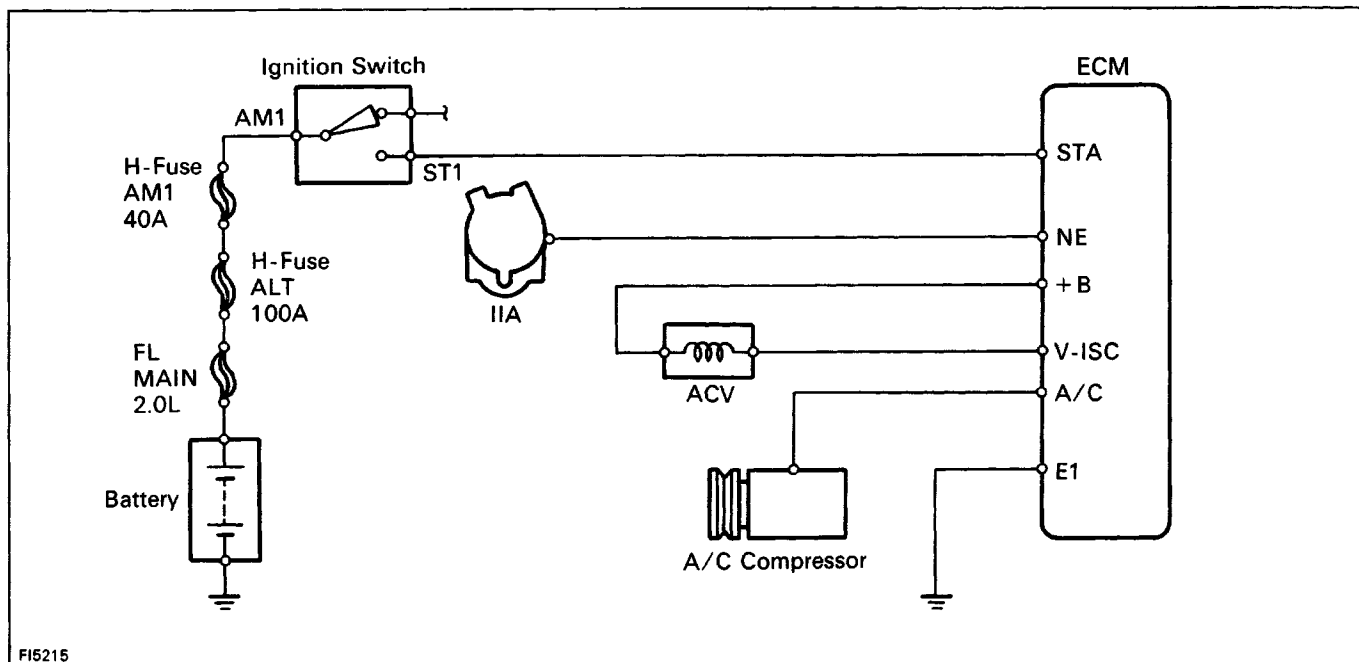

FI5215

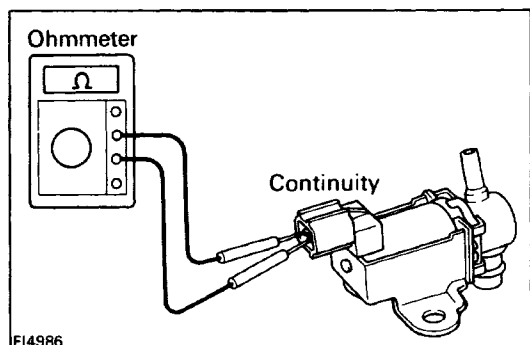

FI4986


INSPECTION OF ACV

1. INSPECT ACV FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the terminals.

Resistance (Cold): 27 – 33

If there is no continuity, replace the ACV.

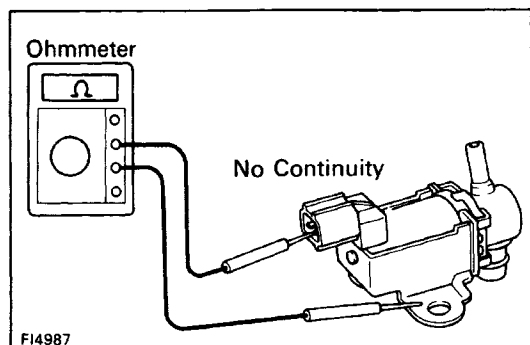


FI4987

2. INSPECT ACV FOR GROUND

Using an ohmmeter, check that there is no continuity between each terminal and the body.


If there is continuity, replace the ACV.

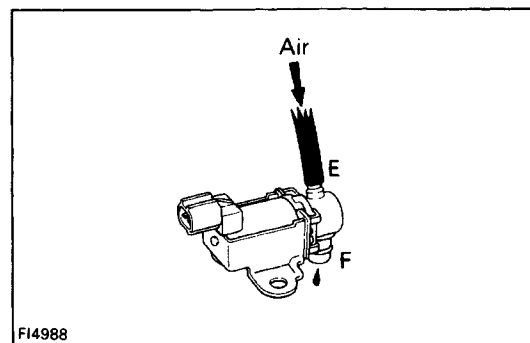

FI4988



3. INSPECT ACV OPERATION

- Check that the air does not flow from port E to port F.

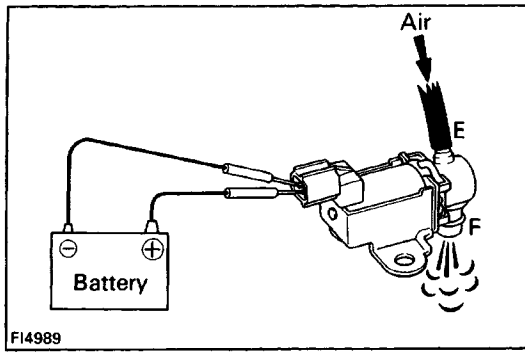

- (b) Apply battery voltage across the terminals.
- (c) Check that the air flows from port E to port F.
If operation is not as specified, replace the ACV.

T-VIS VSV (3S-GTE)

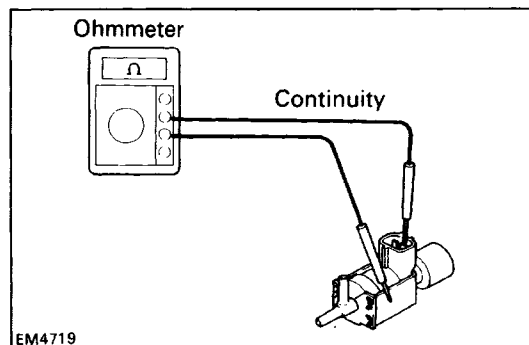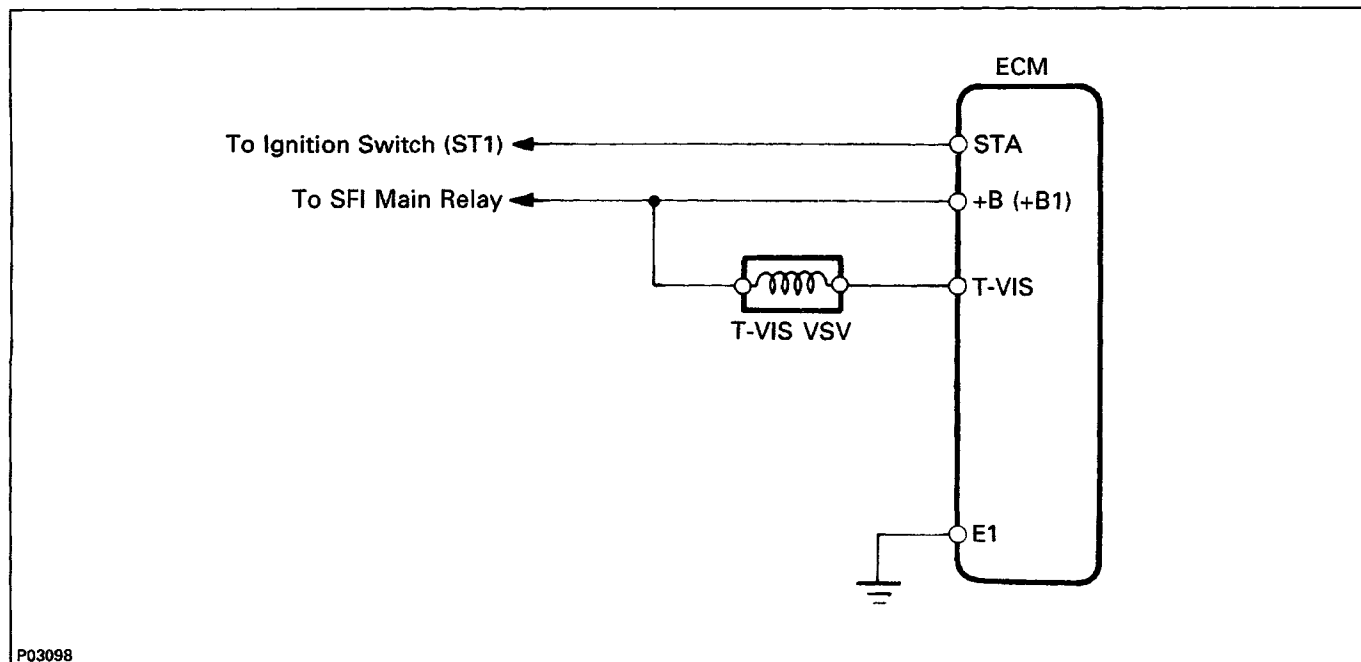


INSPECTION OF T-VIS VSV

1. INSPECT VSV FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the terminals.

Resistance (Cold): 33 – 39


If there is no continuity, replace the VSV.

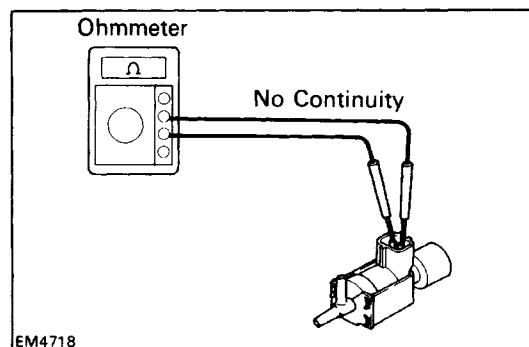

2. INSPECT VSV FOR GROUND

Using an ohmmeter, check that there is no continuity between each terminal and the body.

If there is continuity, replace the VSV.

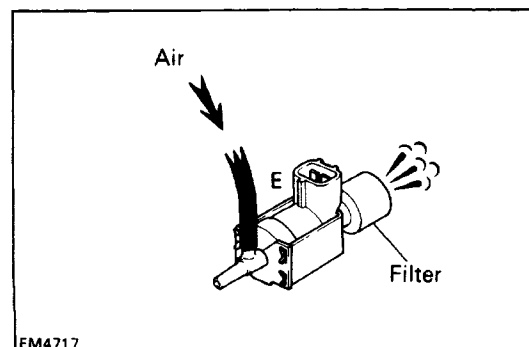

3. INSPECT VSV OPERATION

(a) Check that the air flows from port E to the filter.