
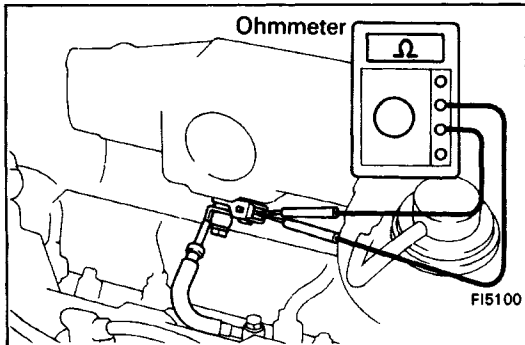


Cold Start Injector (3S-GTE)

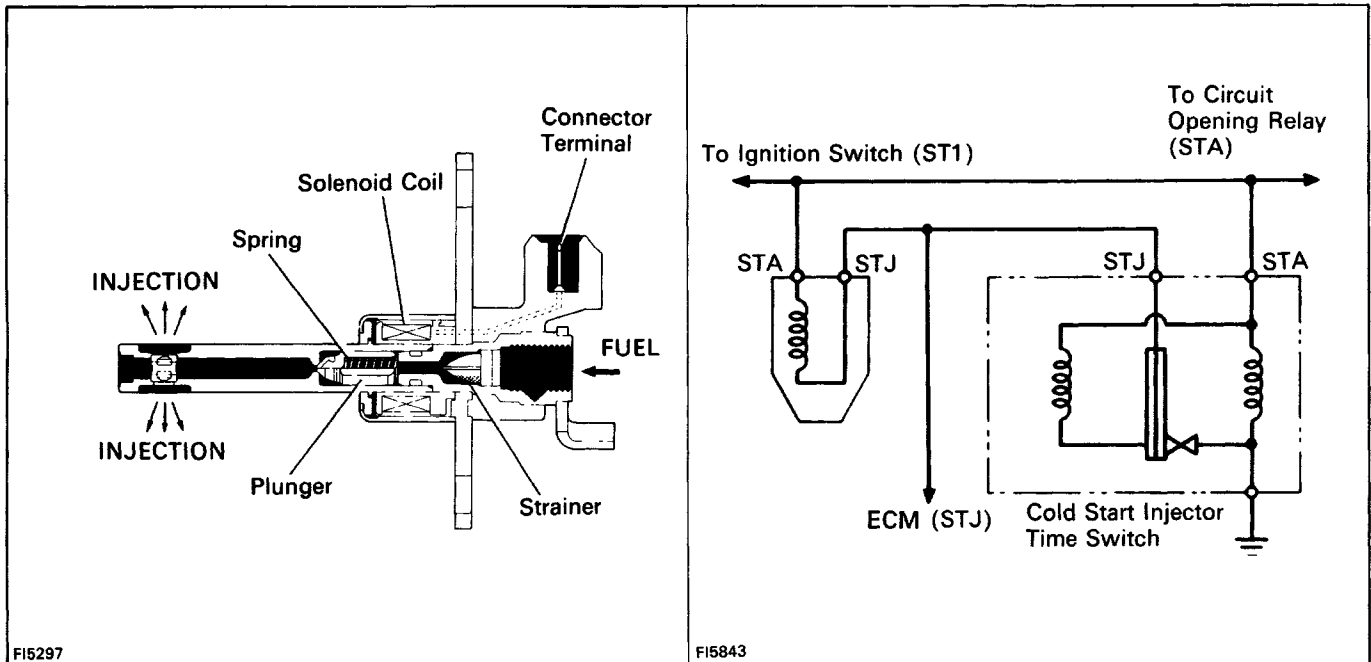

ON-VEHICLE INSPECTION

INSPECT RESISTANCE OF COLD START INJECTOR

- Remove the throttle body.
(See steps 1 to 8, 10 and 11 on pages FI-194 and 195)
- Disconnect the cold start injector connector.
- Using an ohmmeter, measure the resistance between the terminals.

Resistance: 2 – 4

If the resistance is not as specified, replace the cold start injector.

- Reconnect the cold start injector connector.
- Reinstall the throttle body.
(See steps 2, 3 and 5 to 12 on pages FI-197 and 198)

REMOVAL OF COLD START INJECTOR

1. REMOVE THROTTLE BODY

(See steps 1 to 8, 10 and 11 on pages FI-173 and 174)

2. DISCONNECT COLD START INJECTOR CONNECTOR

3. REMOVE COLD START INJECTOR PIPE

Remove the two union bolts and four gaskets and injector pipe.

HINT:

- Put a suitable container or shop towel under the injector pipe.
- Slowly loosen the union bolt.

