



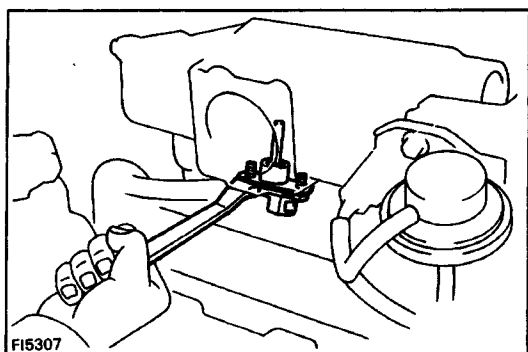

4. REMOVE COLD START INJECTOR

Remove the two bolts, cold start injector and gasket.

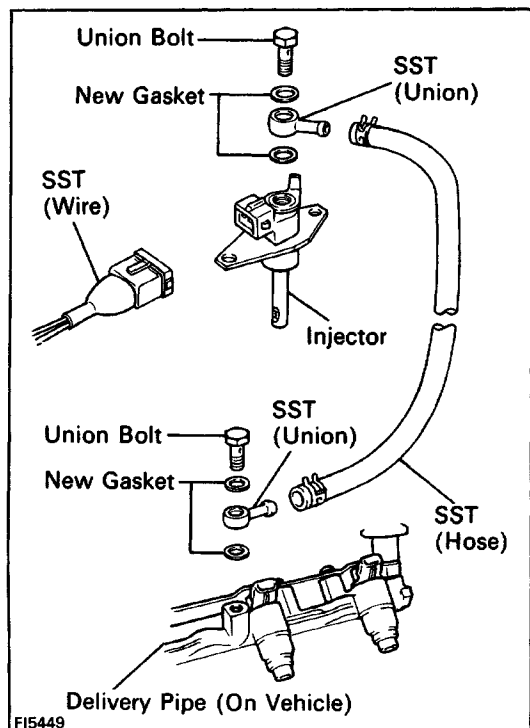

INSPECTION OF COLD START INJECTOR

1. INSPECT INJECTION OF COLD START INJECTOR

CAUTION: Keep injector clear of sparks during the test.

- (a) Install SST (two unions) to the injector and delivery pipe with four new gaskets and the union bolts.

SST 09268-41045 (09268-41080)

Torque: 12 N·m (125 kgf·cm, 9 ft·lbf)


- (b) Connect SST (hose) to the unions.

SST 09268-41045

- (c) Connect SST (wire) to the injector.

SST 09842-30050

- (d) Put a container under the injector.

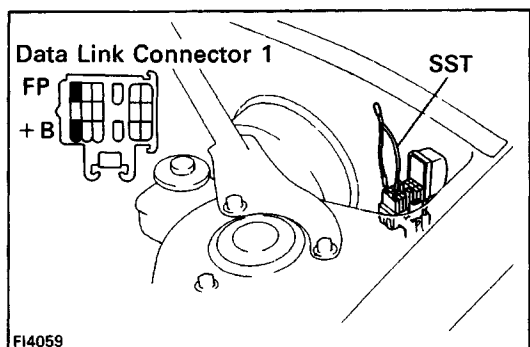


- (e) Using SST, connect terminals +B and FP of the data link connector 1.

SST 09843-18020

- (f) Reconnect the battery negative (-) cable.

- (g) Turn the ignition switch ON.


NOTICE: Do not start the engine.

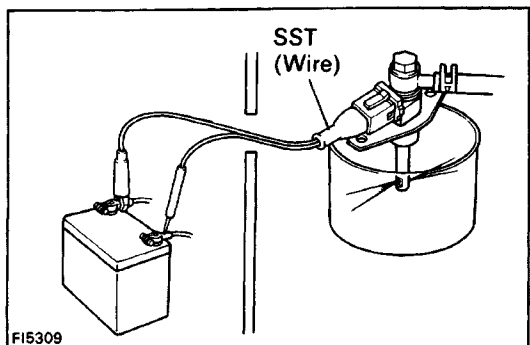

- (h) Connect the test probes of the SST (wire) to the battery, and check that the fuel spray is as shown.

SST 09842-30050

NOTICE: Perform this check within the shortest possible time.

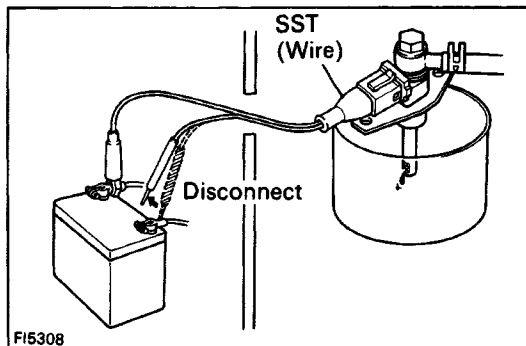

2. INSPECT LEAKAGE

- (a) In the condition above, disconnect the test probes of SST (wire) from the battery and check for fuel leakage from the injector.

SST 09842-30050

Fuel drop: One drop or less per minute

- (b) Disconnect the battery negative (-) cable.
(c) Remove SST.


SST 09268-41045, 09842-30050 and 09843-18020

INSTALLATION OF COLD START INJECTOR

1. INSTALL COLD START INJECTOR

Install a new gasket and the injector with the two bolts.


Torque: 5.9 N-m (60 kgf-cm, 52 in.-lbf)

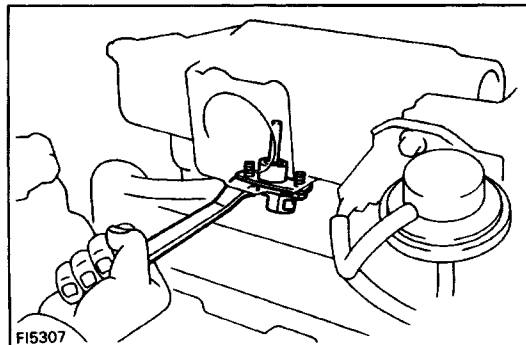

2. INSTALL COLD START INJECTOR PIPE

Install the injector pipe with four new gaskets and the two union bolts.

Torque: 12 N-m (125 kgf-cm, 9 ft-lbf)

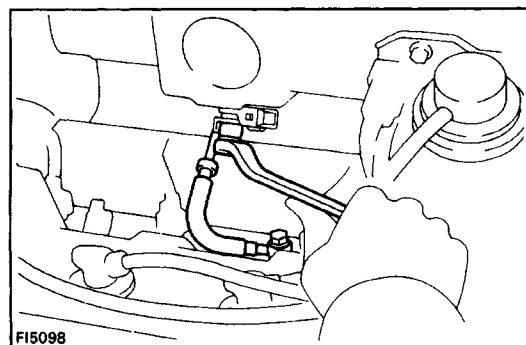

3. CONNECT COLD START INJECTOR CONNECTOR

4. INSTALL THROTTLE BODY

(See steps 2, 3 and 5 to 12 on pages [FI-197](#) and 198)