


FROM POWER SOURCE SYSTEM (SEE PAGE 46)

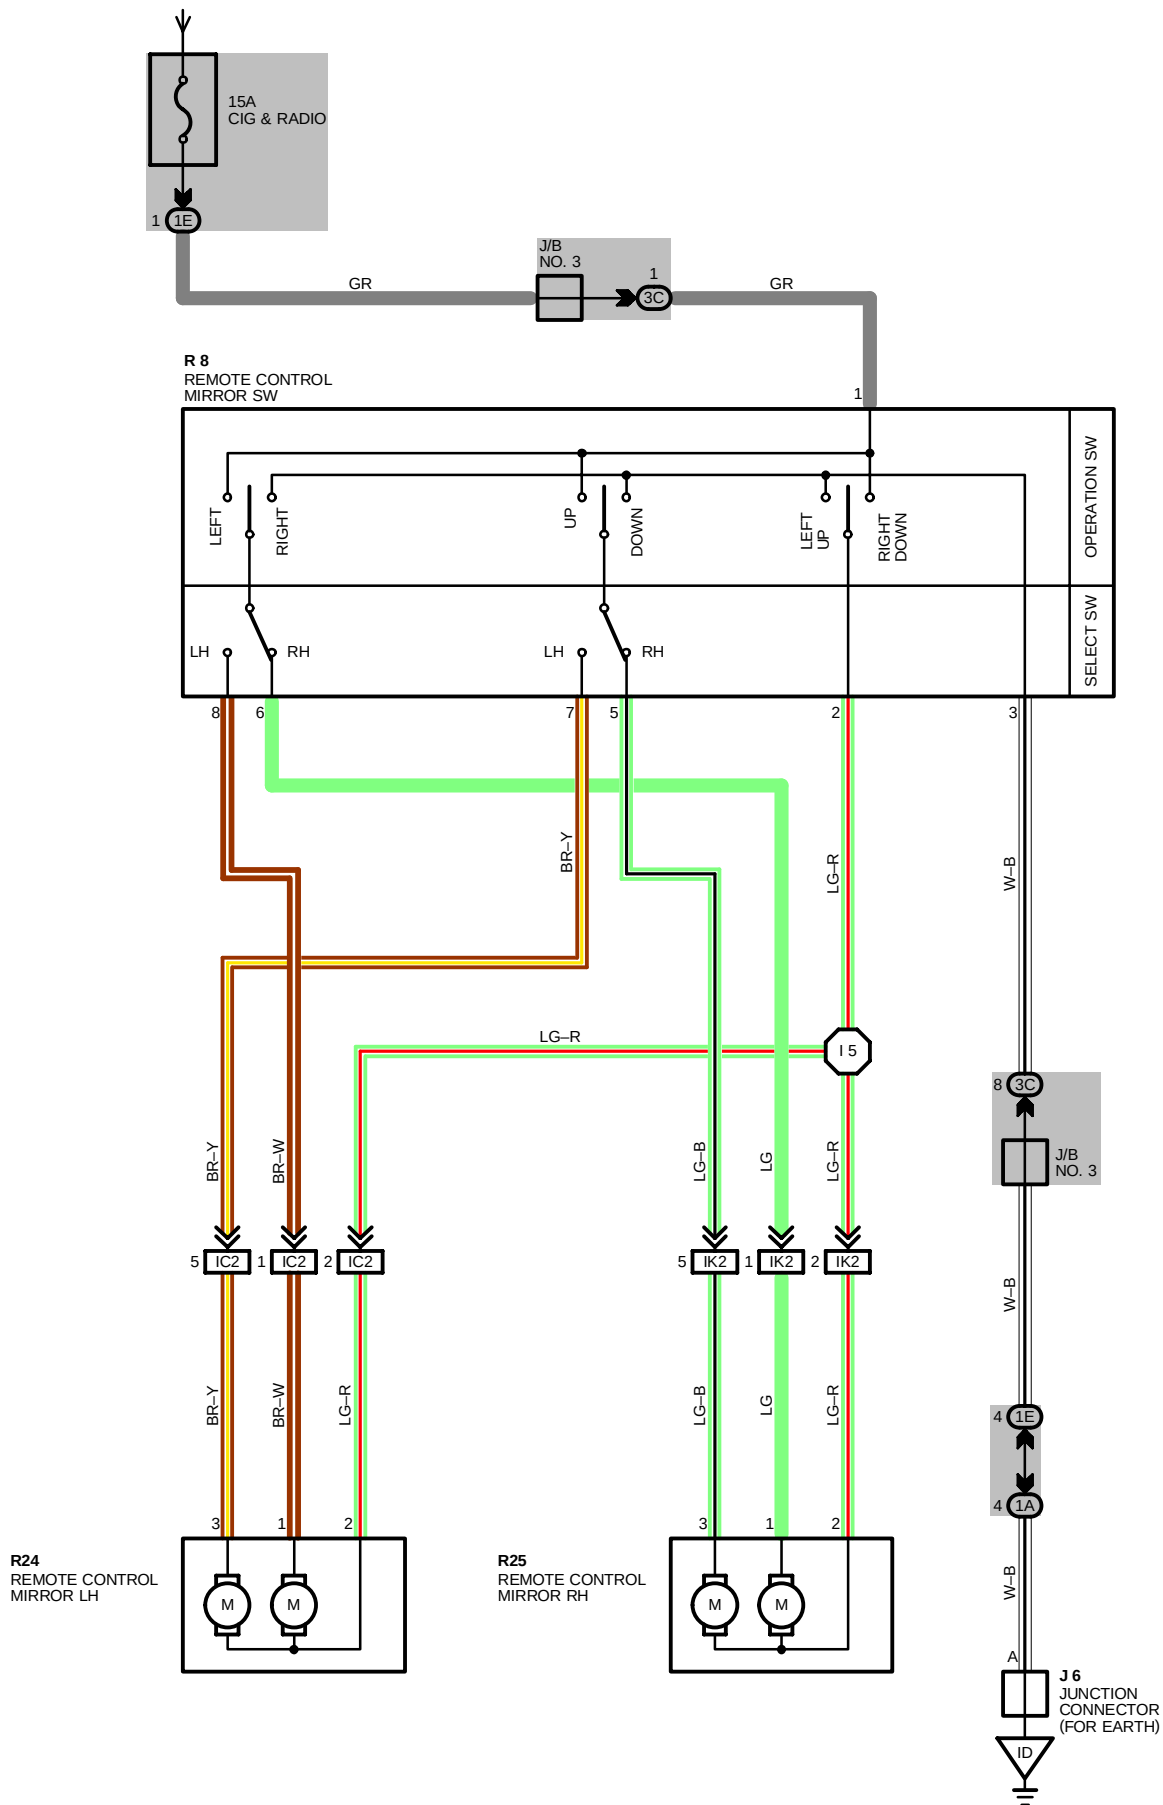

## SERVICE HINTS

### R 8 REMOTE CONTROL MIRROR SW

- 1-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 2-3 : CONTINUITY WITH OPERATION SW AT **UP** OR **LEFT** POSITION
- 1-2 : CONTINUITY WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

### ○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| J 6  | 26       | R24  | 27       |      |          |
| R 8  | 26       | R25  | 27       |      |          |

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|------------------------------------------------------|
| 1A   | 18       | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)            |
| 1E   |          |                                                      |
| 3C   | 22       | COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)   |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|------------------------------------------------------------|
| IC2  | 30       | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)         |
| IK2  | 32       | FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)        |


### ▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| ID   | 30       | LEFT KICK PANEL        |

### ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 5  | 32       | COWL WIRE                       |      |          |                                 |

J 6

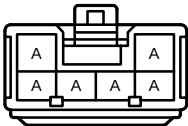

(HINT : SEE PAGE 7)

R 8



R24, R25

