



COMBINATION METER

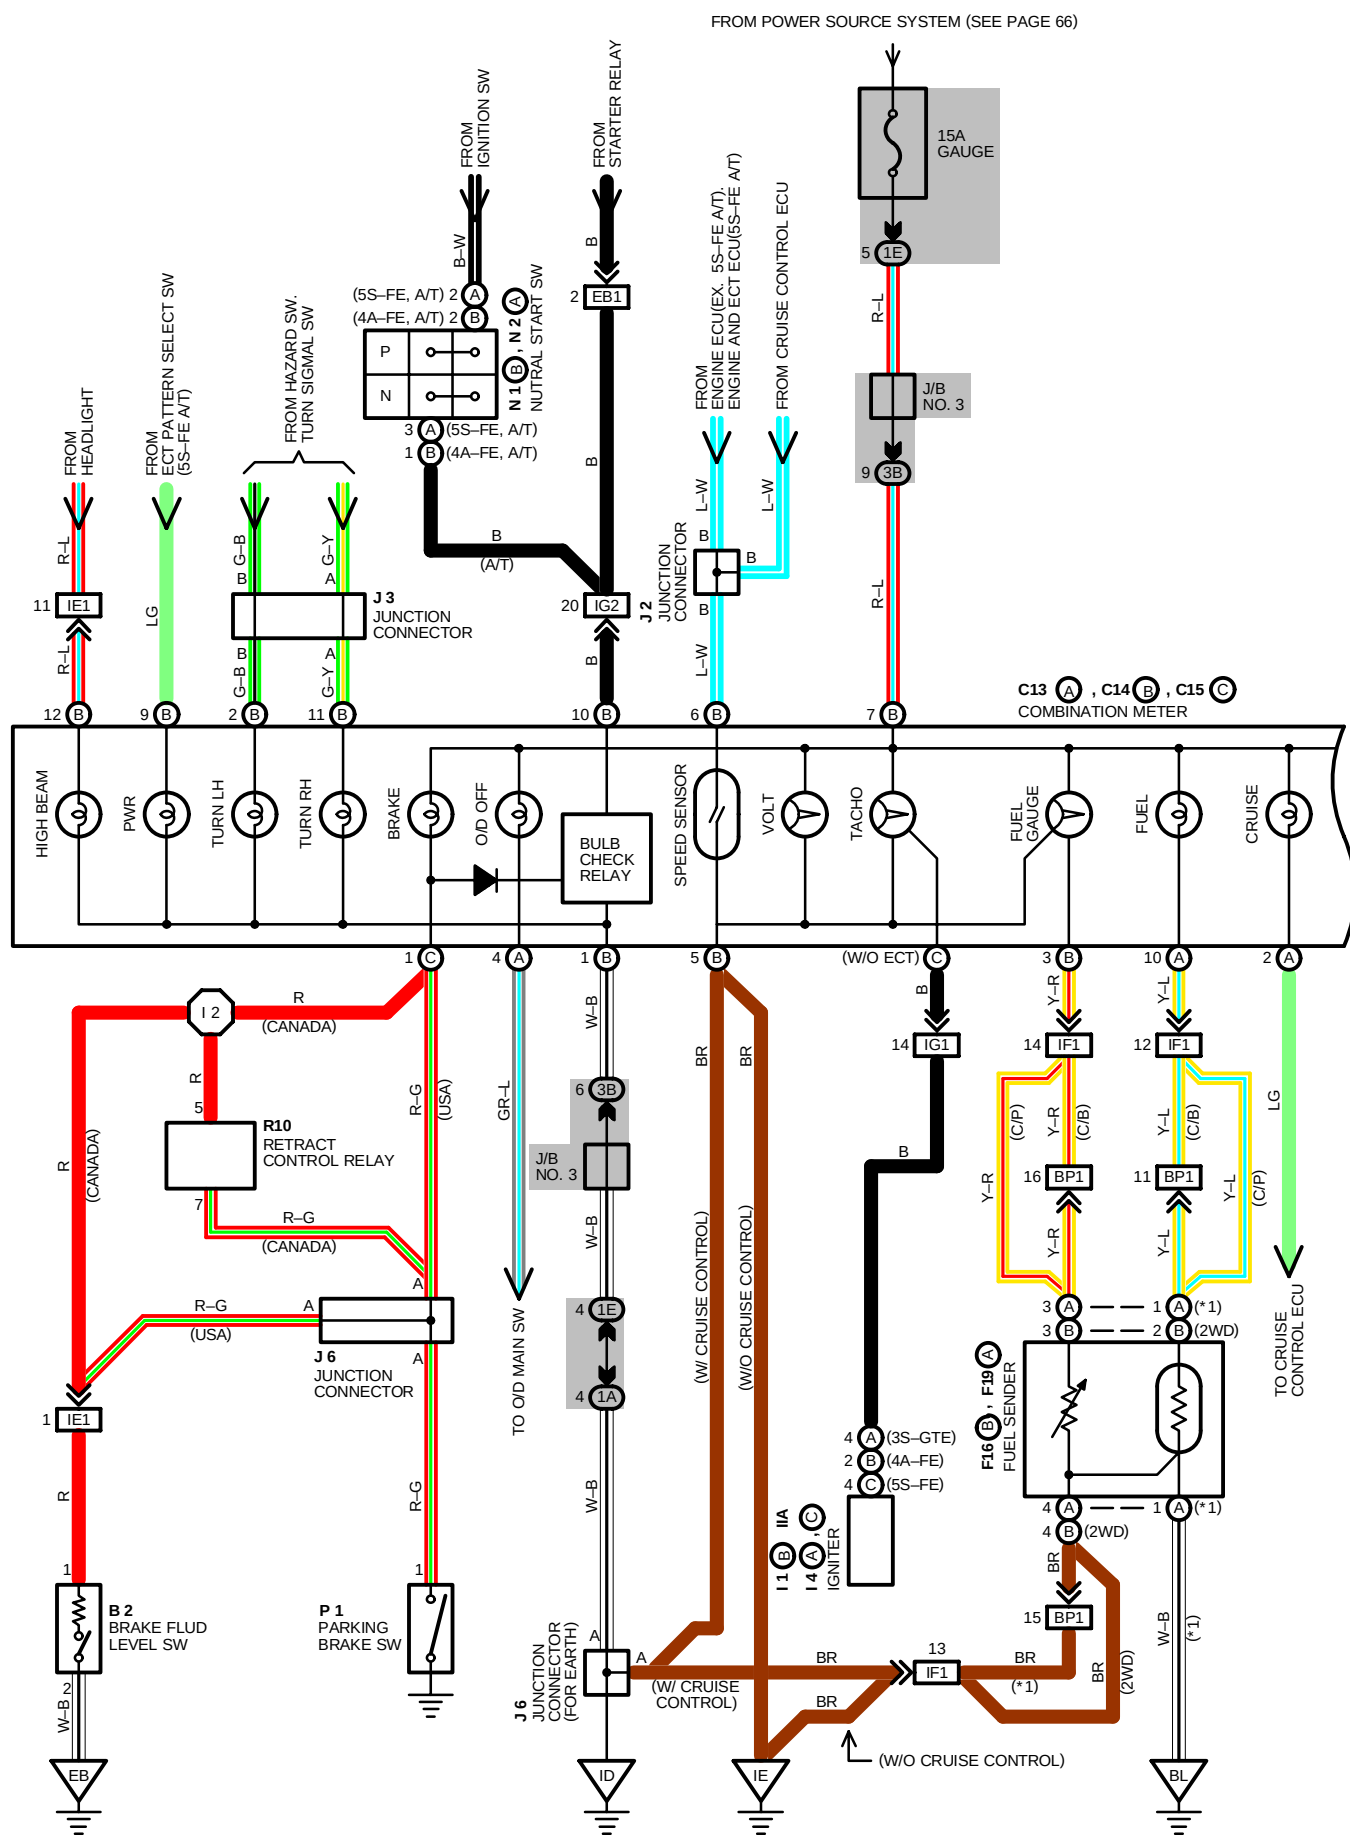

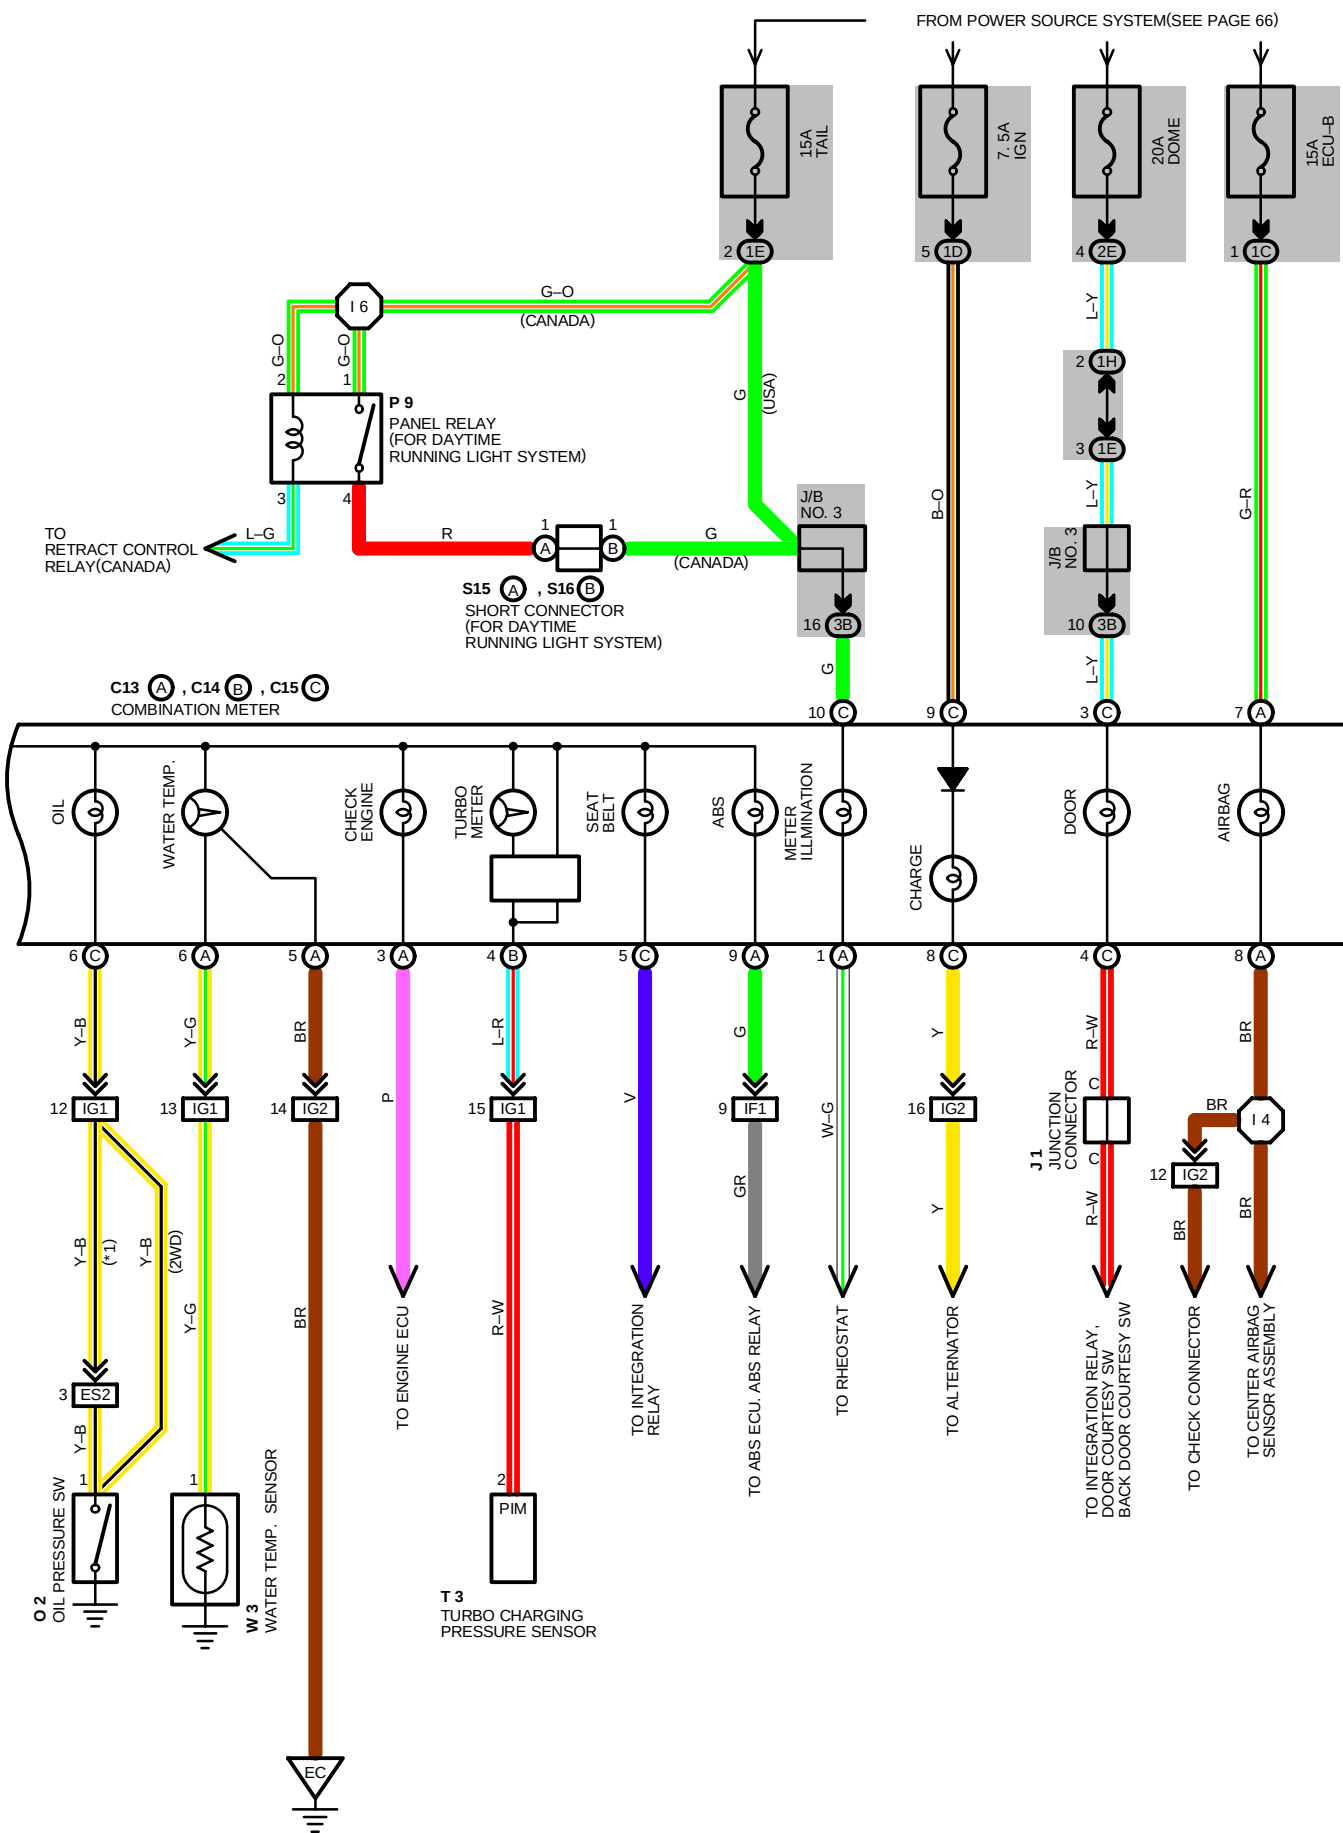

COMBINATION METER

SERVICE HINTS

B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C13(A), C14(B), C15(C) COMBINATION METER

(A) 7, (C) 3-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 7, (C) 9-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A) 5, (B) 1, (B) 5-GROUND : ALWAYS CONTINUITY

F16, F19 FUEL SENDER

3-4 : APPROX. 3 (WITH FUEL FULL

APPROX. 110.0 (WITH FUEL EMPTY

O 2 OIL PRESSURE SW

1-GROUND : CLOSED WITH OIL PRESSURE BELOW 0.2 KG/CM² (2.84 SPI, 19.61 KPA)

P 1 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

W 3 WATER TEMP. SENDER

1-GROUND : APPROX. 226 (AT 50°C (122°F)

APPROX. 26.4 (AT 115°C (239°F)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 2	28 (3S-GTE), 30 (5S-FE)	I 4	C	30 (5S-FE)	P 1
	31 (4S-FE)	J 1		33	P 9
C13	A	32	J 2	33	R
C14	B	32	J 3	33	0
C15	C	32	J 6	33	S15
F16	B	34 (L/B), 35 (C/P)	N 1	B	A
F19	A	34 (L/B)	N 2	A	S16
I 1	B	31 (4A-FE)	O 2	29 (3S-GTE), 30 (5S-FE)	T 3
I 4	A	29 (3S-GTE)		31 (4A-FE)	W 3

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C		
1D		
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	21 (ALL-TRAC/4WD)	
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	38 (3S-GTE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
	40 (5S-FE)	
	42 (4A-FE)	
ES2	38 (3S-GTE)	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	44	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2		
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EC	38 (3S-GTE)	INTAKE MANIFOLD
	40 (5S-FE)	
	42 (4A-FE)	
ID	44	LEFT KICK PANEL
IE	44	INSTRUMENT PANEL BRACE LH
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	
	52 (CONVERTIBLE)	


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	46	COWL WIRE	I 6	46	COWL WIRE
I 4					


B 2 GRAY




C13 (A) BROWN



C14 (B)

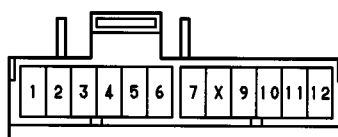

C15 (C) GRAY

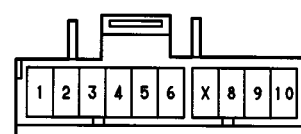

F16 DARK GRAY



F19




(4A-FE) I 1 (B) DARK GREEN




(3S-GT) I 4 (A) BLACK



(5S-FE) I 4 (C) BLACK

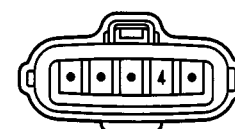


J 1




(HINT:SEE PAGE 7)

J 2, J 3




(HINT:SEE PAGE 7)

J 6

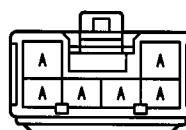


(HINT:SEE PAGE 7)

(2WD W/O ECT) N 1 (B) GRAY

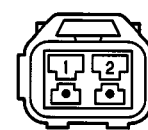

(2WD W/ ECT) N 2 (A) GRAY




O 2 BLACK



P 1 BLACK



P 9



R10




S15 (A) GRAY



S16 (B) GRAY



T 3 BLACK

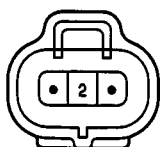

W 3 GRAY

