


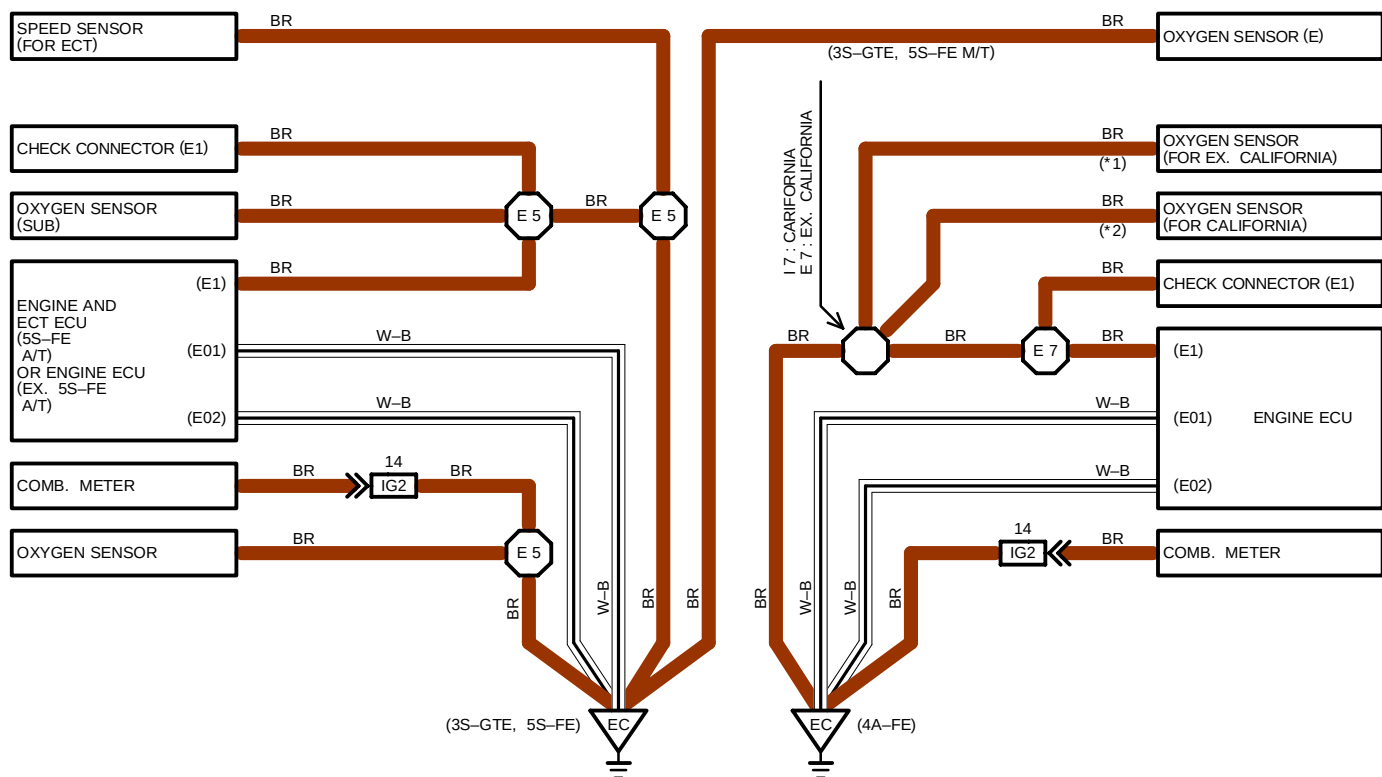


GROUND POINT

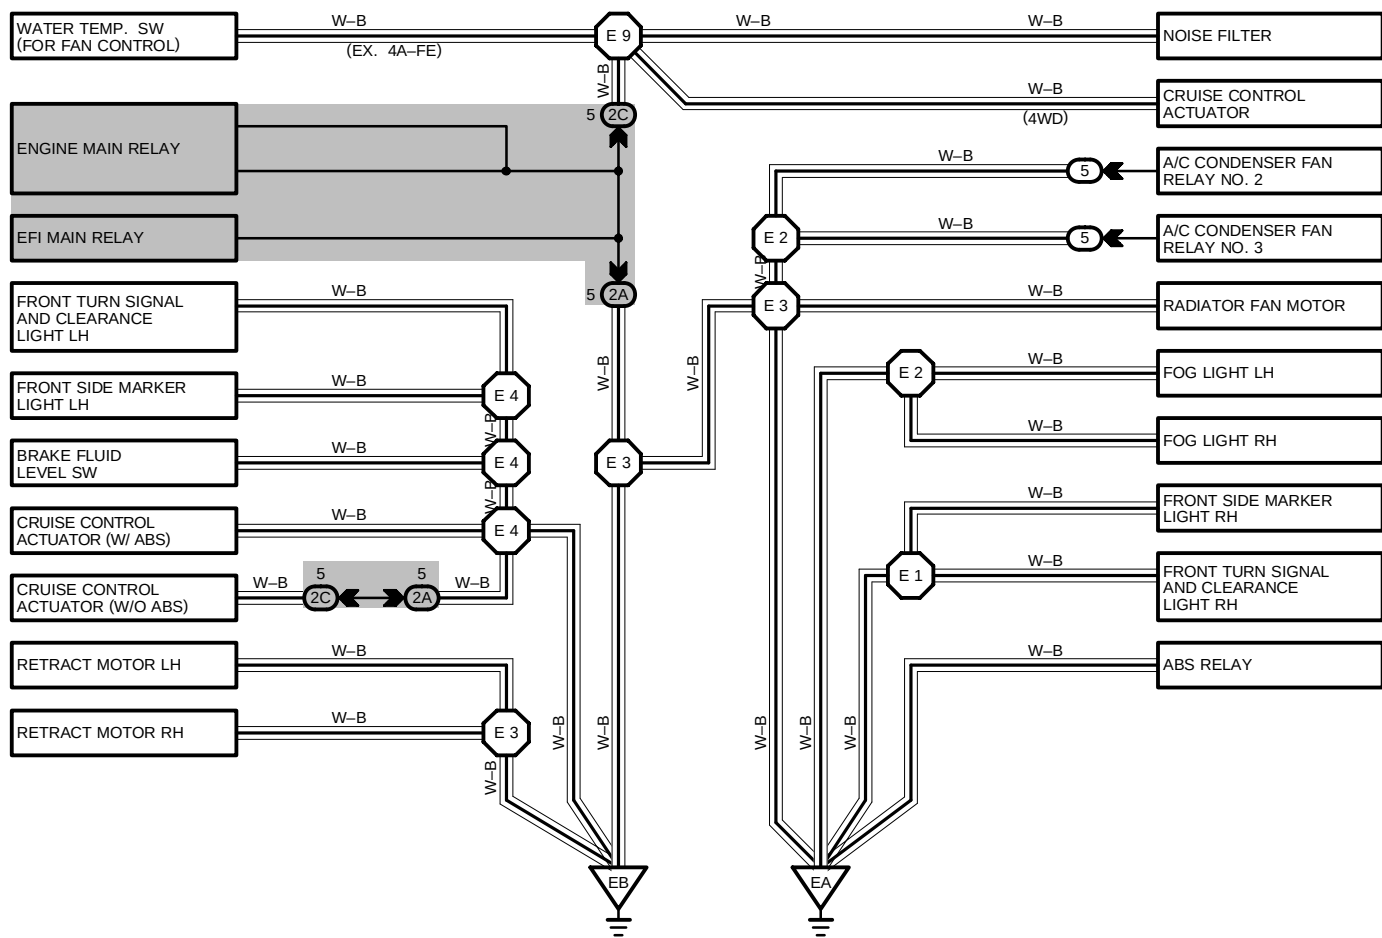

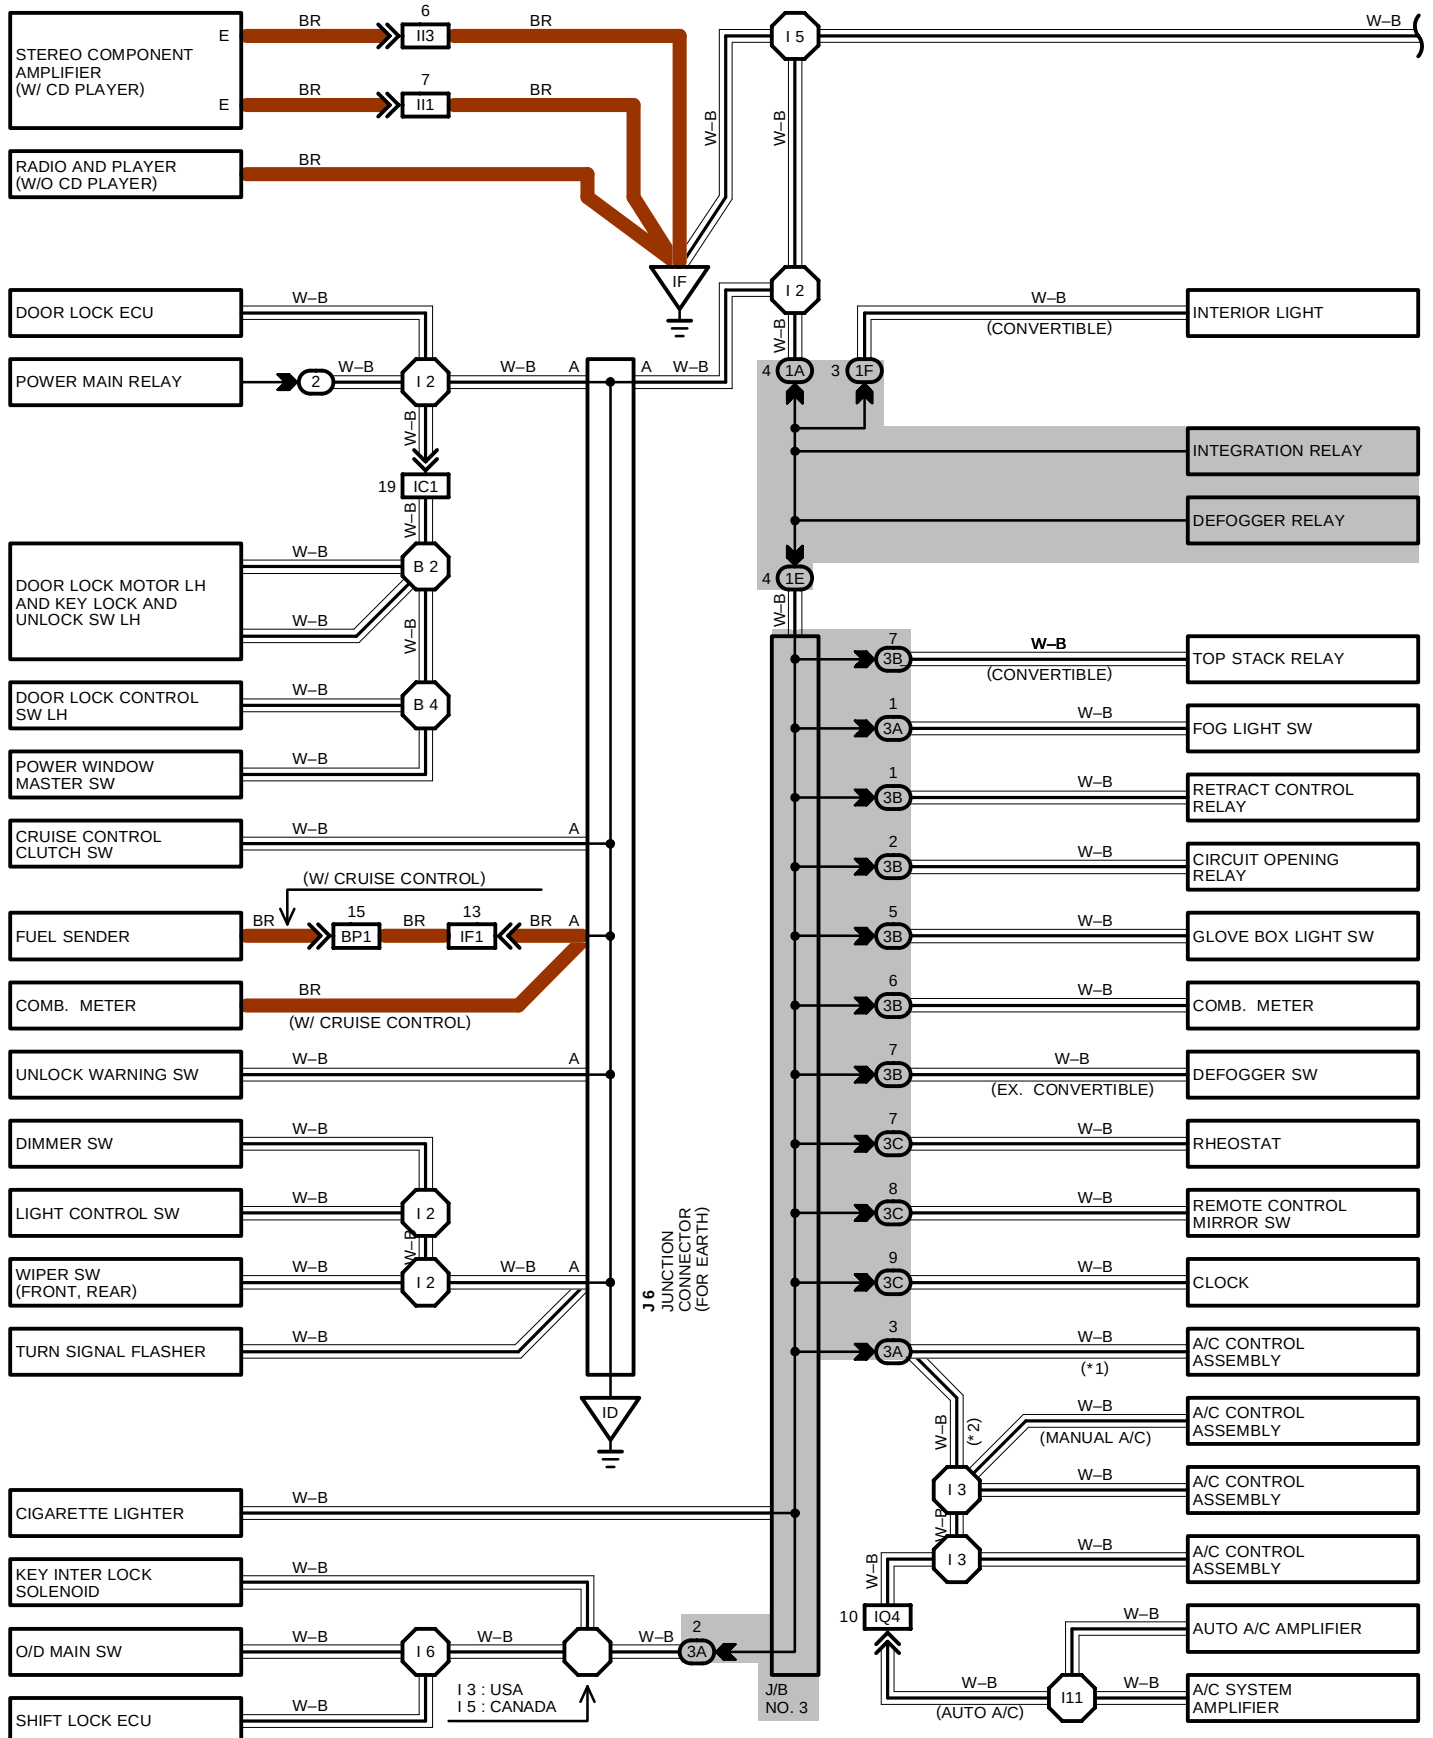



GROUND POINT

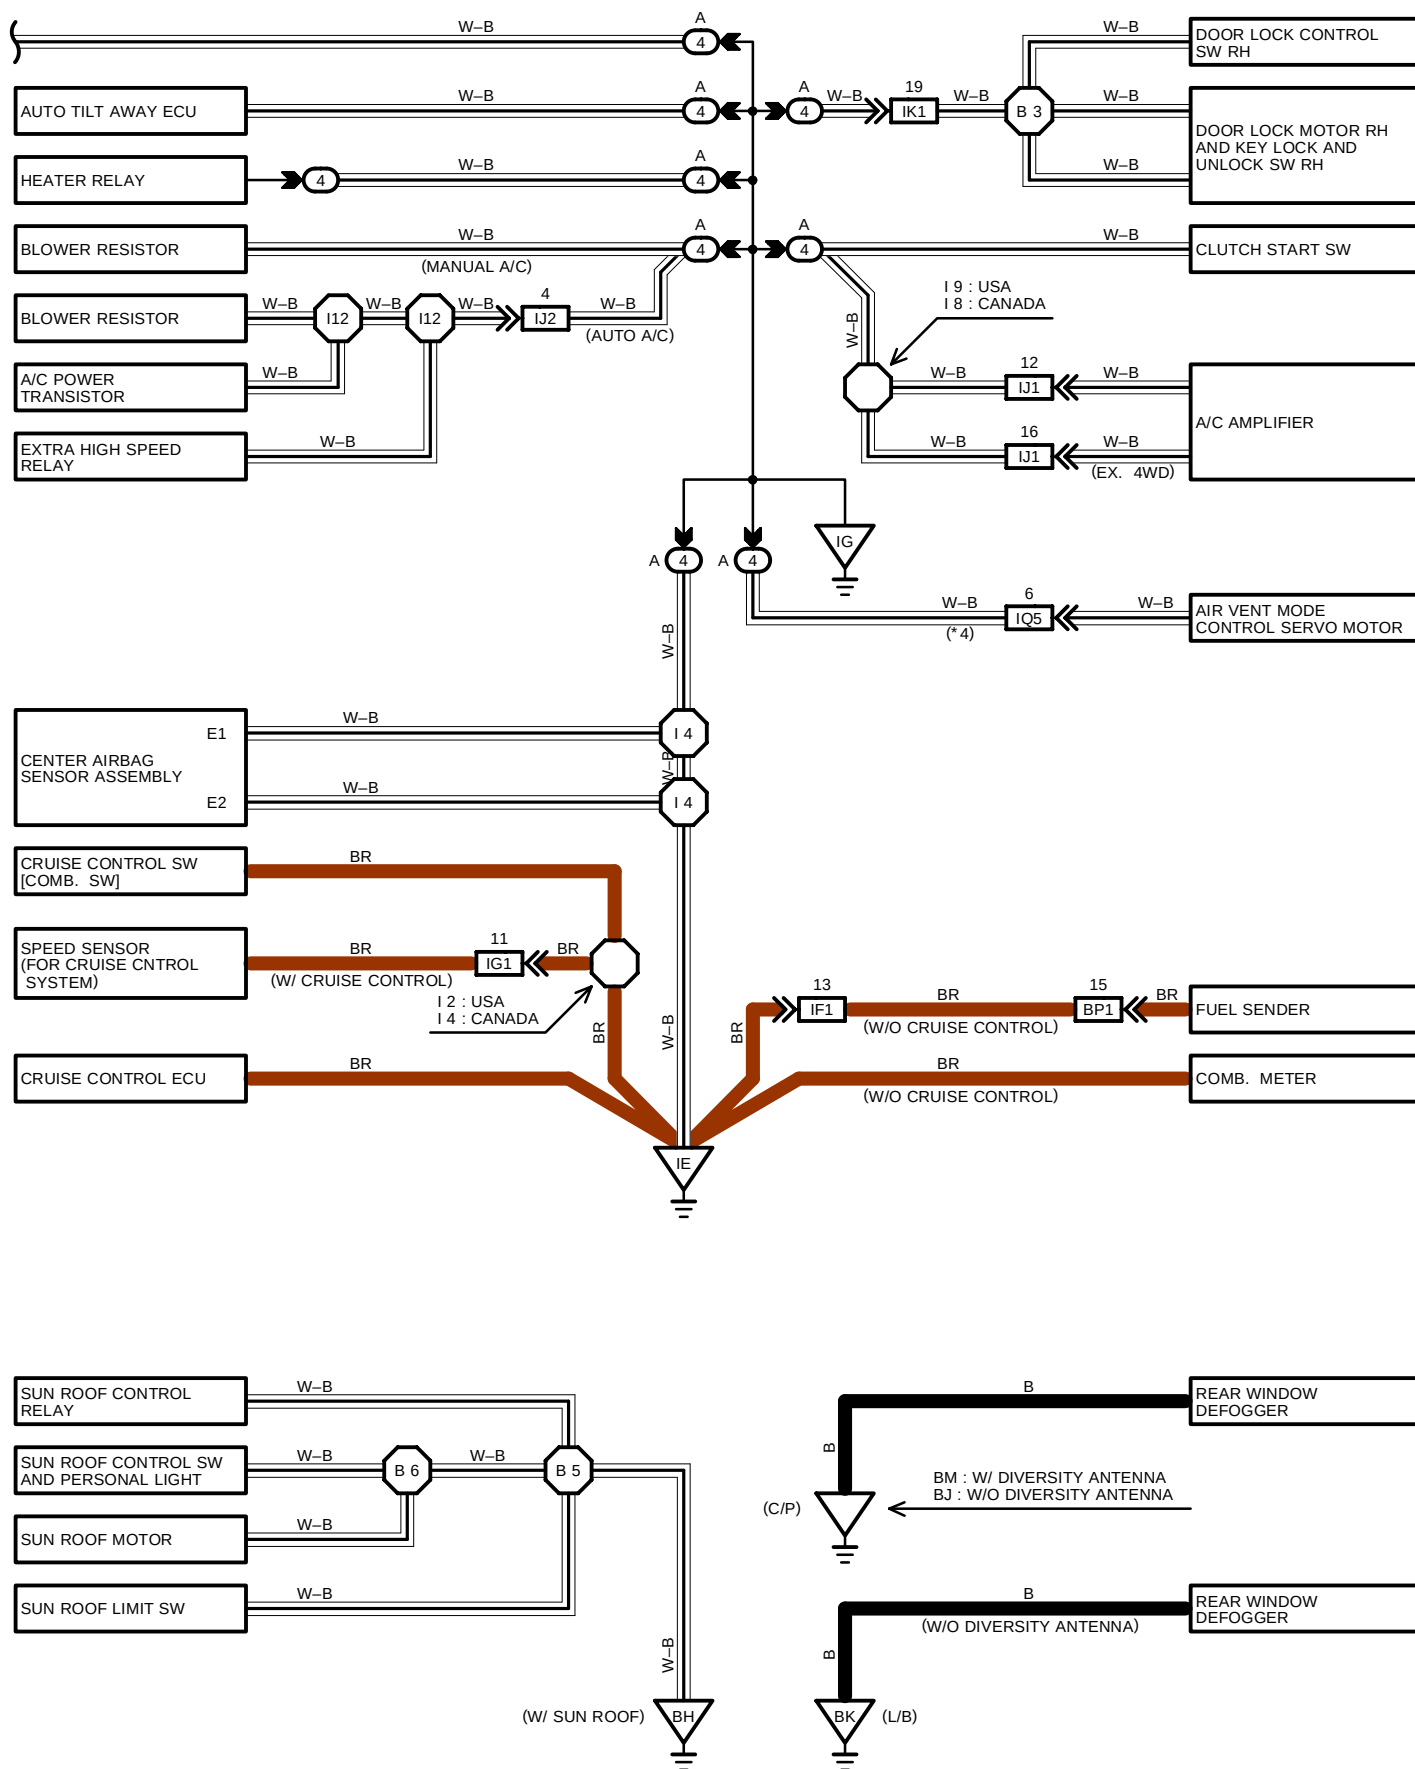

* 1 : EX. AUTO IR CONDITIONER
* 2 : AUTO AIR CONDITIONER

* 3 : PUSH TYPE OF BLOWER CONTROL SW
* 4 : DIAL TYPE OF BLOWER CONTROL SW

* 5 : ALL-TRAC/4WD
* 6 : 2WD

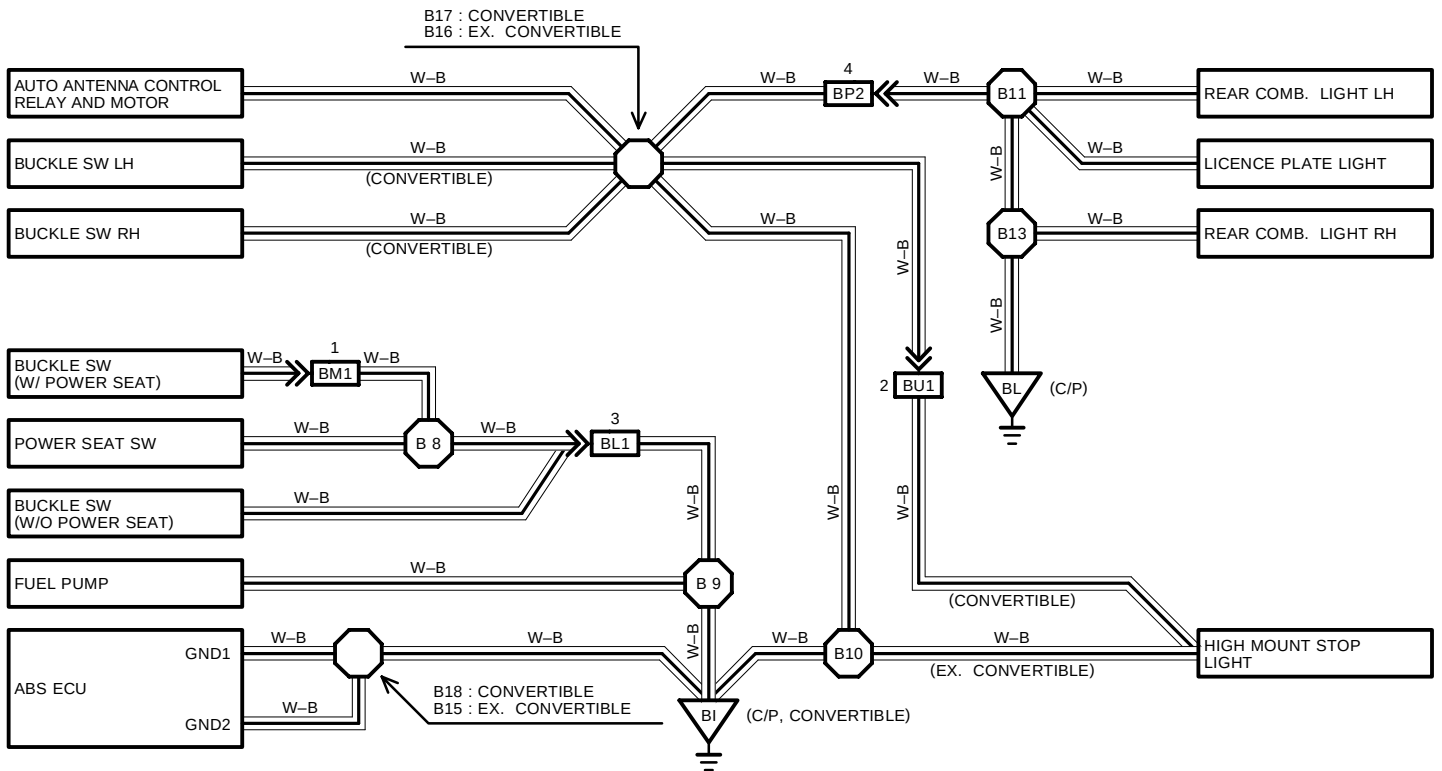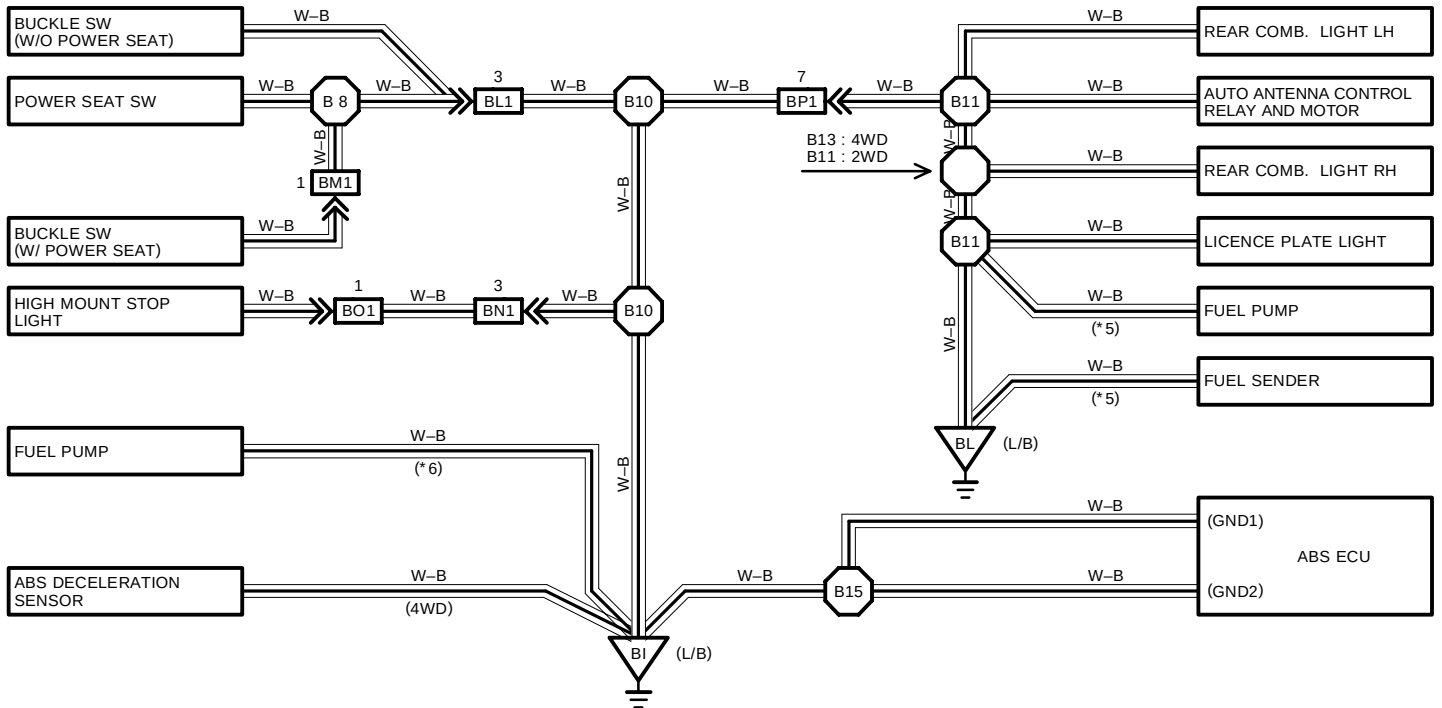

GROUND POINT

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 6	33				

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	R/B NO. 2 (LEFT KICK PANEL)
4	27	R/B NO. 4 (RIGHT KICK PANEL)
5	27	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1F	20	FLOOR NO. 1 WIRE AND J/B NO. 1 WIRE (LEFT KICK PANEL)
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C	22 (2WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	44	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	44	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2		
II1	46	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II3	46	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF ALL-TRAC/4WD)
	46	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF 2WD)
IJ1	46	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ2		
IJ3		
IK1	46	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	46	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
IQ4		
IQ5		
BL1	48 (L/B)	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
	50 (C/P)	
BM1	48 (L/B)	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
	50 (C/P)	
BN1	48 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	48 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BU1	48 (L/B)	FLOOR WIRE AND REAR WINDOW NO. 2 WIRE (LEFT REAR PILLAR)



: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (3S-GTE)	FRONT RIGHT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EC	38 (3S-GTE)	INTAKE MANIFOLD
	40 (5S-FE)	
	42 (4A-FE)	
ID	44	LEFT KICK PANEL
IE	44	INSTRUMENT PANEL BRACE LH
IF	44	INSTRUMENT PANEL BRACE RH
IG	44	R/B NO. 4 SET BOLT
BH	48 (L/B)	ROOF LEFT
	50 (C/P)	
BI	48 (L/B)	UNDER THE LEFT CENTER PILLAR
	50 (C/P)	
BJ	50 (C/P)	RIGHT REAR PILLAR (C/P)
BK	48 (L/B)	BACK DOOR RIGHT (L/B)
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	
BM	50 (C/P)	LEFT REAR PILLAR (C/P)



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	38 (3S–GTE)	ENGINE ROOM MAIN WIRE	I11	46	A/C NO. 2 WIRE
	40 (5S–FE)		I12	46	A/C NO. 1 WIRE
	42 (4A–FE)		B 2	48 (L/B)	FRONT DOOR LH WIRE
E 2	38 (3S–GTE)			50 (C/P)	
	40 (5S–FE)		B 3	48 (L/B)	FRONT DOOR RH WIRE
	42 (4A–FE)			50 (C/P)	
E 3	38 (3S–GTE)		B 5	48 (L/B)	ROOF WIRE
	40 (5S–FE)			50 (C/P)	
	42 (4A–FE)		B 6	48 (L/B)	
E 4	38 (3S–GTE)			50 (C/P)	
	40 (5S–FE)		B 8	48 (L/B)	FRAME WIRE
	42 (4A–FE)			50 (C/P)	
E 5	38 (3S–GTE)	ENGINE WIRE	B10	48 (L/B)	FLOOR WIRE
	40 (5S–FE)			50 (C/P)	
	42 (4A–FE)		B11	48 (L/B)	LUGGAGE ROOM WIRE
E 7	38 (3S–GTE)			50 (C/P)	
	40 (5S–FE)		B13	48 (L/B)	FLOOR WIRE
	42 (4A–FE)			50 (C/P)	
E 8	38 (3S–GTE)		B15	48 (L/B)	
	40 (5S–FE)		B16	48 (L/B)	
I 2	46	COWL WIRE		50 (C/P)	
I 3		B17	48 (L/B)		
I 4			50 (C/P)		
I 5			52 (CONVERTIBLE)		
I 6		B18	48 (LB)		
I 7	46		ENGINE WIRE	50 (C/P)	
I 8	46		COWL WIRE		
I 9					

J 6

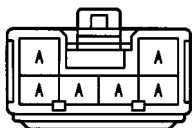

(HINT:SEE PAGE 7)