

## SERVICE HINTS

### HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

## ○ : PARTS LOCATION

| CODE       | SEE PAGE                 | CODE       | SEE PAGE                | CODE       | SEE PAGE                |
|------------|--------------------------|------------|-------------------------|------------|-------------------------|
| <b>C14</b> | 32                       | <b>H 1</b> | 28 (3S-GTE), 30 (5S-FE) | <b>R 2</b> | 28 (3S-GTE), 30 (5S-FE) |
| <b>C16</b> | A 32                     |            | 31 (4A-FE)              |            | 31 (4A-FE)              |
| <b>C17</b> | B 32                     | <b>H 2</b> | 28 (3S-GTE), 30 (5S-FE) | <b>R 3</b> | 28 (3S-GTE), 30 (5S-FE) |
| <b>F10</b> | A 28 (3S GTE)            |            | 31 (4A-FE)              |            | 31 (4A-FE)              |
|            | B 30 (5S-FE), 31 (4A-FE) | <b>J 6</b> | 33                      | <b>R 9</b> | 33                      |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE      | SEE PAGE          | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)   |
|-----------|-------------------|--------------------------------------------------------|
| <b>1A</b> | 20                | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)              |
| <b>1E</b> |                   |                                                        |
| <b>2A</b> | 22 (2WD)          | ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY) |
| <b>2B</b> | 23 (ALL-TRAC/4WD) |                                                        |
|           | 22 (2WD)          | ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)           |
| <b>2D</b> | 23 (ALL-TRAC/4WD) |                                                        |
|           | 22 (2WD)          | ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY) |
| <b>2E</b> | 23 (ALL-TRAC/4WD) |                                                        |
| <b>3B</b> | 23 (ALL-TRAC/4WD) | COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)     |
|           | 25                |                                                        |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE       | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|----------|------------------------------------------------------------|
| <b>IE1</b> | 44       | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)      |


## ▽ : GROUND POINTS


| CODE      | SEE PAGE    | GROUND POINTS LOCATION |
|-----------|-------------|------------------------|
| <b>EB</b> | 38 (3S-GTE) | FRONT LEFT FENDER      |
|           | 40 (5S-FE)  |                        |
|           | 42 (4A-FE)  |                        |
| <b>ID</b> | 44          | LEFT KICK PANEL        |

## ○ : SPLICE POINTS

| CODE       | SEE PAGE    | WIRE HARNESS WITH SPLICE POINTS | CODE       | SEE PAGE    | WIRE HARNESS WITH SPLICE POINTS |
|------------|-------------|---------------------------------|------------|-------------|---------------------------------|
| <b>E 2</b> | 38 (3S-GTE) | ENGINE ROOM MAIN WIRE           | <b>E 3</b> | 42 (4A-FE)  | ENGINE ROOM MAIN WIRE           |
|            | 40 (5S-FE)  |                                 | <b>E13</b> | 38 (3S-GTE) |                                 |
|            | 42 (4A-FE)  |                                 |            | 40 (5S-FE)  |                                 |
| <b>E 3</b> | 38 (3S-GTE) |                                 | <b>I 2</b> | 42 (4A-FE)  | COWL WIRE                       |
|            | 40 (5S-FE)  |                                 |            | 46          |                                 |

# HEADLIGHT (FOR USA)

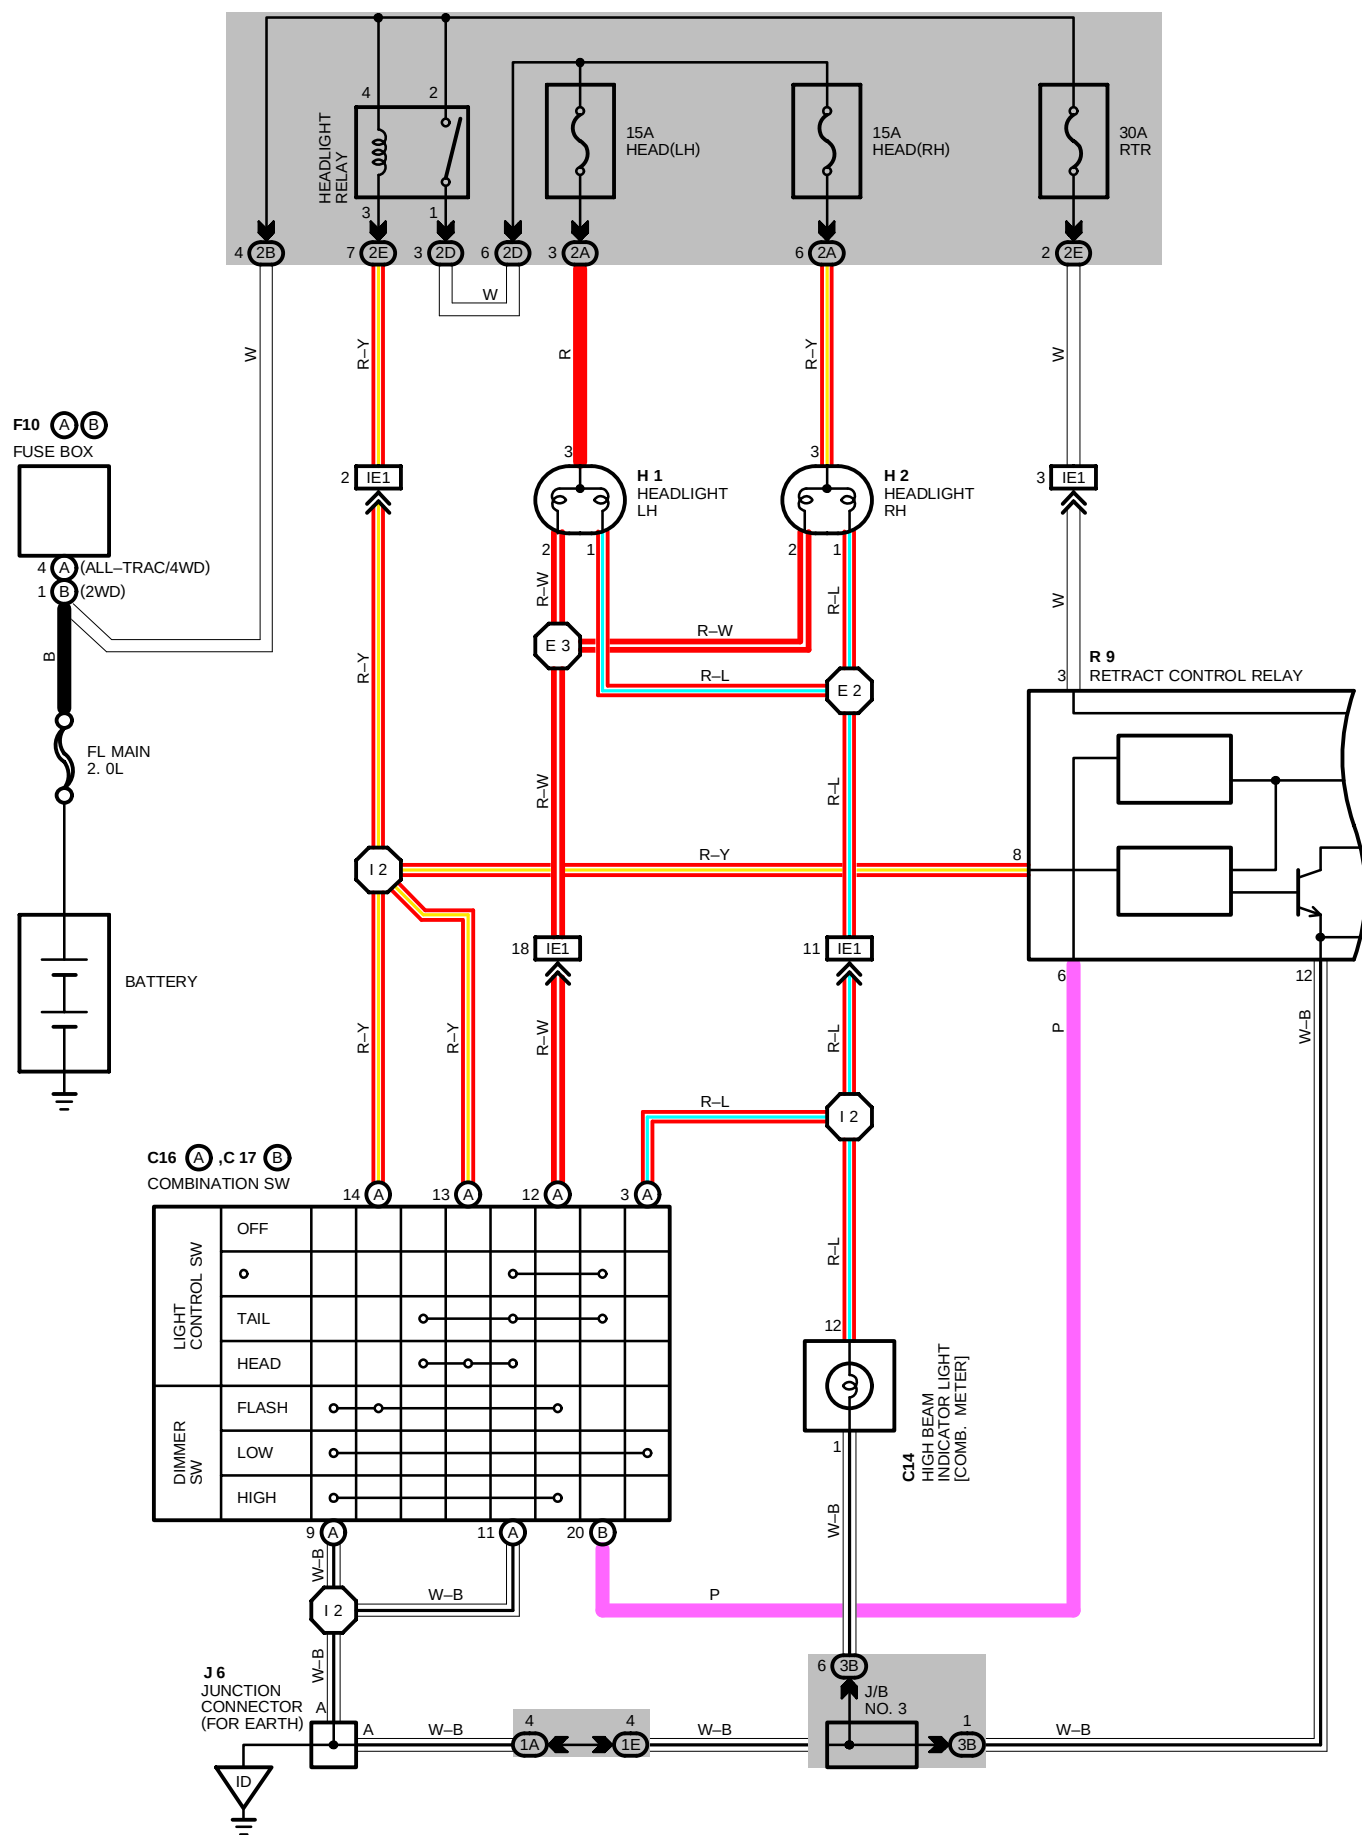




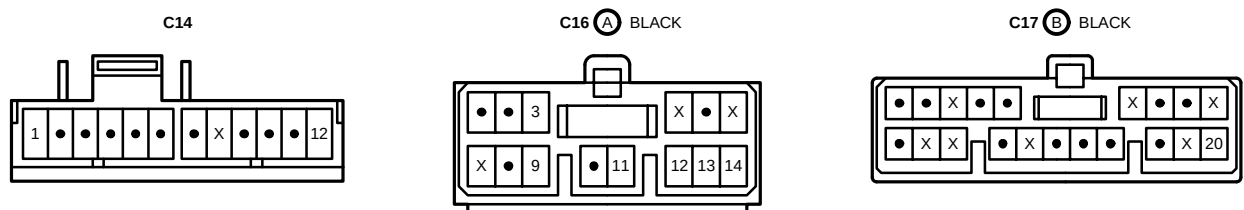


(ALL-TRAC/4WD) F10 (A) BLACK

(2WD) F10 (B) BLACK


H1, H2 BROWN

J6

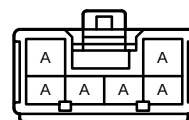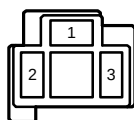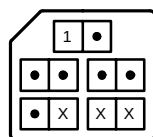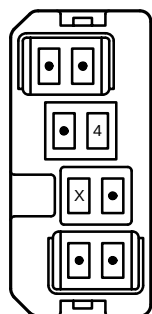


(HINT : SEE PAGE 7)

R9  
RETRACT CONTROL RELAY

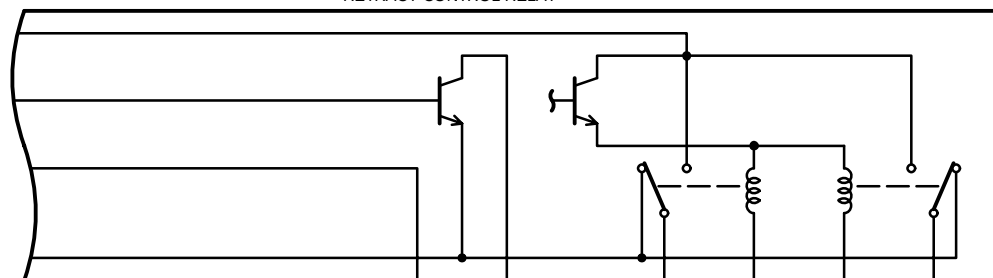

R2, R3 BLACK

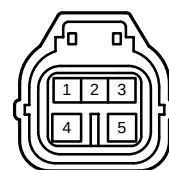

R9

