



ILLUMINATION

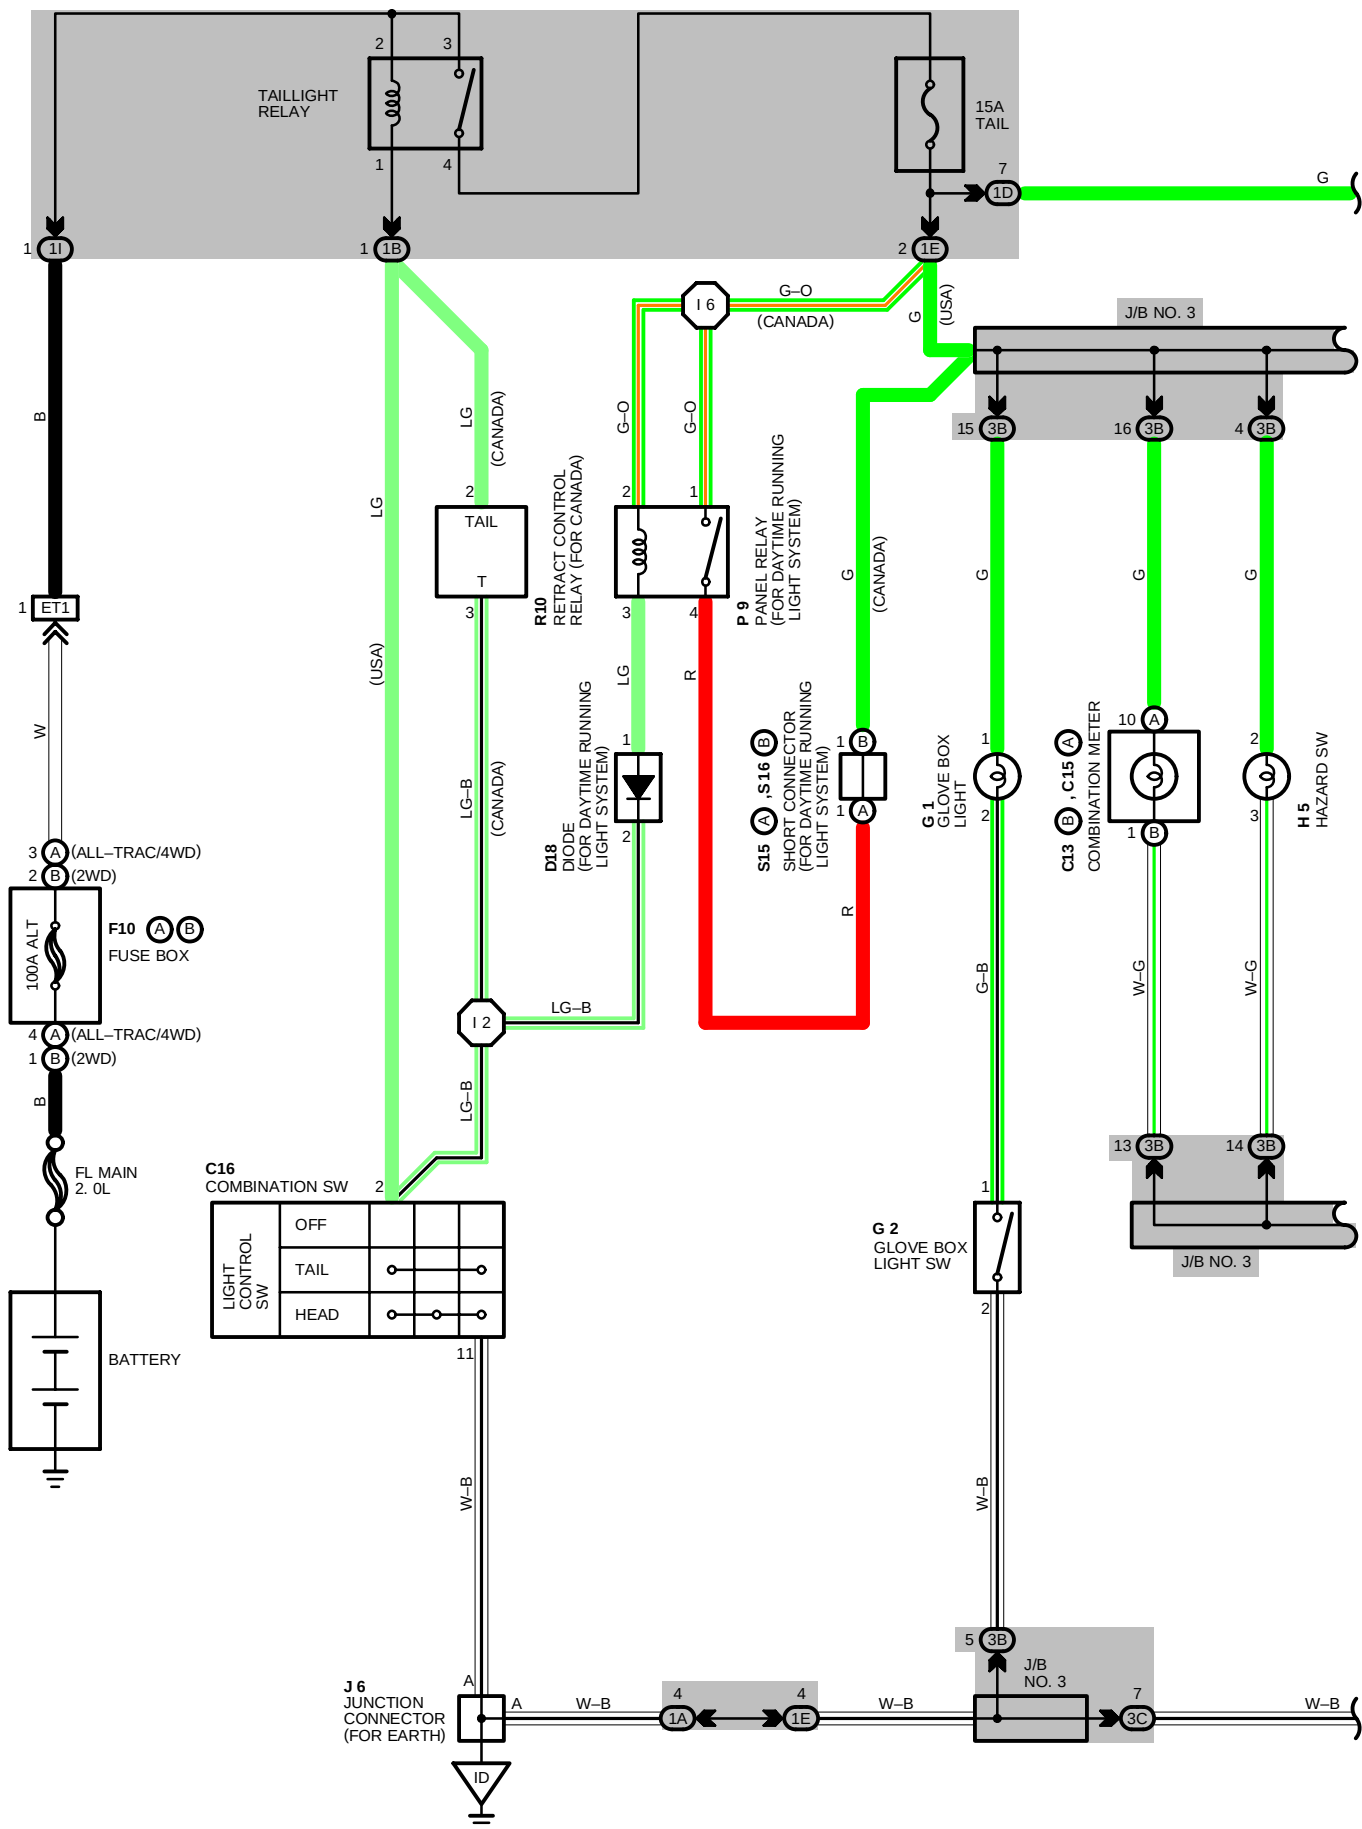

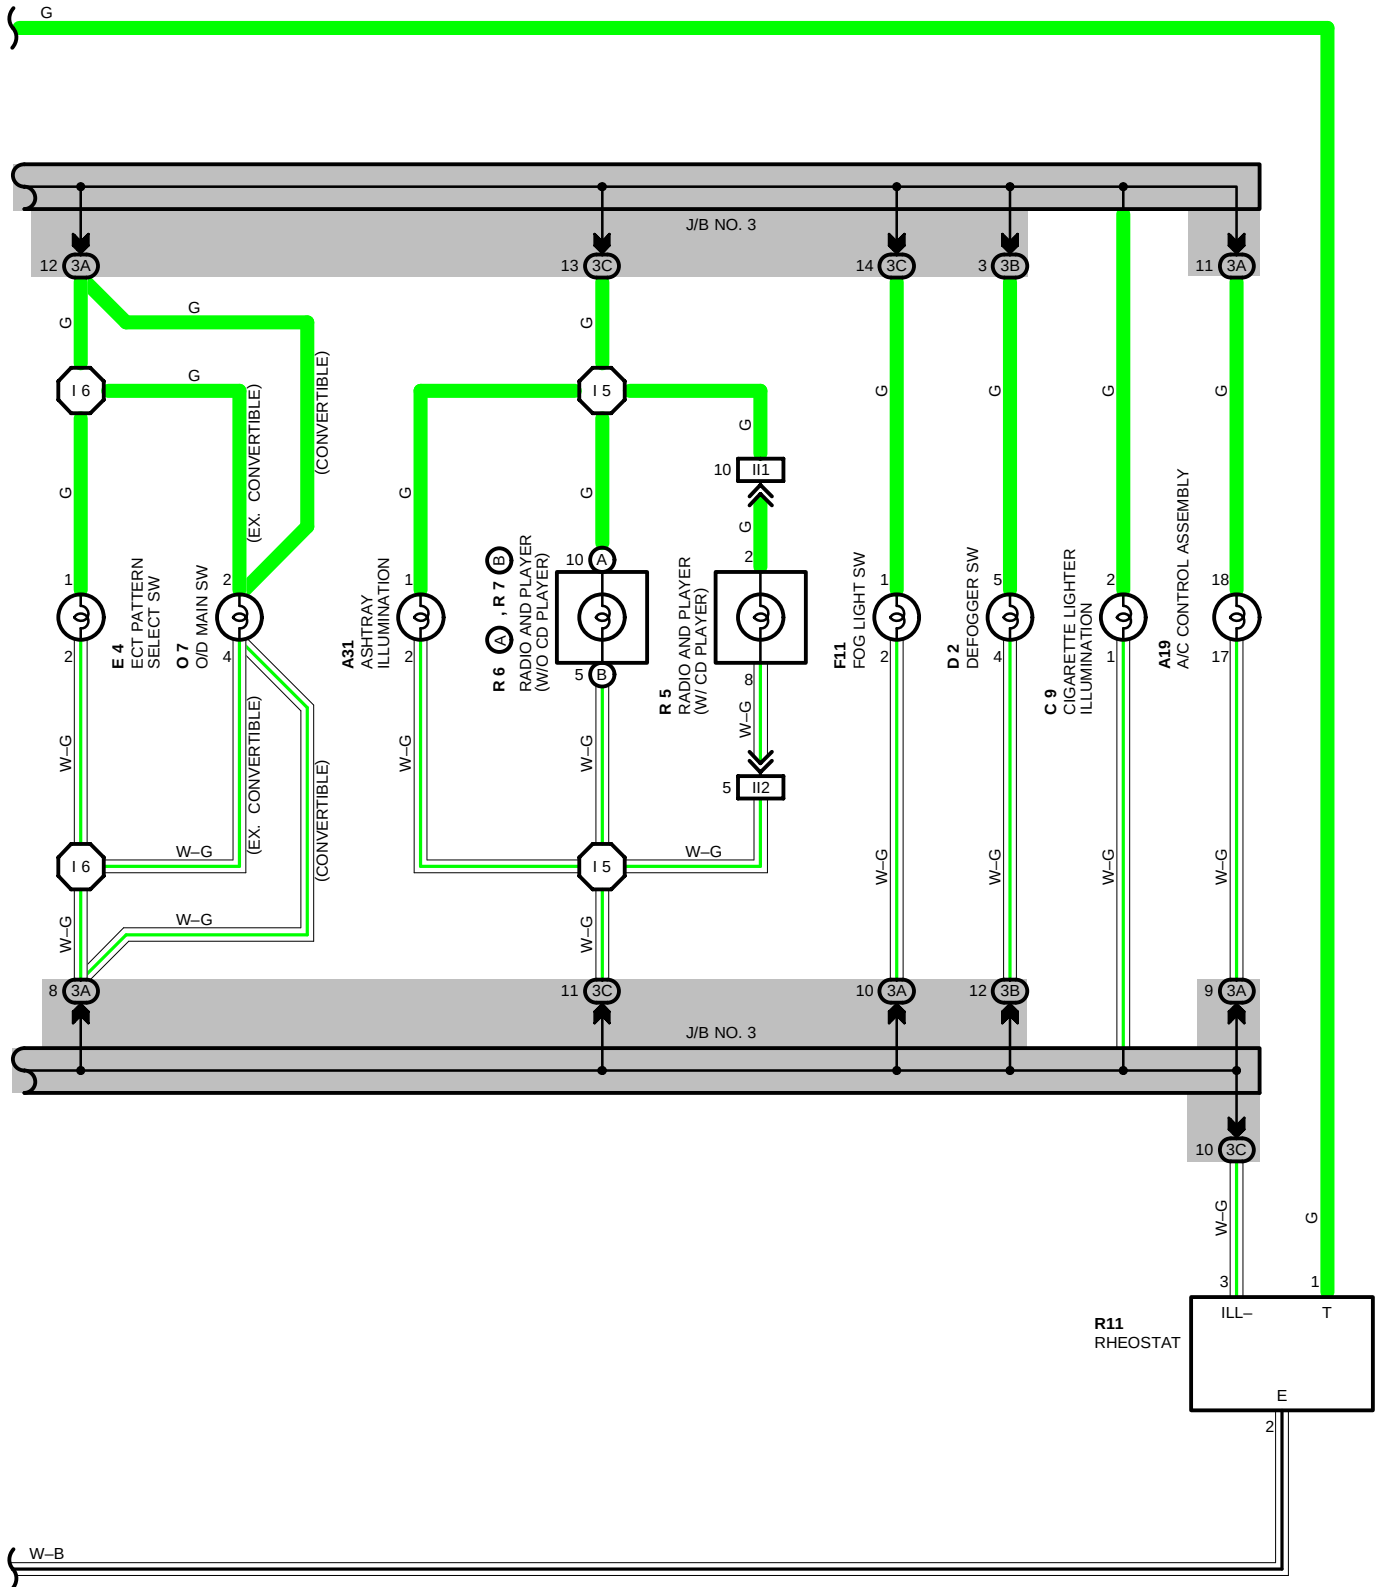

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)
CLOSED WITH ENGINE RUNNING AND PARKING LEVER RELEASED (CANADA)

R11 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

⊙ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
A19		32	F10	A	28 (3S-GTE)	R 5		33
A31		32		B	30 (5S-FE), 31 (4A-FE)	R 6	A	33
C 9		32	F11		33	R 7	B	33
C13	B	32	G 1		33	R10		33
C15	A	32	G 2		33	R11		33
C16		32	H 5		33	S15	A	33
D 2		32	J 6		33	S16	B	33
D18		33	O 7		33			
E 4		33	P 9		33			

⊞ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1I	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

⊞ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	40 (5S-FE)	
	42 (4A-FE)	
II1	46	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	44	LEFT KICK PANEL

⊞ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	46	COWL WIRE	I 6	46	COWL WIRE
I 5					

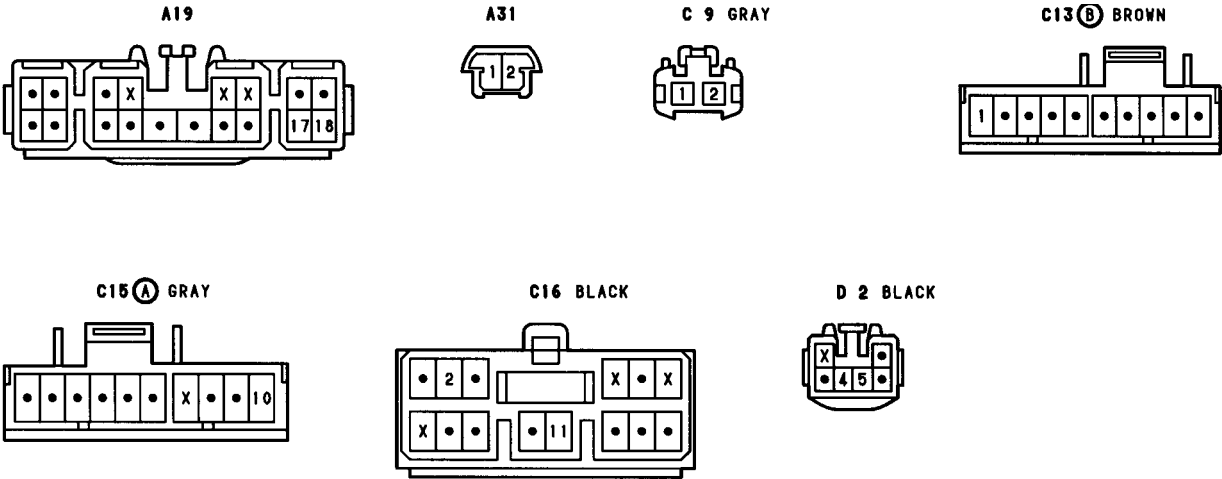


D18




E 4



(ALL-TRAC/4WD) F10 Ⓐ BLACK

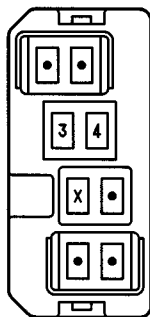

(2WD) F10 Ⓑ BLACK

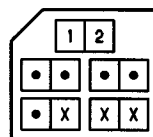

F11 BLACK



G 1 GRAY




G 2



H 5 BLACK



J 6

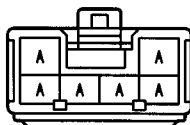


(HINT:SEE PAGE 7)


O 7




P 9




R 5

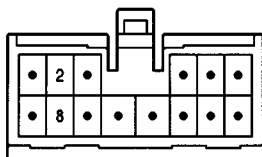


R 6 Ⓐ



R 7 Ⓑ



R10



R11



S15 Ⓐ GRAY



S16 Ⓑ GRAY

