
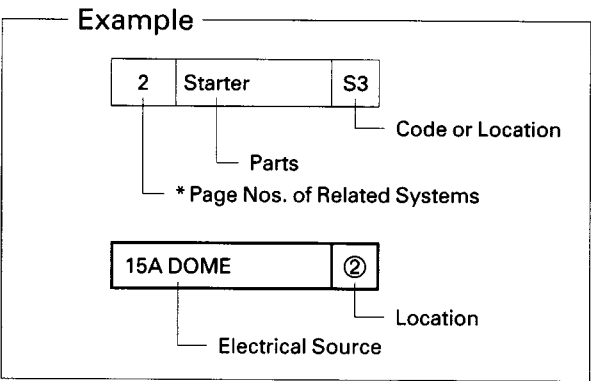


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

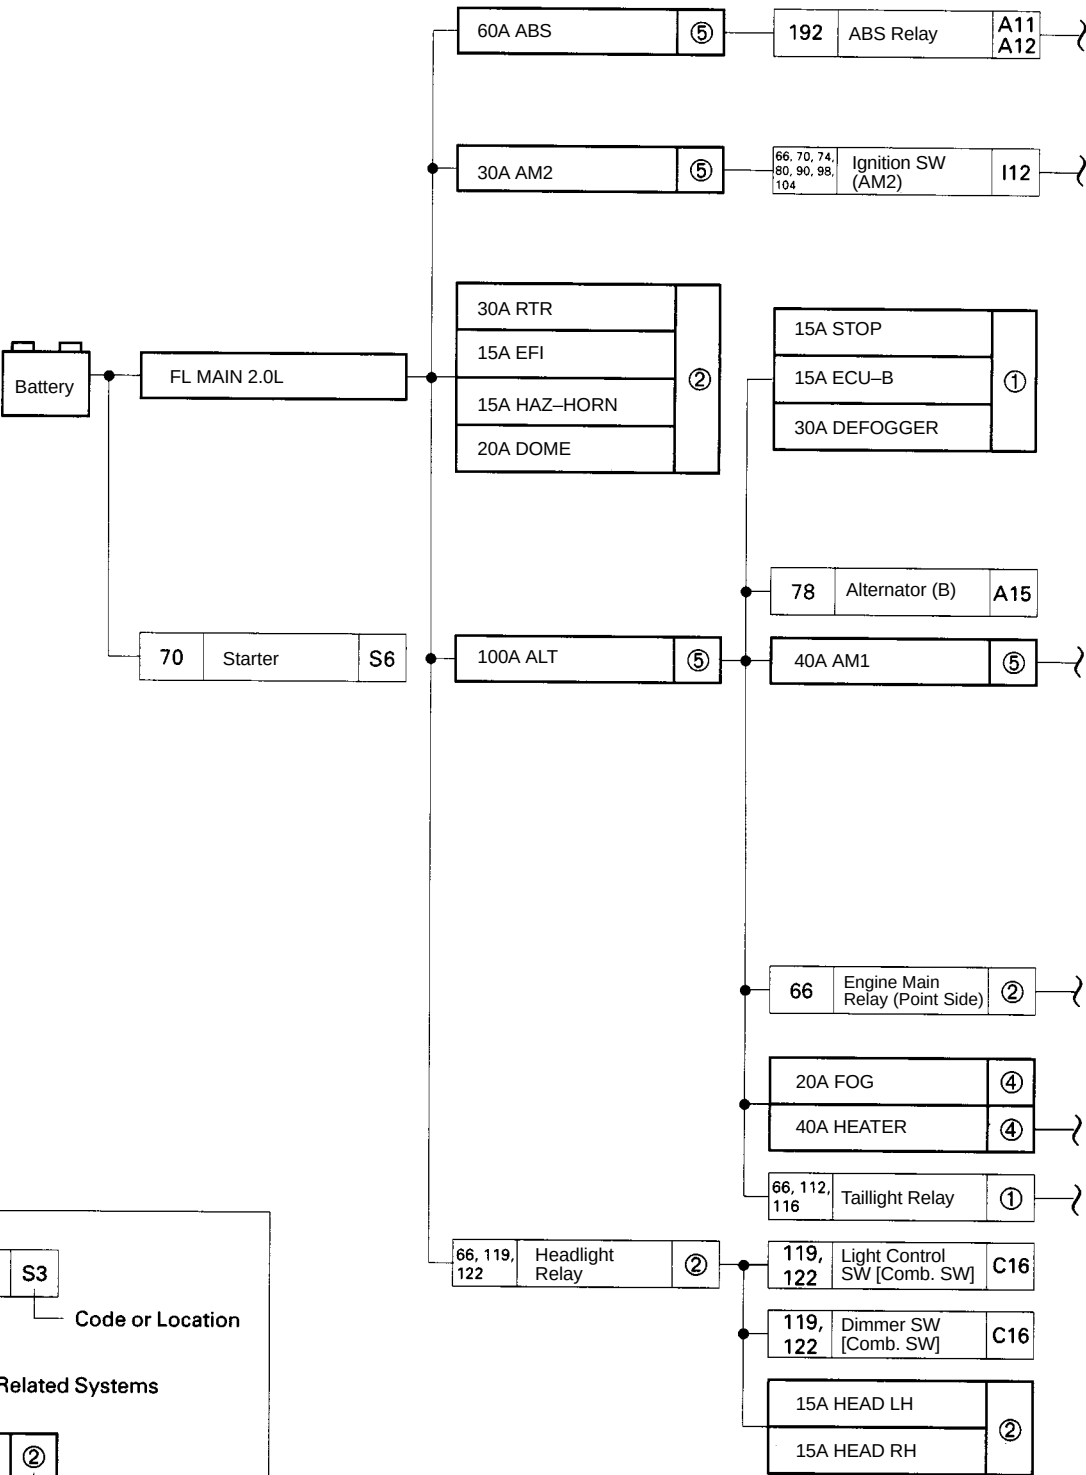

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

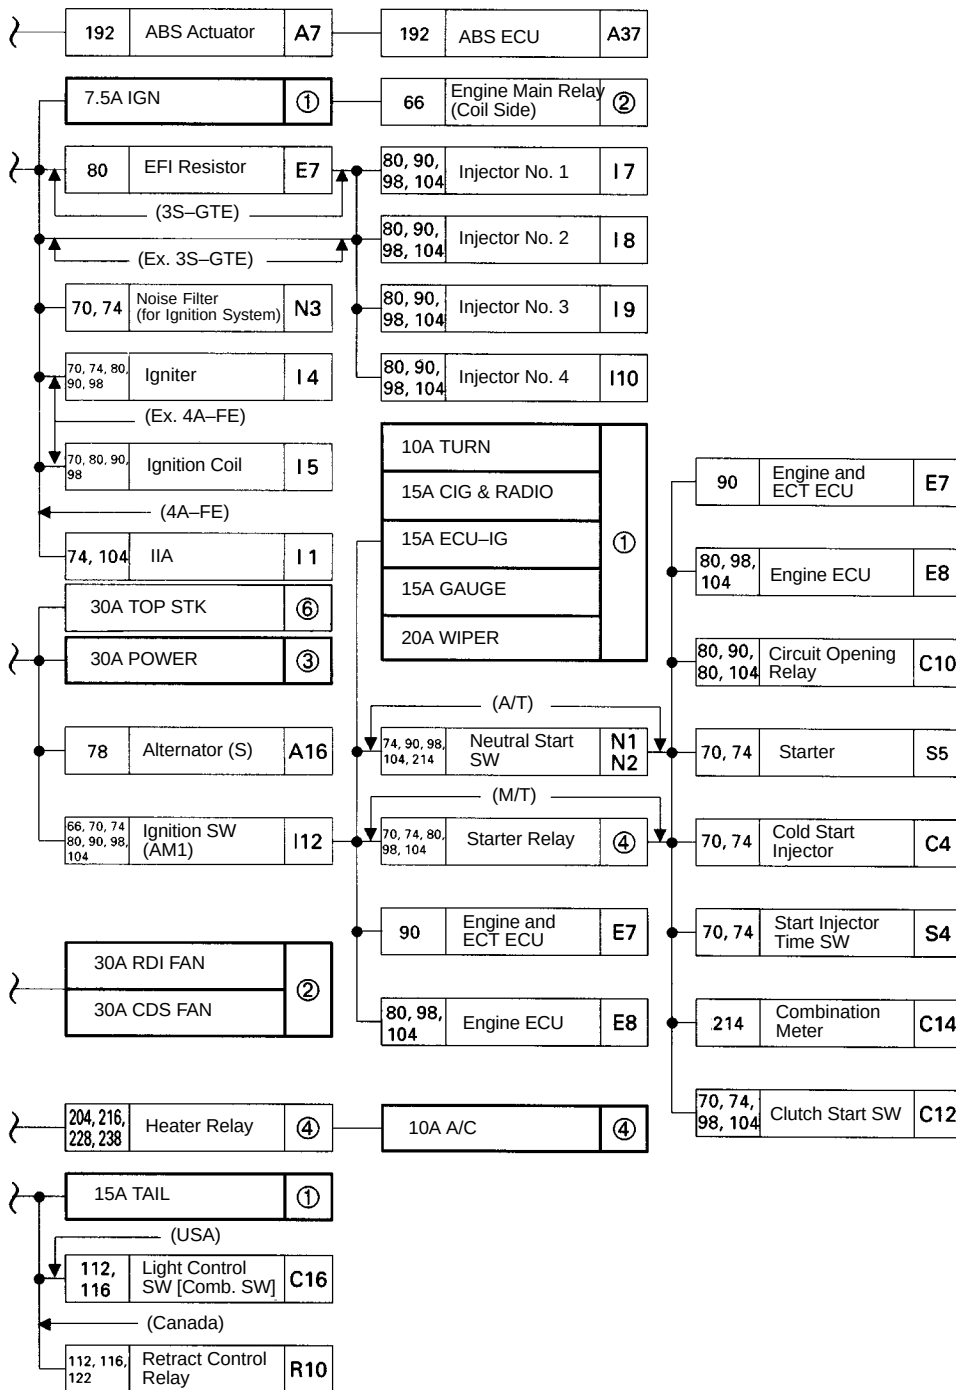

(4) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		218 230				192	78	118 230	112 230	112 218	218 230	218	218	218 230	112	218	176	192	206	192																																																									
					Parts				Code or Location				CB or Fuse				A/C Condenser Fan Motor				A/C Idle-Up VSV																																																											
			Parts		Code or Location		CB or Fuse		A/C Condenser Fan Motor				A/C Idle-Up VSV				A/C Magnetic Clutch				A/C Pressure SW				ABS Actuator				ABS Relay				Alternator				A/C Amplifier				A/C Control Assembly				A/C Power Transistor				A/C System Amplifier				Air Vent Mode Control Servo Motor				Ashtray Illumination				Auto A/C Amplifier				Auto Tilt Away ECU				ABS ECU				Auto Antenna Control Relay and Motor				ABS Deceleration Sensor (All-Trac/4WD)			
									A2	A3	A4	A5	A7	A11	A16	A17	A18	A19	A20	A22	A25	A30	A31	A32	A34	A36	A37	A38	A41	A43																																																		
①	30A	DEFOGGER																																																																														
	20A	WIPER																																																																														
	15A	GAUGE		●	●	●	●	●		●		●	●	●		●	●	●	●	●	●																																																											
	7.5A	IGN				●			●																																																																							
	15A	ECU-B																			●																																																											
	10A	TURN																																																																														
	15A	CIG & RADIO															●	●				●																																																										
	15A	TAIL									●	●				●																																																																
	15A	ECU-IG							●												●	●	●																																																									
	15A	STOP																			●																																																											
②	15A	HEAD LH																																																																														
	15A	HEAD RH																																																																														
	30A	RTR																																																																														
	15A	EFI																																																																														
	20A	DOME															●					●																																																										
	15A	HAZ-HORN																																																																														
	30A	RDI FAN																																																																														
	30A	CDS FAN	●																																																																													
③	30A	POWER																	●																																																													
④	20A	FOG																																																																														
	10A	A/C		●		●				●		●																																																																				
	40A	HEATER											●	●			●	●																																																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

90	80 98	98 218 230	90 169	80 98 104	218	122 128	116	116 134	152	112 128	80 90 98 104 214	80	214	112	119 122 128	191	112 134	130	80 90 96 169	136								
Engine and ECT ECU	Engine ECU	Engine ECU	Engine and ECT ECU	Engine ECU	Extra High Speed Relay	Fog Light LH	Fog Light RH	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light and Clearance Light LH	Front Turn Signal Light and Clearance Light RH	Front Wiper Motor	Fog Light SW	Fuel Pump and Fuel Sender	Fuel Pump Resistor	Fuel Pump	Fuel Sender (All-Trac/4WD)	Glove Box Light	Glove Box Light SW	Headlight LH	Headlight RH	Horn LH	Horn RH	Hazard SW	High Mount Stop Light	ISC Valve	Ignition Key Cylinder Light	Interior Light
E6	E7	E8	E9	F1	F2	F5	F6	F7	F8	F9	F11	F16	F17	F18	F19	G1	G2	H1	H2	H3	H4	H5	H6	I3	I11	I13		

(4) : R/B No. 4 (See page 27)

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

-Memo-

-Memo-