


POWER SOURCE

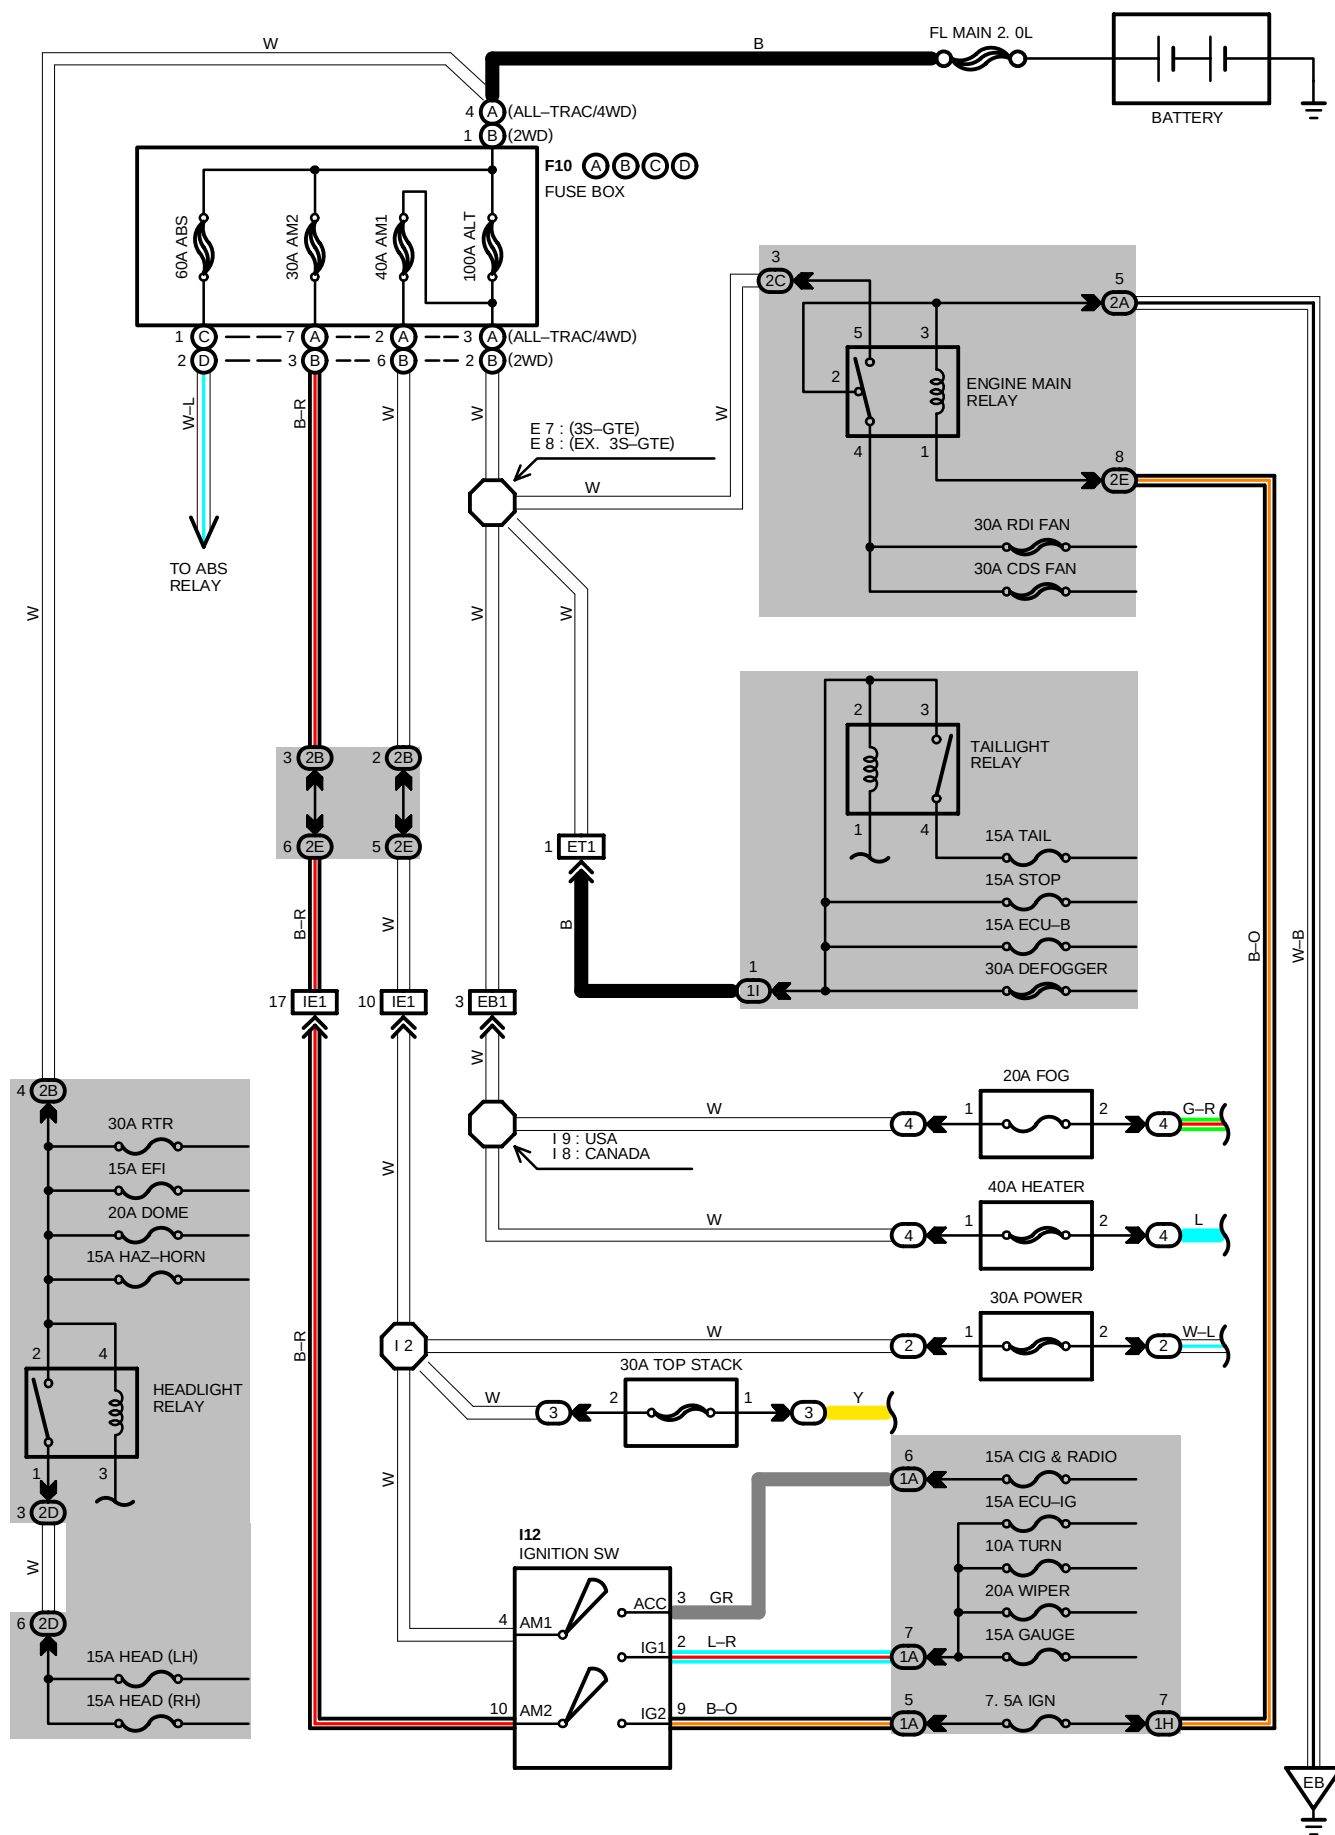

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

ENGINE MAIN RELAY

4-5 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I12 IGNITION SW

4-3 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION
9-10 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F10	A	28 (3S-GTE)	F10	C	28 (3S-GTE)
	B	30 (5S-FE), 31 (4A-FE)		D	30 (5S-FE), 31 (4A-FE)
				I12	33



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	R/B NO. 2 (LEFT KICK PANEL)
3	26	R/B NO. 3 (RIGHT KICK PANEL)
4	27	R/B NO. 4 (RIGHT KICK PANEL)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I		
2A	22 (2WD) 23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	22 (2WD) 23 (ALL-TRAC/4WD)	
2C	22 (2WD) 23 (ALL-TRAC/4WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2D	22 (2WD) 23 (ALL-TRAC/4WD)	
2E	22 (2WD) 23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	38 (3S-GTE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
	40 (5S-FE)	
	42 (4A-FE)	
ET1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	40 (5S-FE)	
	42 (4A-FE)	
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	




: SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 7	38 (3S-GTE)	ENGINE WIRE	I 2	46	COWL WIRE
E 8	38 (3S-GTE)		I 8		
	40 (5S-FE)		I 9		
	42 (3S-GTE)				

POWER SOURCE

(ALL-TRAC/4WD) F10 Ⓐ BLACK

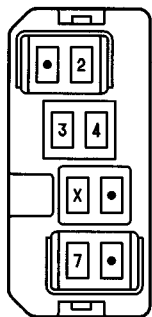

(2WD) F10 Ⓑ BLACK

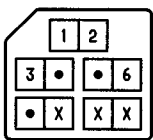


(ALL-TRAC/4WD) F10 Ⓒ BLACK



(2WD) F10 Ⓓ BLACK



I12 BLACK

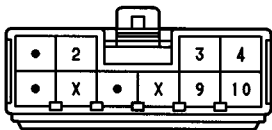

-Memo-