


RADIO AND PLAYER (w/o CD PLAYER)

FROM POWER SOURCE SYSTEM (SEE PAGE 66)

*1: EX. ST IN CANADA
*2: ST IN CANADA

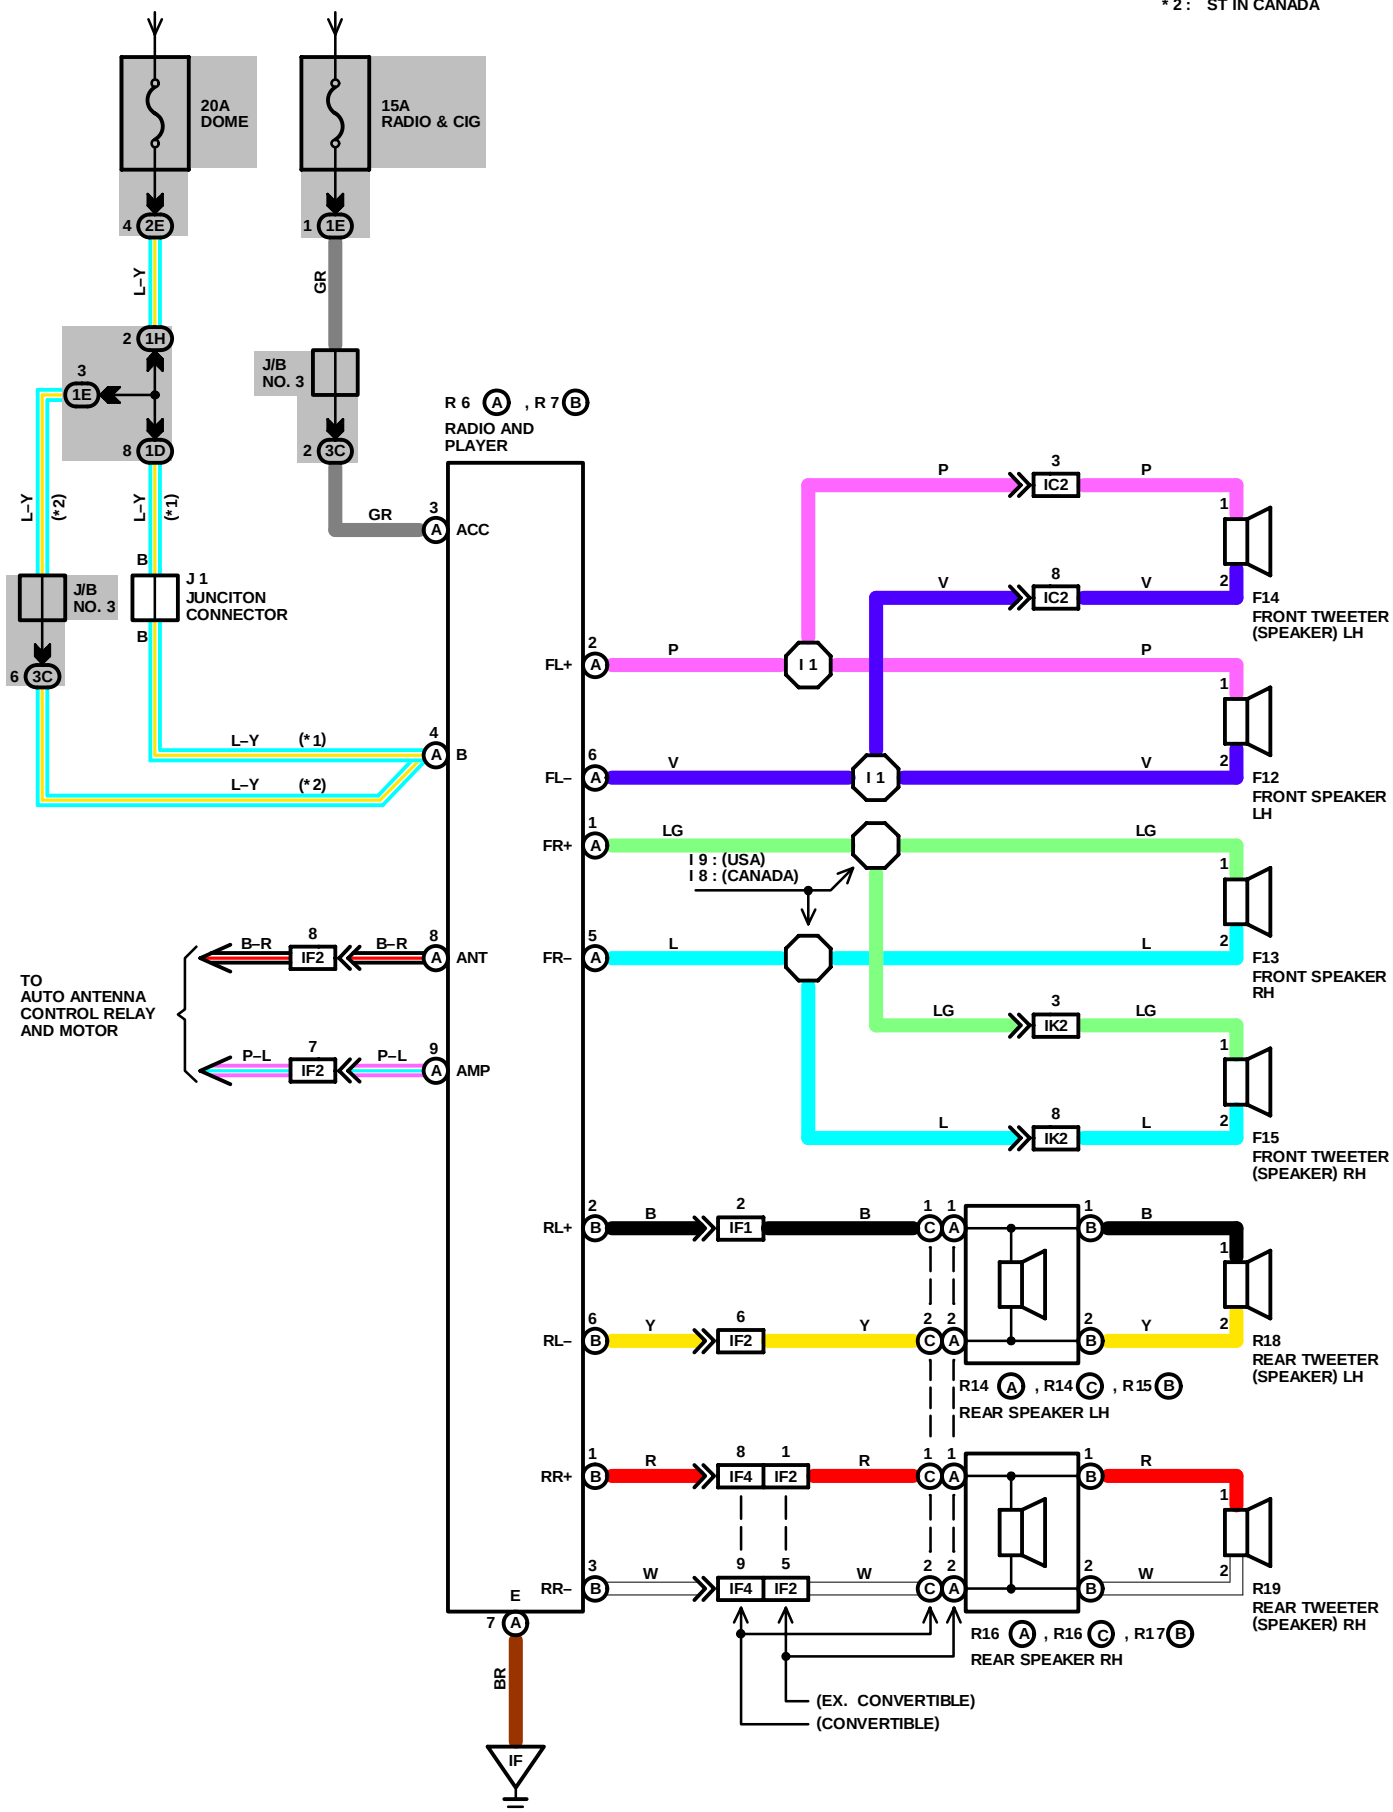

SERVICE HINTS

R 6(A), R 7(B) RADIO AND PLAYER

- (A) 4-GROUND : ALWAYS APPROX. 12 VOLTS
 (A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION
 (A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
F12	33	R 6	A	33	R16	A	34 (L/B), 35 (C/P)
F13	33	R 7	B	33	R16	C	36 (CONVERTIBLE)
F14	34 (L/B), 35 (C/P), 36 (CONVERT.)	R14	A	34 (L/B), 35 (C/P)	R17	B	34 (L/B), 35 (C/P)
F15	34 (L/B), 35 (C/P), 36 (CONVERT.)	R14	C	36 (CONVERTIBLE)	R18		34 (L/B), 35 (C/P)
J 1	33	R15	B	34 (L/B), 35 (C/P)	R19		34 (L/B), 35 (C/P)

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
3C	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	44	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IF4	46	
IK2	46	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	44	INSTRUMENT PANEL BRACE RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I1	46	COWL WIRE	I 9	46	COWL WIRE
I 8					


F12, F13



F14, F15




J 1



(HINT : SEE PAGE 7)

R 6 (A)



R 7 (B)



(EX. CONVERTIBLE) R14 (A), R16 (A)



(CONVERTIBLE) R14 (C), R16 (C)



R15 (B), R17 (B)



R18, R19

