


## TURN SIGNAL AND HAZARD WARNING LIGHT

\* 1: ALL-TRAC/4WD

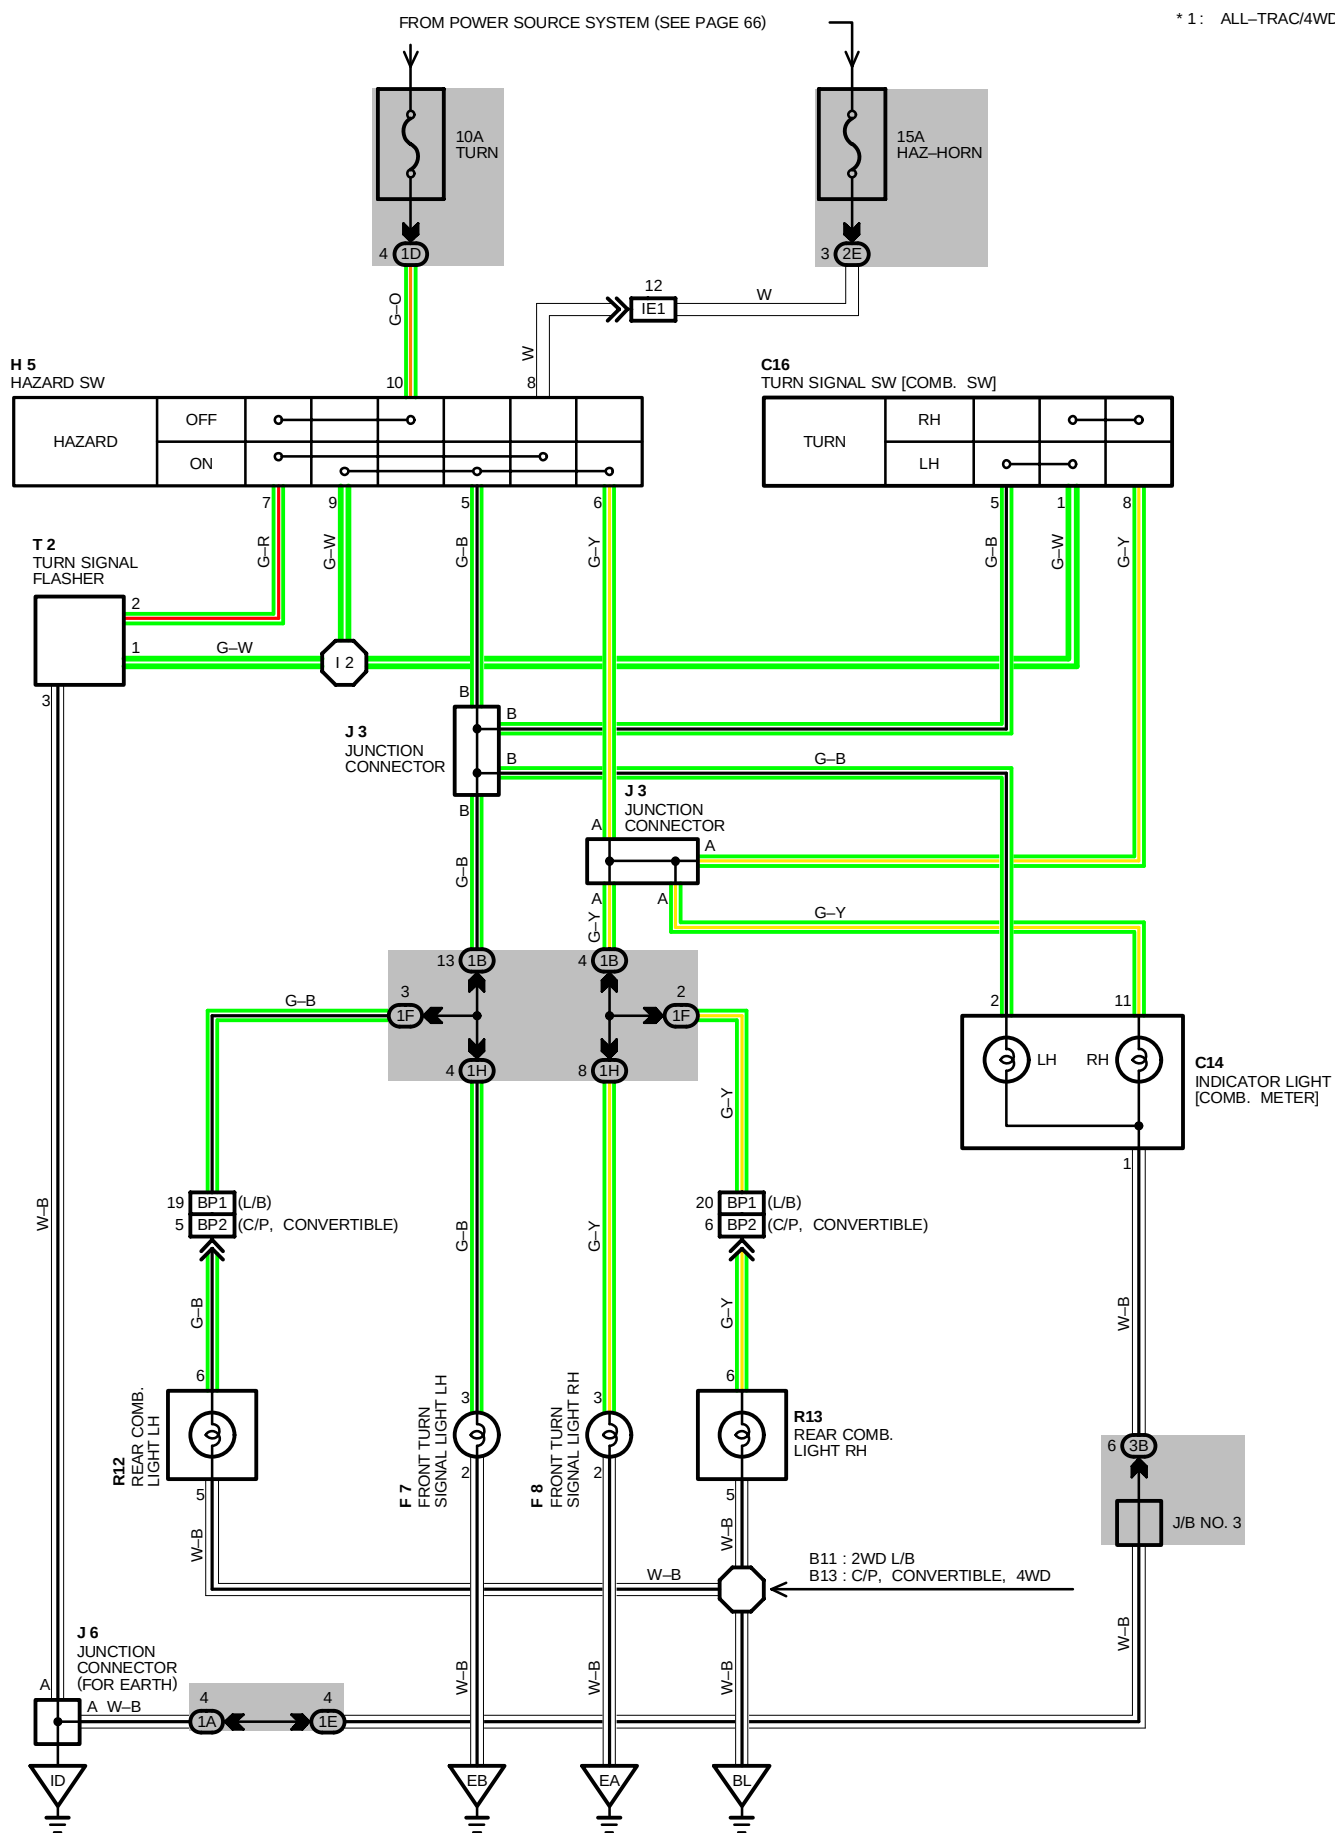

## SERVICE HINTS

### T 2 TURN SIGNAL FLASHER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON
- 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON
- 3-GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

| CODE | SEE PAGE                | CODE | SEE PAGE                | CODE | SEE PAGE                             |
|------|-------------------------|------|-------------------------|------|--------------------------------------|
| C14  | 32                      | F 8  | 28 (3S-GTE), 30 (5S-FE) | J 6  | 33                                   |
| C16  | 32                      |      | 31 (4A-FE)              | R12  | 34 (L/B), 35 (C/P), 36 (CONVERTIBLE) |
| F 7  | 28 (3S-GTE), 30 (5S-FE) | H 5  | 33                      | R13  | 34 (L/B), 35 (C/P) 36 (CONVERTIBLE)  |
|      | 31 (4A-FE)              | J 3  | 33                      | T 2  | 33                                   |

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE          | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)  |
|------|-------------------|-------------------------------------------------------|
| 1A   | 20                | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)             |
| 1B   |                   |                                                       |
| 1D   |                   |                                                       |
| 1E   |                   |                                                       |
| 1F   | 20                | FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)            |
| 1H   | 20                | ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL) |
| 2E   | 22 (2WD)          | ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY) |
|      | 23 (ALL-TRAC/4WD) |                                                       |
| 3B   | 25                | COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)    |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE         | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)   |
|------|------------------|--------------------------------------------------------------|
| IE1  | 44               | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)        |
| BP1  | 48 (L/B)         | FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER) |
| BP2  | 50 (C/P)         | FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)  |
|      | 52 (CONVERTIBLE) |                                                              |


### ▽ : GROUND POINTS

| CODE | SEE PAGE         | GROUND POINTS LOCATION |
|------|------------------|------------------------|
| EA   | 38 (3S-GTE)      | FRONT RIGHT FENDER     |
|      | 40 (5S-FE)       |                        |
|      | 42 (4A-FE)       |                        |
| EB   | 38 (3S-GTE)      | FRONT LEFT FENDER      |
|      | 40 (5S-FE)       |                        |
|      | 42 (4A-FE)       |                        |
| ID   | 44               | LEFT KICK PANEL        |
| BL   | 48 (L/B)         | BACK PANEL CENTER      |
|      | 50 (C/P)         |                        |
|      | 52 (CONVERTIBLE) |                        |


### ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE         | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|------------------|---------------------------------|
| I 2  | 46       | COWL WIRE                       | B13  | 46 (L/B), (C/P)  | LUGGAGE ROOM WIRE               |
| B11  | 48 (L/B) | LUGGAGE ROOM WIRE               |      | 52 (CONVERTIBLE) |                                 |


C14

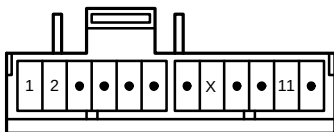


C16 BLACK

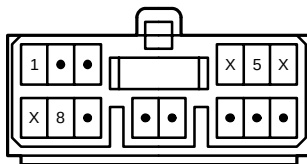


F 7, F 8 GRAY



H 5 BLACK




J 3




(HINT : SEE PAGE 7)

J 6

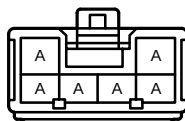

(HINT : SEE PAGE 7)

R12, R13



T 2

