


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[3S-GTE]

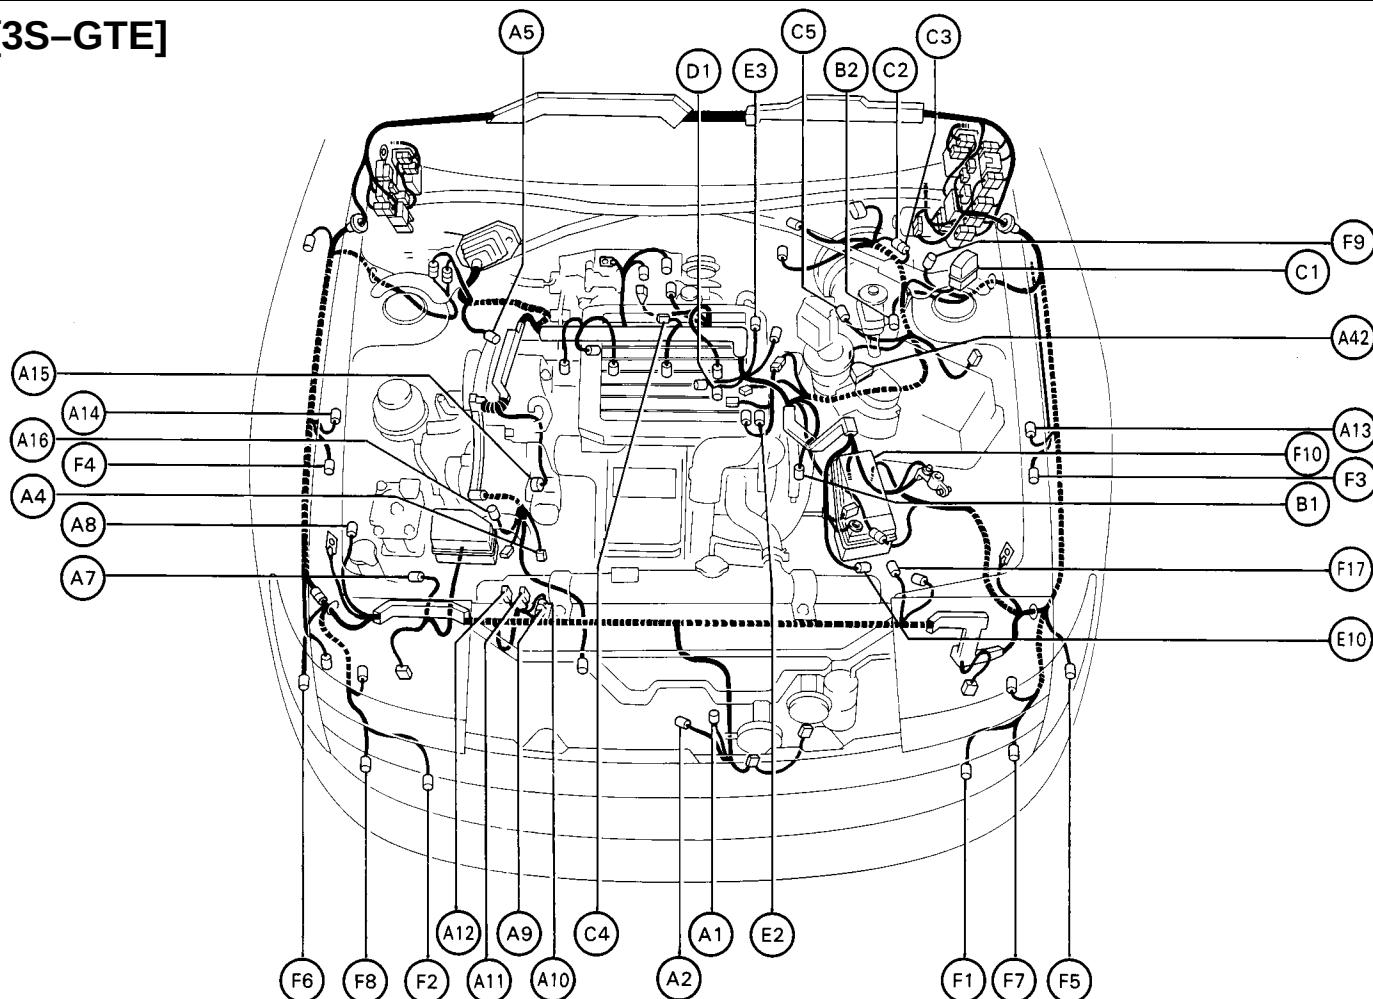

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Compressor Sensor
- A 5 A/C Pressure SW or Short Pin
- A 7 ABS Actuator
- A 8 ABS Actuator
- A 9 ABS Check Connector
- A 10 ABS Check Connector
- A 11 ABS Relay
- A 12 ABS Relay
- A 13 ABS Speed Sensor Front LH
- A 14 ABS Speed Sensor Front RH
- A 15 Alternator
- A 16 Alternator
- A 42 Air Flow Meter

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level SW


- C 1 Check Connector
- C 2 Check Connector (for Fan Check)
- C 3 Check Connector (for Fan Check)
- C 4 Cold Start Injector
- C 5 Cruise Control Actuator

- D 1 Distributor
- E 2 EFI Water Temp. Sensor
- E 3 EGR Gas Temp. Sensor (for California) or Short Pin (for Ex. California)
- E 10 EFI Resistor

- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light and Clearance Light LH
- F 8 Front Turn Signal Light and Clearance Light RH
- F 9 Front Wiper Motor
- F 10 Fuse Box (All-Trac/4WD)
- F 17 Fuel Pump Resistor

Position of Parts in Engine Compartment

[3S-GTE]

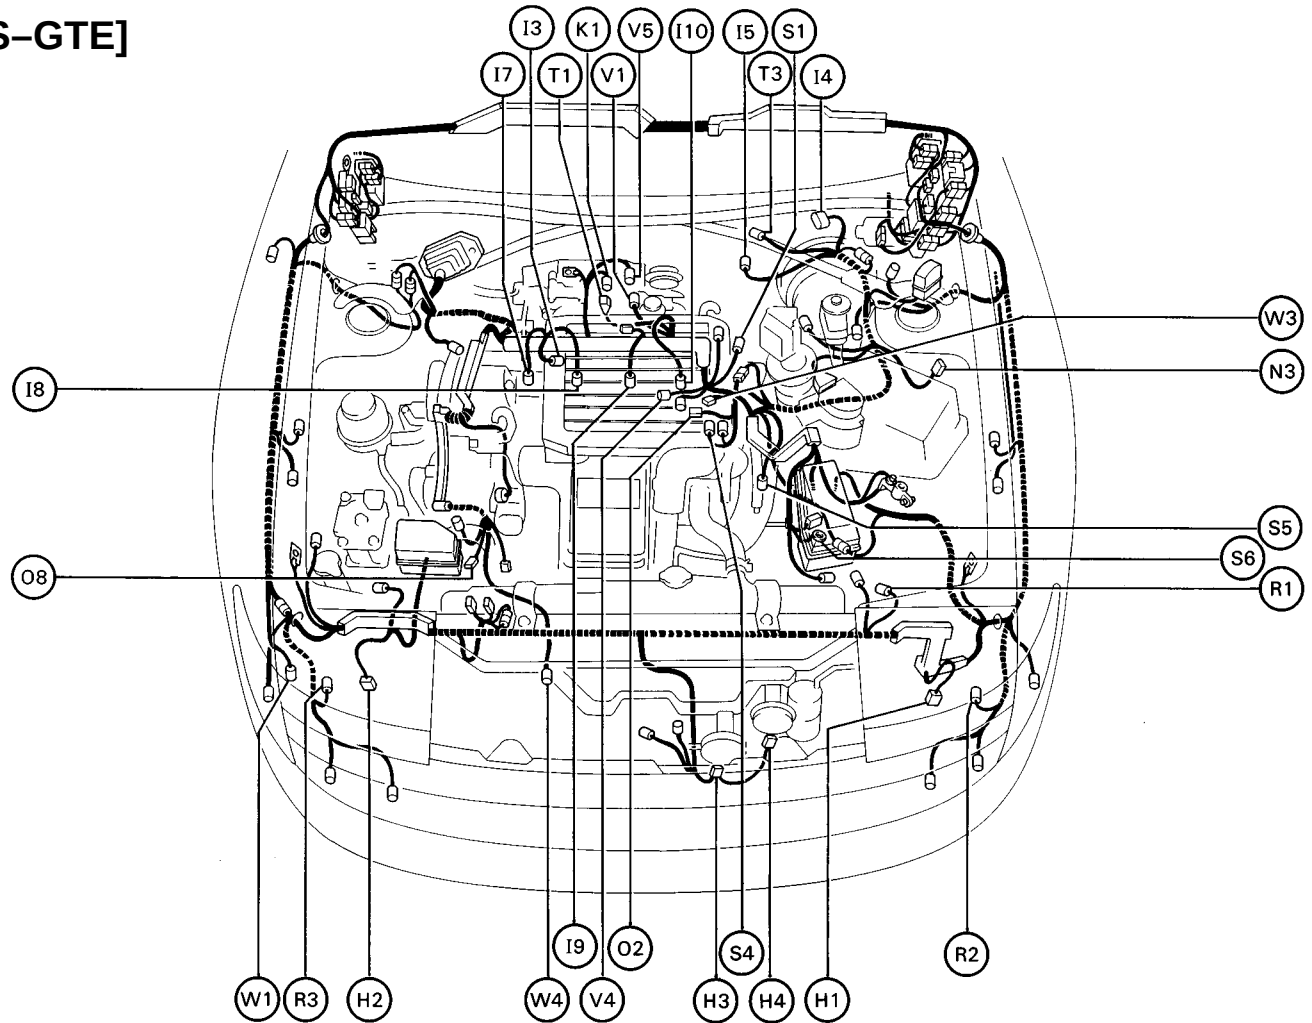

H 1 Headlight LH
H 2 Headlight RH
H 3 Horn LH
H 4 Horn RH

i 3 ISC Valve
I 4 Igniter
I 5 Ignition Coil
I 7 Injector No. 1
I 8 Injector No. 2
I 9 Injector No. 3
I 10 Injector No. 4

K 1 Knock Sensor

N 3 Noise Filter (for Ignition System)

O 2 Oil Pressure SW
O 8 Oxygen Sensor

R 1 Radiator Fan Motor
R 2 Retract Motor LH
R 3 Retract Motor RH

S 1 Speed Sensor (for Cruise Control System)
S 4 Start Injector Time SW
S 5 Starter
S 6 Starter

T 1 Throttle Position Sensor
T 3 Turbo Charging Pressure Sensor


V 1 VSV (for EGR System)
V 4 VSV (for Turbo Charging Pressure)
V 5 VSV (for T-VIS)

W 1 Washer Motor
W 3 Water Temp. Sender
W 4 Water Temp. SW (for Fans Control)

ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[5S-FE]

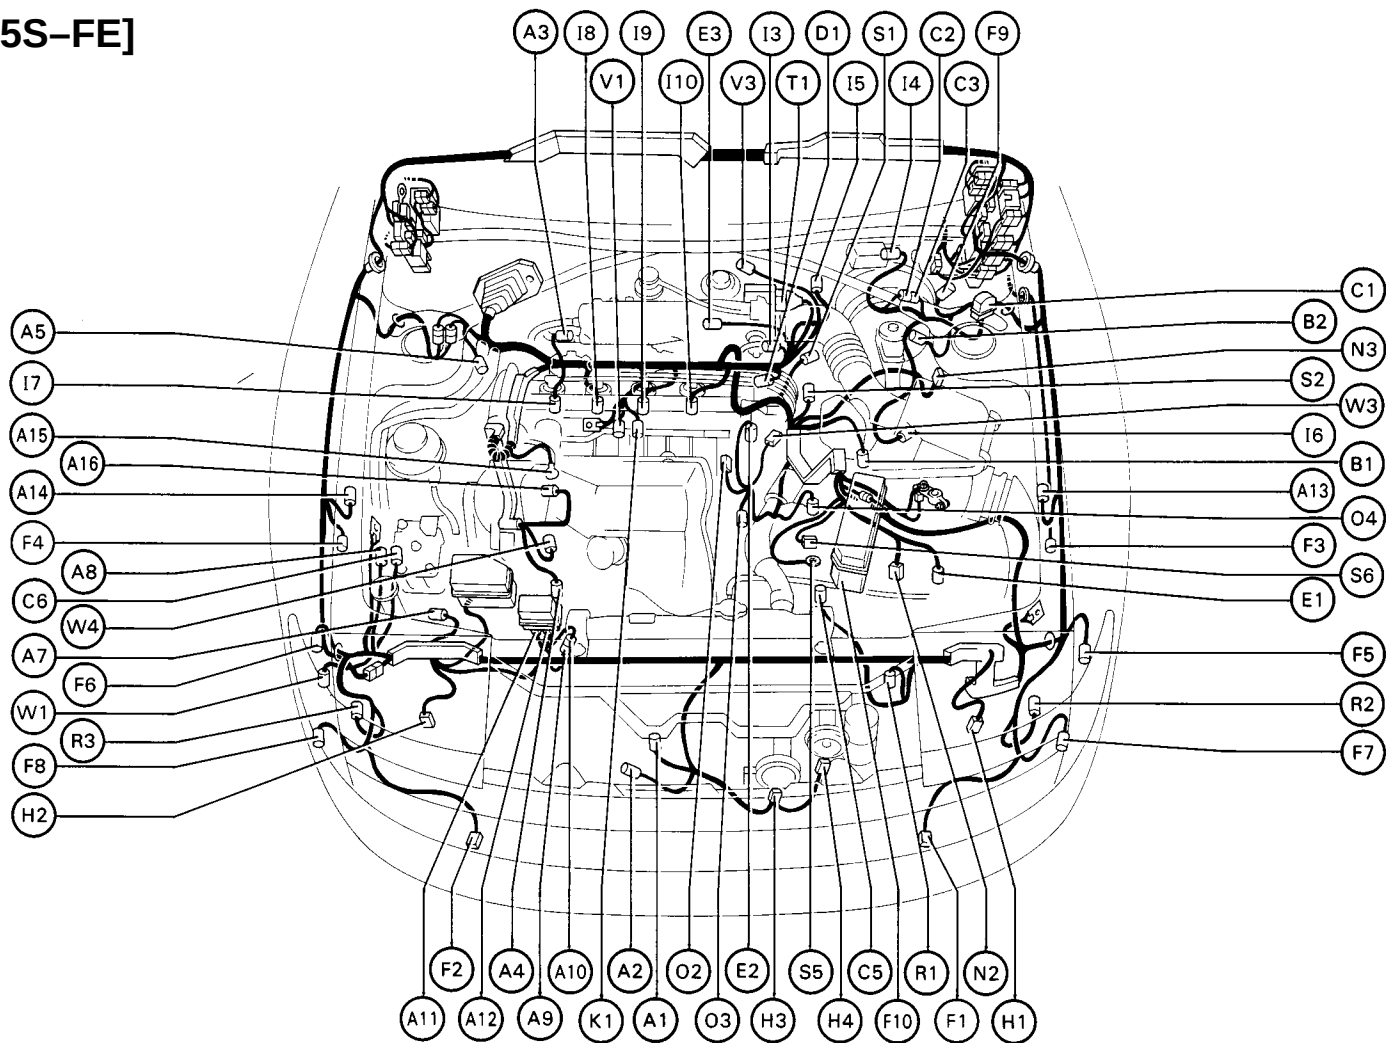

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Idle-Up VSV
- A 4 A/C Magnetic Clutch (4A-FE) or A/C Magnetic Clutch Clutch and Compressor Sensor (5S-FE)
- A 5 A/C Pressure SW or Short Pin
- A 6 A/C Water Temp. SW (5S-FE)
- A 7 ABS Actuator (5S-FE)
- A 8 ABS Actuator (5S-FE)
- A 9 ABS Check Connector (5S-FE)
- A 10 ABS Check Connector (5S-FE)
- A 11 ABS Relay (5S-FE)
- A 12 ABS Relay (5S-FE)
- A 13 ABS Speed Sensor Front LH (5S-FE)
- A 14 ABS Speed Sensor Front RH (5S-FE)
- A 15 Alternator
- A 16 Alternator

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level SW

- C 1 Check Connector
- C 2 Check Connector (for Fan Check)
- C 3 Check Connector (for Fan Check)
- C 5 Cruise Control Actuator (w/ ABS of 5S-FE)
- C 6 Cruise Control Actuator (w/o ABS)


- D 1 Distributor (5S-FE)
- E 1 ECT Solenoid (5S-FE)
- E 2 EFI Water Temp. Sensor
- E 3 EGR Gas Temp. Sensor (for California)

- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light and Clearance Light LH
- F 8 Front Turn Signal Light and Clearance Light RH
- F 9 Front Wiper Motor
- F 10 Fuse Box (2WD)

- H 1 Headlight LH
- H 2 Headlight RH
- H 3 Horn LH
- H 4 Horn RH

Position of Parts in Engine Compartment	
---	--


[4A-FE]

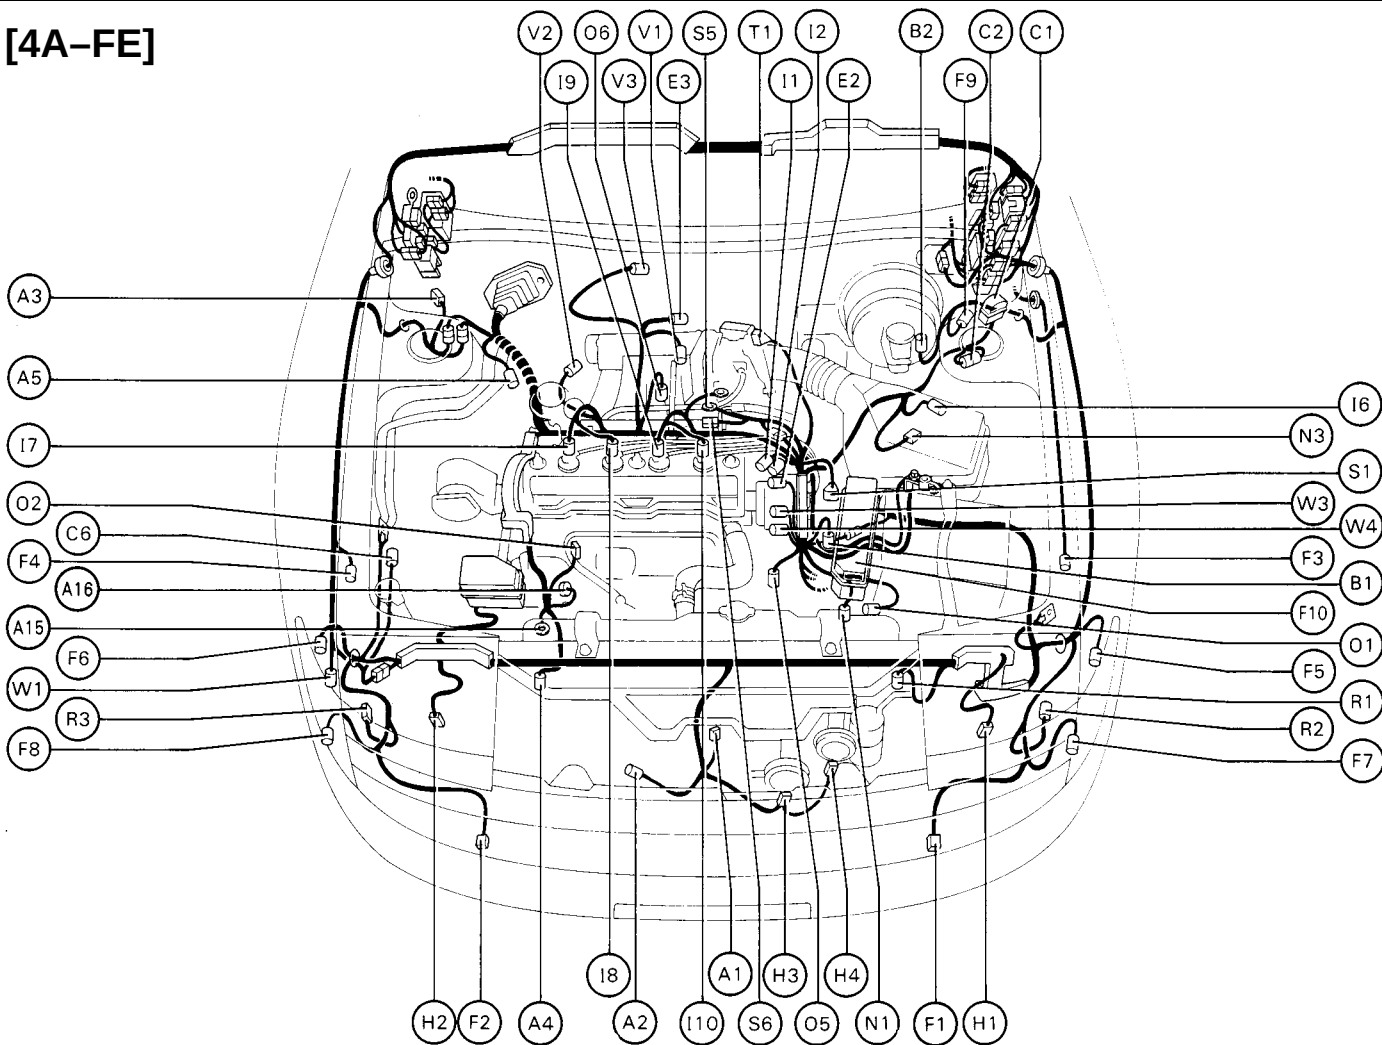

- | | | | | | |
|---|----|--|---|---|--|
| I | 1 | IIA (4A-FE) | R | 1 | Radiator Fan Motor |
| I | 2 | IIA (4A-FE) | R | 2 | Retract Motor LH |
| I | 3 | ISC Valve (5S-FE) | R | 3 | Retract Motor RH |
| I | 4 | Igniter (5S-FE) | | | |
| I | 5 | Ignition Coil (5S-FE) | S | 1 | Speed Sensor (for Cruise Control System) |
| I | 6 | In-Air Temp. Sensor | S | 2 | Speed Sensor (for ECT of 5S-FE) |
| I | 7 | Injector No.1 | S | 5 | Starter |
| I | 8 | Injector No.2 | S | 6 | Starter |
| I | 9 | Injector No.3 | | | |
| I | 10 | Injector No.4 | T | 1 | Throttle Position Sensor |
| K | 1 | Knock Sensor | V | 1 | VSV (for EGR System) |
| N | 1 | Neutral Start SW and Back-Up Light SW (A/T w/o ECT) | V | 2 | VSV (for Electrical Idle-Up System of 4A-FE) |
| N | 2 | Neutral Start SW, Back-Up Light SW and A/T Indicator (A/T w/ ECT of 5S-FE) | V | 3 | Vacuum Sensor (for EFI System) |
| N | 3 | Noise Filter (for Ignition System) | W | 1 | Washer Motor |
| O | 1 | O/D Solenoid | W | 3 | Water Temp. Sender |
| O | 2 | Oil Pressure SW | W | 4 | Water Temp. SW (for Fans Control) |
| O | 3 | Oxygen Sensor (Main, 5S-FE) | | | |
| O | 4 | Oxygen Sensor (Sub, 5S-FE) | | | |
| O | 5 | Oxygen Sensor (for California of 4A-FE) | | | |
| O | 6 | Oxygen Sensor (for Ex. California of 4A-FE) | | | |


ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

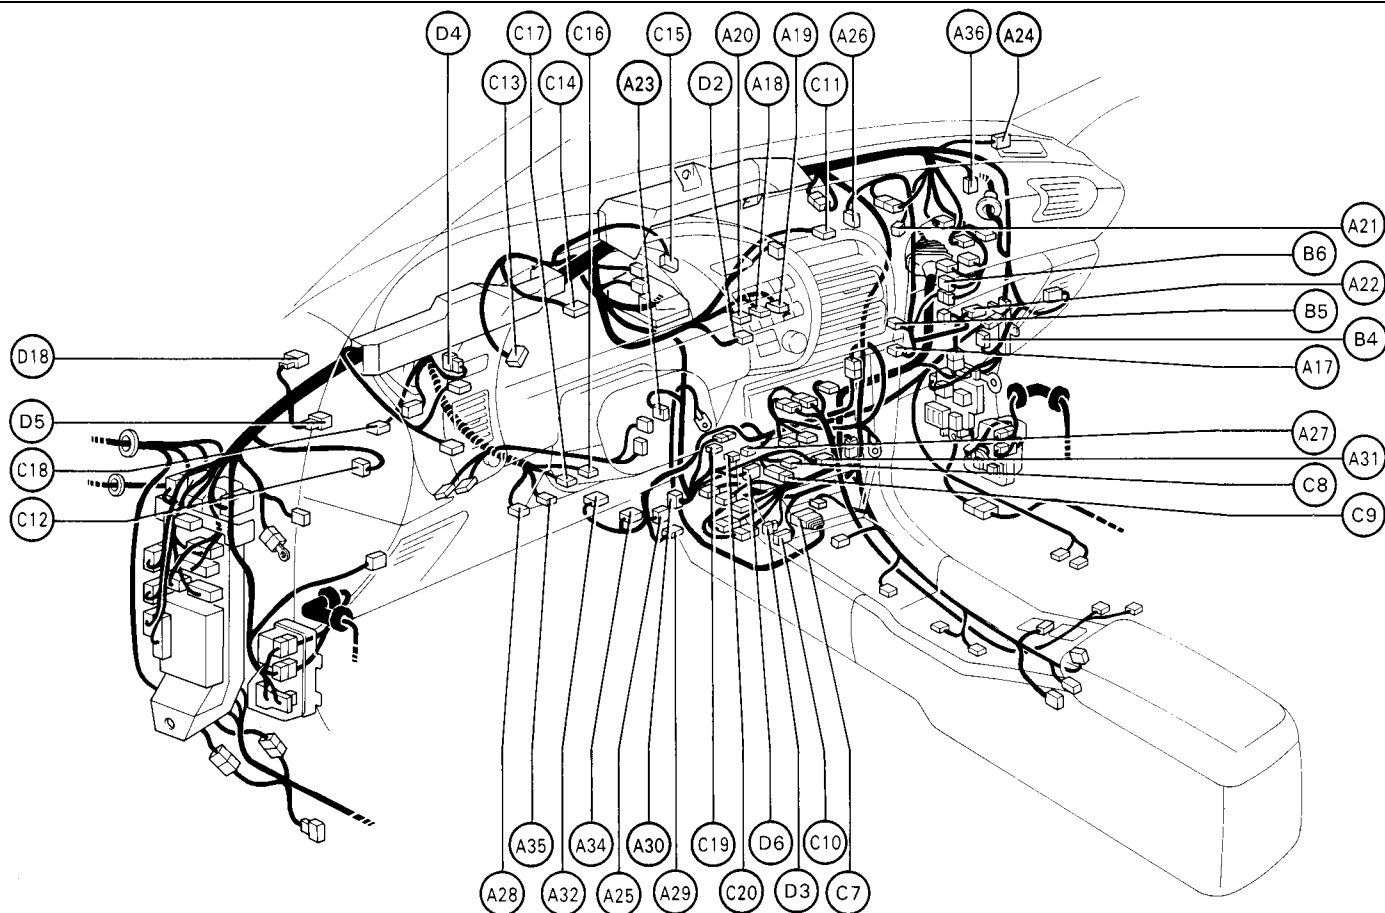

- | | | | |
|------|-----------------------------------|------|--|
| A 17 | A/C Amplifier | C 7 | Center Airbag Sensor Assembly |
| A 18 | A/C Control Assembly | C 8 | Cigarette Lighter |
| A 19 | A/C Control Assembly | C 9 | Cigarette Lighter Illumination |
| A 20 | A/C Control Assembly | C 10 | Circuit Opening Relay |
| A 21 | A/C Evaporator Temp. Sensor | C 11 | Clock |
| A 22 | A/C Power Transistor | C 12 | Clutch Start SW |
| A 23 | A/C Room Temp. Sensor | C 13 | Combination Meter |
| A 24 | A/C Solar Sensor | C 14 | Combination Meter |
| A 25 | A/C System Amplifier | C 15 | Combination Meter |
| A 26 | A/C Thermistor | C 16 | Combination SW |
| A 27 | A/C Water Temp. Sensor | C 17 | Combination SW |
| A 28 | Airbag Squib | C 18 | Cruise Control Clutch SW |
| A 29 | Air Mix Control Servo Motor | C 19 | Cruise Control ECU |
| A 30 | Air Vent Mode Control Servo Motor | C 20 | Cruise Control ECU |
| A 31 | Ashtray Illumination | | |
| A 32 | Auto A/C Amplifier | D 2 | Defogger SW |
| A 33 | Auto A/C Amplifier | D 3 | Diode (for O/D System) |
| A 34 | Auto A/C Amplifier | D 4 | Diode (for Cruise Control System) |
| A 35 | Auto Tilt Away Actuator | D 5 | Diode (for Key Off) |
| A 36 | Auto Tilt Away ECU | D 6 | Door Lock ECU |
| A 44 | Air Inlet Control Servo Motor | D 18 | Diode (for Daytime Running Light System) |
| B 3 | Blower Control Relay | | |
| B 4 | Blower Motor | | |
| B 5 | Blower Resistor | | |
| B 6 | Blower Resistor | | |

Position of Parts in Instrument Panel

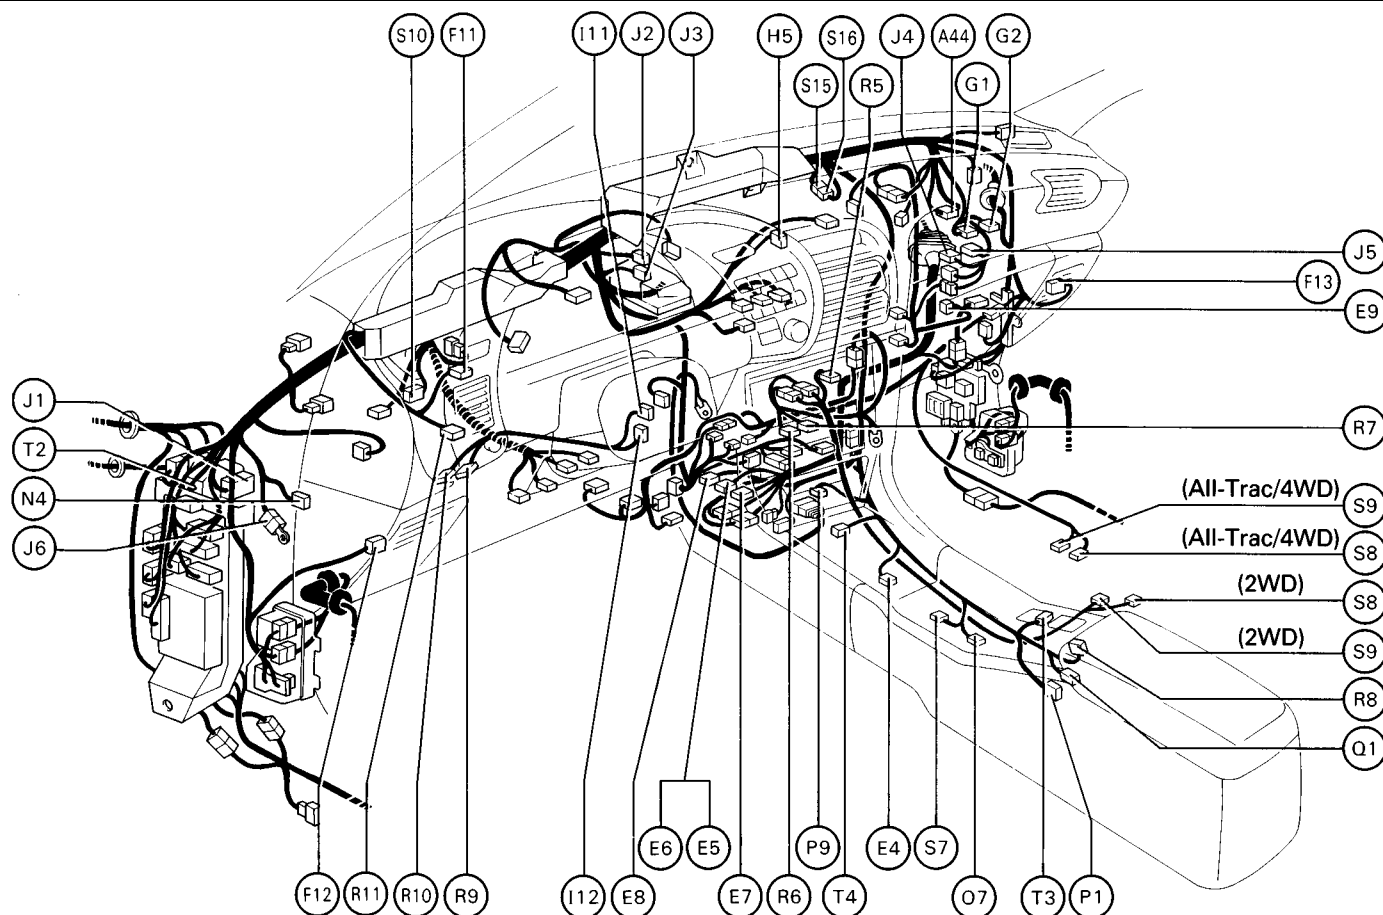


- | | |
|--|--|
| <p>E 4 ECT Pattern Select SW</p> <p>E 5 Engine ECU (4A-FE)</p> <p>E 6 Engine and ECT ECU (5S-FE, 3S-GTE)</p> <p>E 7 Engine and ECT ECU (5S-FE, 3S-GTE)</p> <p>E 8 Engine and ECT ECU</p> <p>E 9 Extra High Speed Relay</p>
<p>F 11 Fog Light SW</p> <p>F 12 Front Speaker LH</p> <p>F 13 Front Speaker RH</p>
<p>G 1 Glove Box Light</p> <p>G 2 Glove Box Light SW</p>
<p>H 5 Hazard SW</p>
<p>I 11 Ignition Key Cylinder Light</p> <p>I 12 Ignition SW and Unlock Warning SW</p>
<p>J 1 Junction Connector</p> <p>J 2 Junction Connector</p> <p>J 3 Junction Connector</p> <p>J 4 Junction Connector</p> <p>J 5 Junction Connector</p> <p>J 6 Junction Connector (for Earth)</p> | <p>K 2 Key Inter Lock Solenoid</p>
<p>N 4 Noise Filter (for Defogger System)</p>
<p>O 7 O/D Main SW and A/T Indicator (Shift Lever)</p>
<p>P 1 Parking Brake SW</p> <p>P 9 Panel Relay (for Daytime Running Light System)</p>
<p>Q 1 Quarter Power Window SW</p>
<p>R 4 RECIRC/FRESH Control Servo Motor</p> <p>R 5 Radio and Player (w/ CD Player)</p> <p>R 6 Radio and Player (w/o CD Player)</p> <p>R 7 Radio and Player (w/o CD Player)</p> <p>R 8 Remote Control Mirror SW</p> <p>R 9 Retract Control Relay</p> <p>R 10 Retract Control Relay (for CANADA)</p> <p>R 11 Rheostat</p>
<p>S 7 Shift Lock ECU</p> <p>S 8 Stereo Component Amplifier (w/CD Player)</p> <p>S 9 Stereo Component Amplifier (w/CD Player)</p> <p>S 10 Stop Light SW (w/o Cruise Control System) or Stop Light and Cruise Control Stop SW</p>
<p>S 15 Short Pin (for Daytime Running Light System)</p> <p>S 16 Short Pin (for Daytime Running Light System)</p>
<p>T 2 Turn Signal Flasher</p> <p>T 3 Top Stack Main Relay</p> <p>T 4 Top Stack SW</p> |
|--|--|

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[L/B]

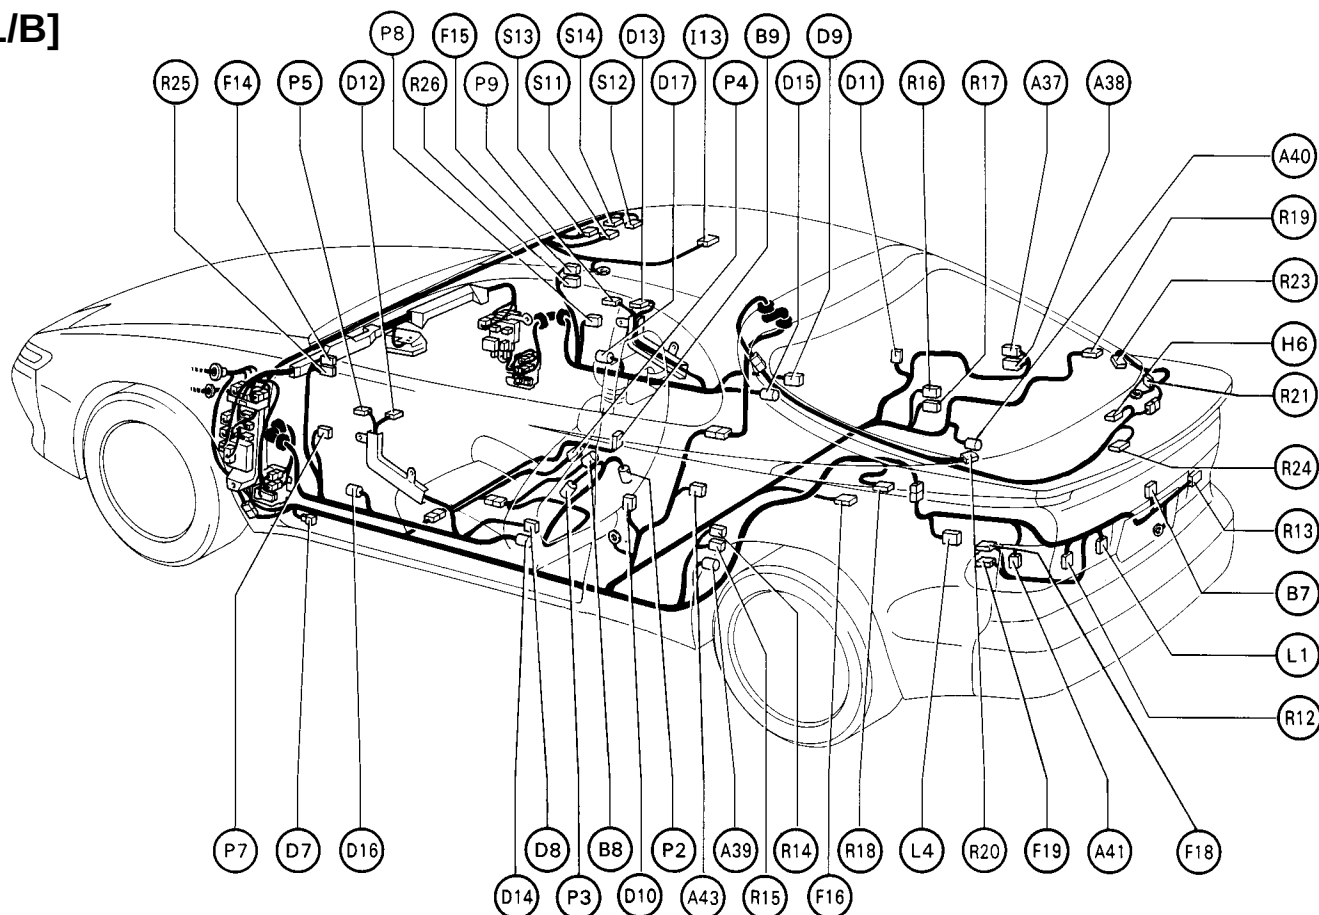

- A 37 ABS ECU (L/B)
- A 38 ABS ECU (L/B)
- A 39 ABS Speed Sensor Rear LH (L/B)
- A 40 ABS Speed Sensor Rear RH (L/B)
- A 41 Auto Antenna Control Relay and Motor
- A 43 ABS Deceleration Sensor (All-Trac/4WD)

- B 7 Back Door Courtesy SW (L/B)
- B 8 Buckle SW (w/ Power Seat)
- B 9 Buckle SW (w/o Power Seat)

- D 7 Diode
- D 8 Door Courtesy Light LH
- D 9 Door Courtesy Light RH
- D 10 Door Courtesy SW LH
- D 11 Door Courtesy SW RH

- D 12 Door Lock Control SW LH
- D 13 Door Lock Control SW RH
- D 14 Door Lock Motor, Door Unlock Detection SW LH and Key Lock and Unlock SW LH
- D 15 Door Lock Motor, Door Unlock Detection SW RH and Key Lock and Unlock SW RH
- D 16 Door Speaker LH
- D 17 Door Speaker RH


- F 14 Front Tweeter (Speaker) LH
- F 15 Front Tweeter (Speaker) RH
- F 16 Fuel Pump and Fuel Sender (2WD)
- F 18 Fuel Pump (All-Trac/4WD)
- F 19 Fuel Sender (All-Trac/4WD)

- H 6 High Mount Stop Light

- I 13 Interior Light

Position of Parts in Body

[C/P]

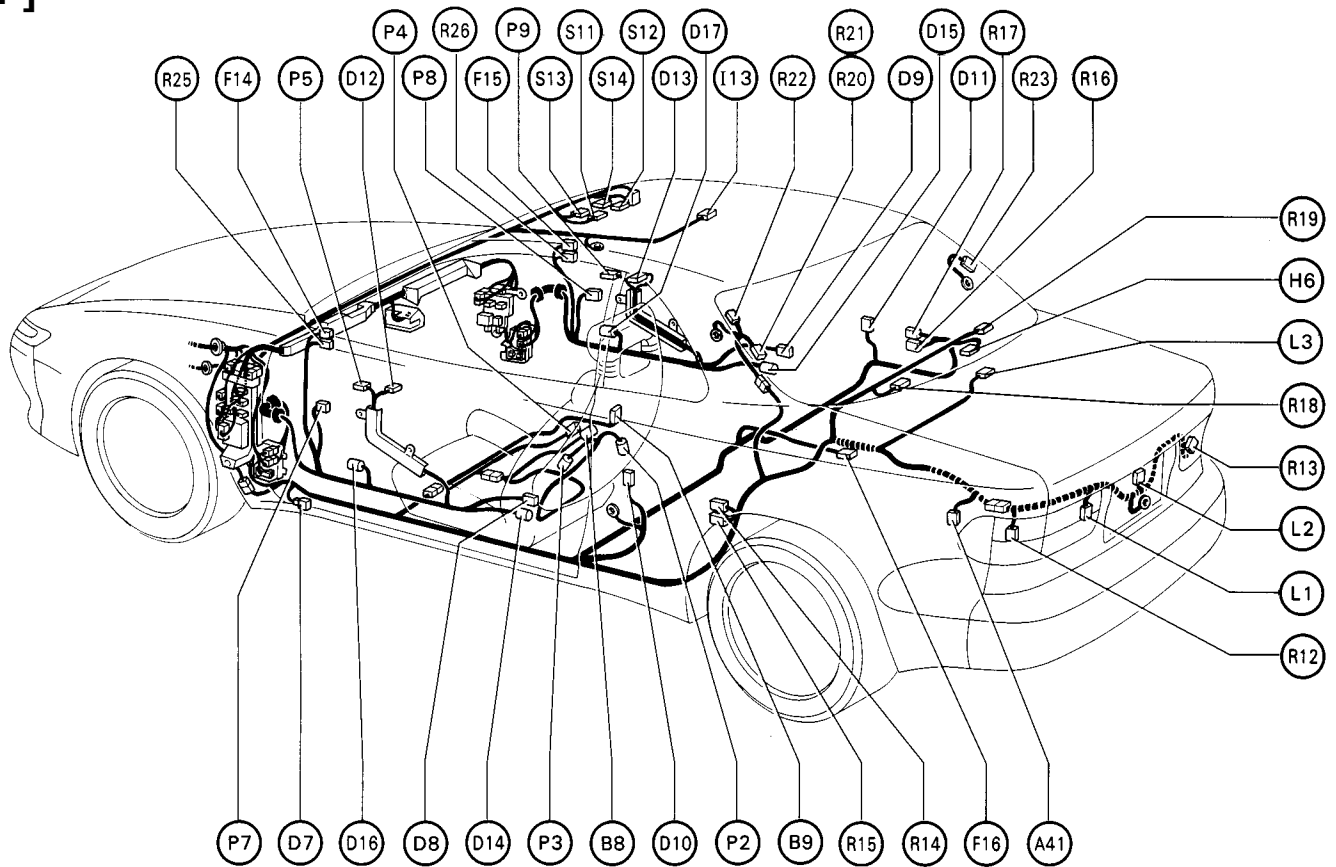

L 1 License Plate Light
 L 2 Luggage Compartment Door Courtesy SW (C/P)
 L 3 Luggage Compartment Light (C/P)
 L 4 Luggage Compartment Light (L/B)

P 2 Power Seat Motor (for Lumbar Support)
 P 3 Power Seat Motor (for Side Support)
 P 4 Power Seat SW
 P 5 Power Window Master SW
 P 7 Power Window Motor LH
 P 8 Power Window Motor RH
 P 9 Power Window SW RH

R 12 Rear Combination Light LH
 R 13 Rear Combination Light RH
 R 14 Rear Speaker LH
 R 15 Rear Speaker LH
 R 16 Rear Speaker RH
 R 17 Rear Speaker RH


R 18 Rear Tweeter (Speaker) LH
 R 19 Rear Tweeter (Speaker) RH
 R 20 Rear Window Defogger
 (+, w/o Diversity Antenna)
 R 21 Rear Window Defogger
 (+, w/ Diversity Antenna)
 R 22 Rear Window Defogger
 (-, C/P, w/ Diversity Antenna)
 R 23 Rear Window Defogger
 (-, w/o Diversity Antenna)
 R 24 Rear Wiper Motor and Relay (L/B)
 R 25 Remote Control Mirror LH
 R 26 Remote Control Mirror RH

S 11 Sun Roof Control Relay
 S 12 Sun Roof Control SW and Personal Light
 S 13 Sun Roof Limit SW
 S 14 Sun Roof Motor

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[Convertible]

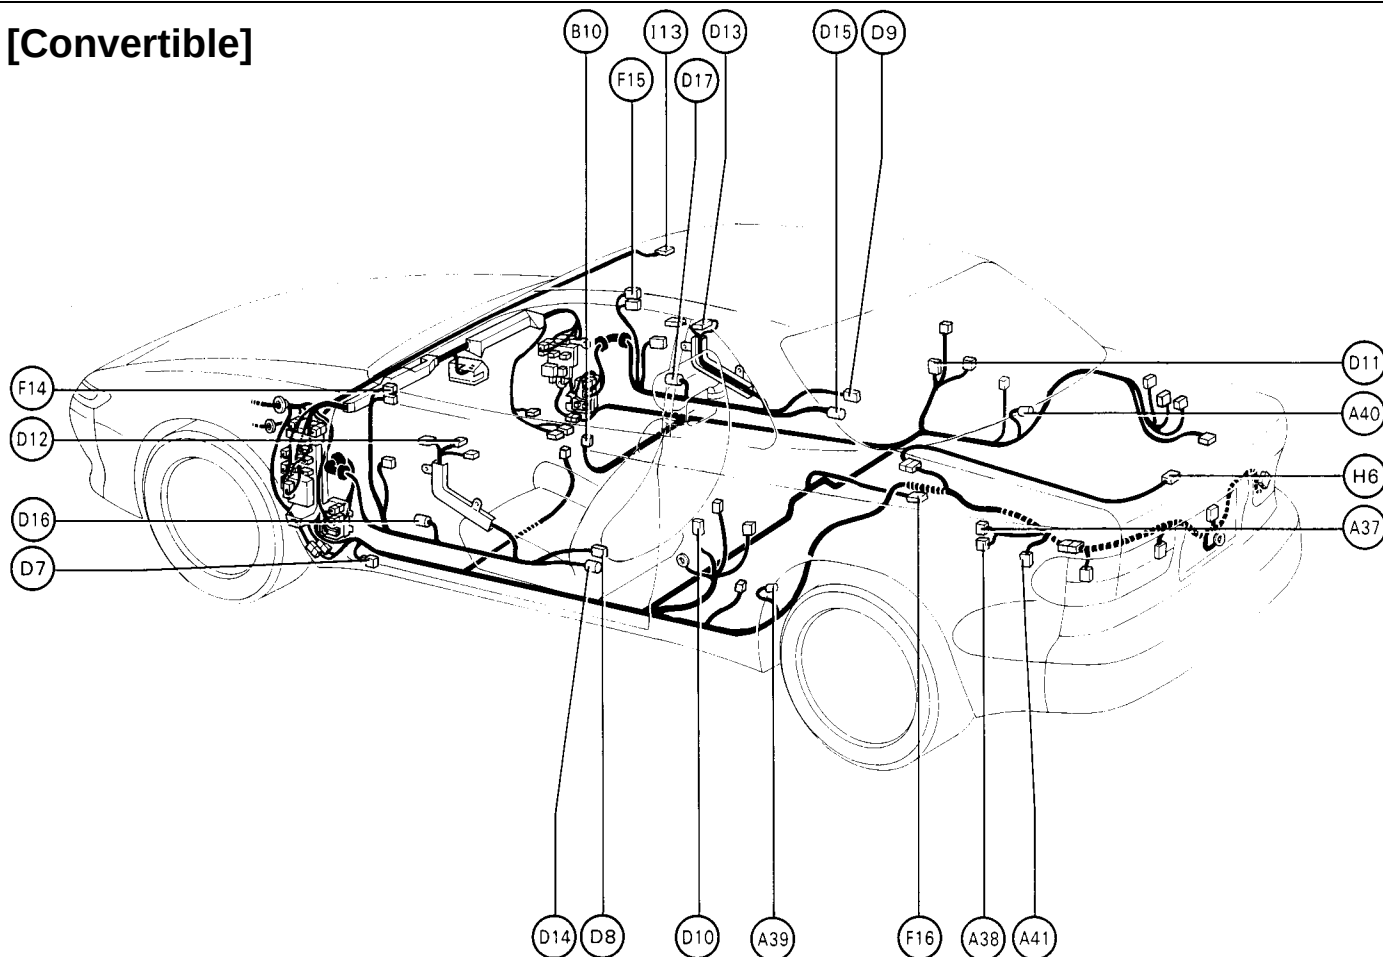

- A 37 ABS ECU
- A 38 ABS ECU
- A 39 ABS Speed Sensor Rear LH
- A 40 ABS Speed Sensor Rear RH
- A 41 Auto Antenna Control Relay and Motor

- B 9 Buckle SW LH (w/o Power Seat)
- B 10 Buckle SW RH (w/o Power Seat)

- D 7 Diode
- D 8 Door Courtesy Light LH
- D 9 Door Courtesy Light RH
- D 10 Door Courtesy SW LH
- D 11 Door Courtesy SW RH

- D 12 Door Lock Control SW LH
- D 13 Door Lock Control SW RH
- D 14 Door Lock Motor, Door Unlock Detection SW LH and Key Lock and Unlock SW LH
- D 15 Door Lock Motor, Door Unlock Detection SW RH and Key Lock and Unlock SW RH
- D 16 Door Speaker LH
- D 17 Door Speaker RH


- F 14 Front Tweeter (Speaker) LH
- F 15 Front Tweeter (Speaker) RH
- F 16 Fuel Pump and Fuel Sender

- H 6 High Mount Stop Light

- I 13 Interior Light

Position of Parts in Body

[Convertible]

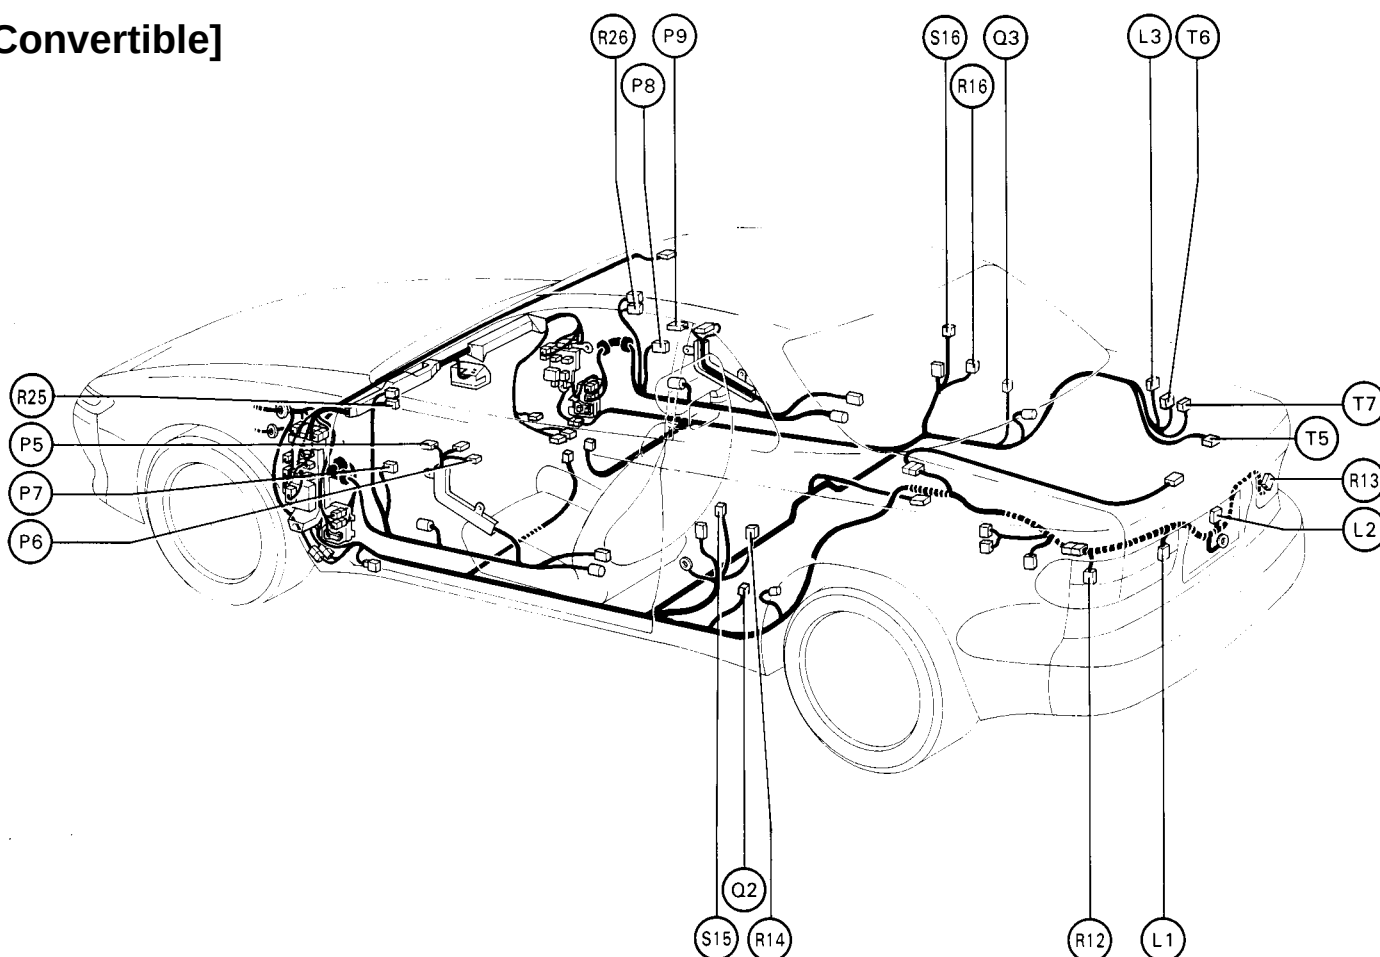

- L 1 Licence Plate Light
- L 2 Luggage Compartment Door Courtesy SW
- L 3 Luggage Compartment Light

- P 5 Power Window Master SW
- P 6 Power Window Master SW
- P 7 Power Window Motor LH
- P 8 Power Window Motor RH
- P 9 Power Window SW RH

- Q 2 Quarter Power Window Motor LH
- Q 3 Quarter Power Window Motor RH

- R 12 Rear Combination Light LH
- R 13 Rear Combination Light RH
- R 14 Rear Speaker LH
- R 16 Rear Speaker RH
- R 25 Remote Control Mirror LH
- R 26 Remote Control Mirror RH

- S 15 Seat Belt Solenoid (Driver's)
- S 16 Seat Belt Solenoid (Passenger's)


- T 5 Top Stack Motor
- T 6 Top Stack Relay
- T 7 Top Stack Relay

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[3S-GTE]

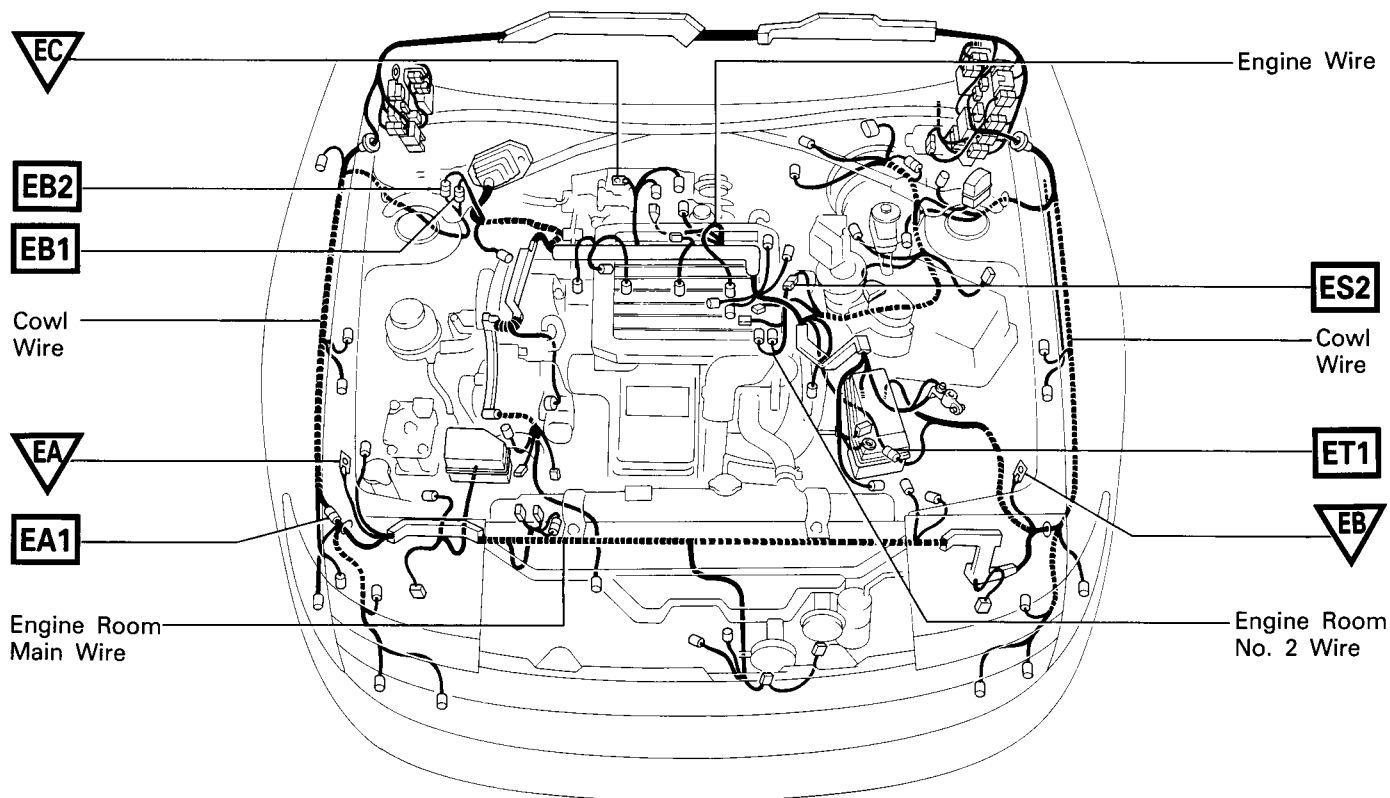

○ : Location of Splice Points

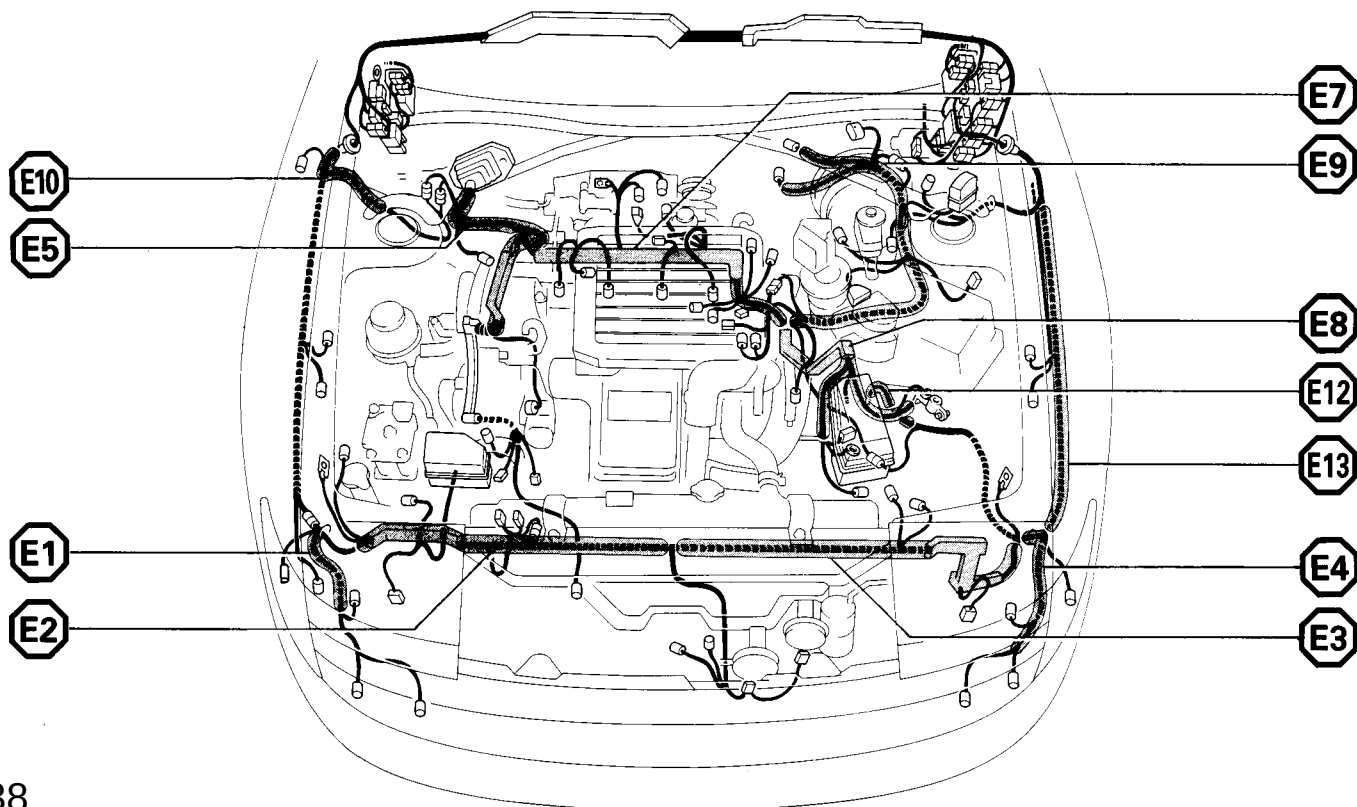

Connector Joining Wire Harness and Wire Harness

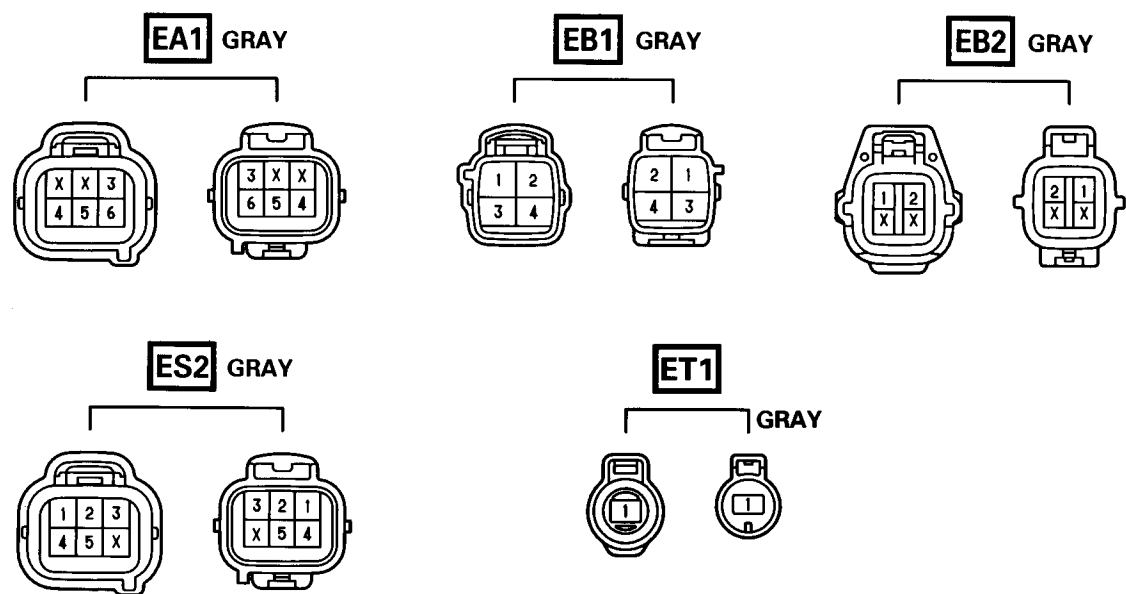


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ES2	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[5S-FE]

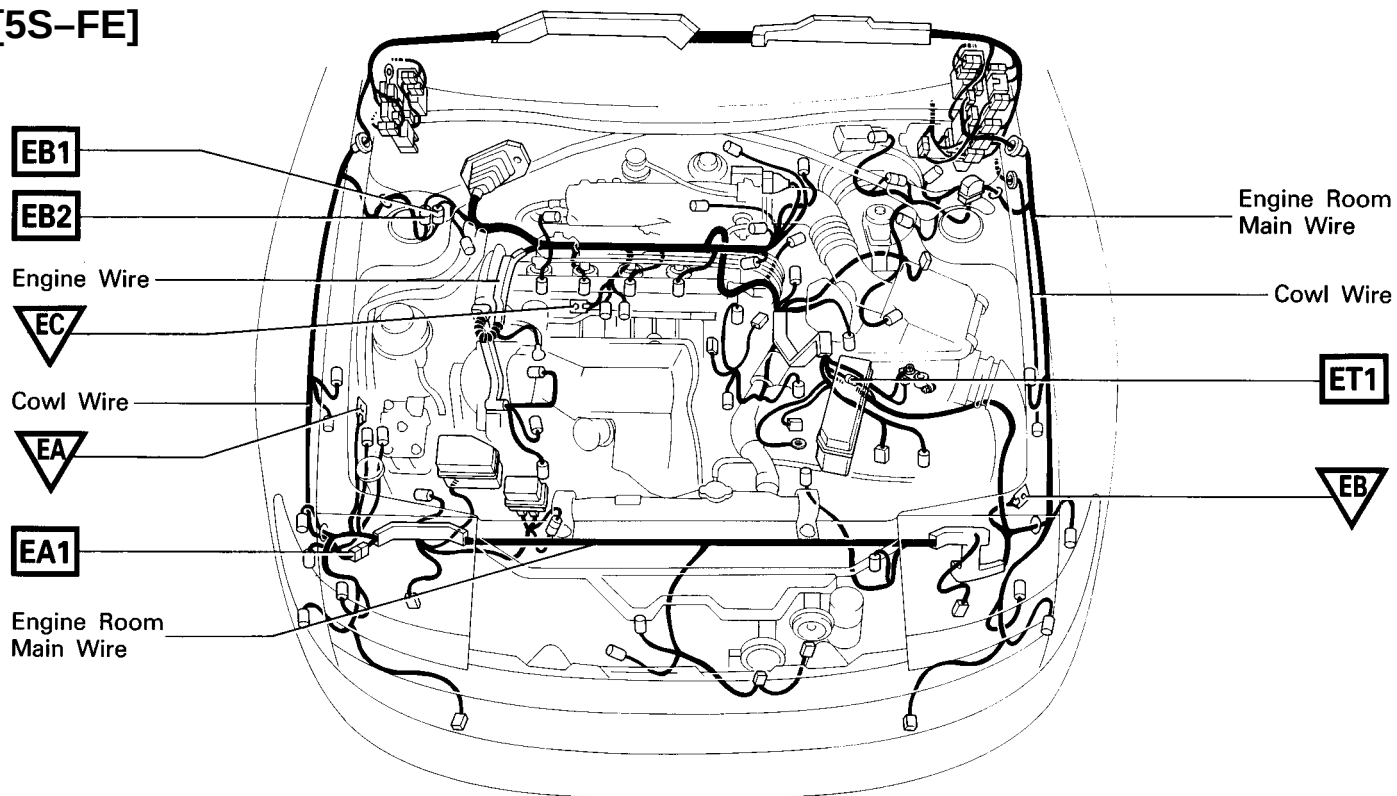

○ : Location of Splice Points

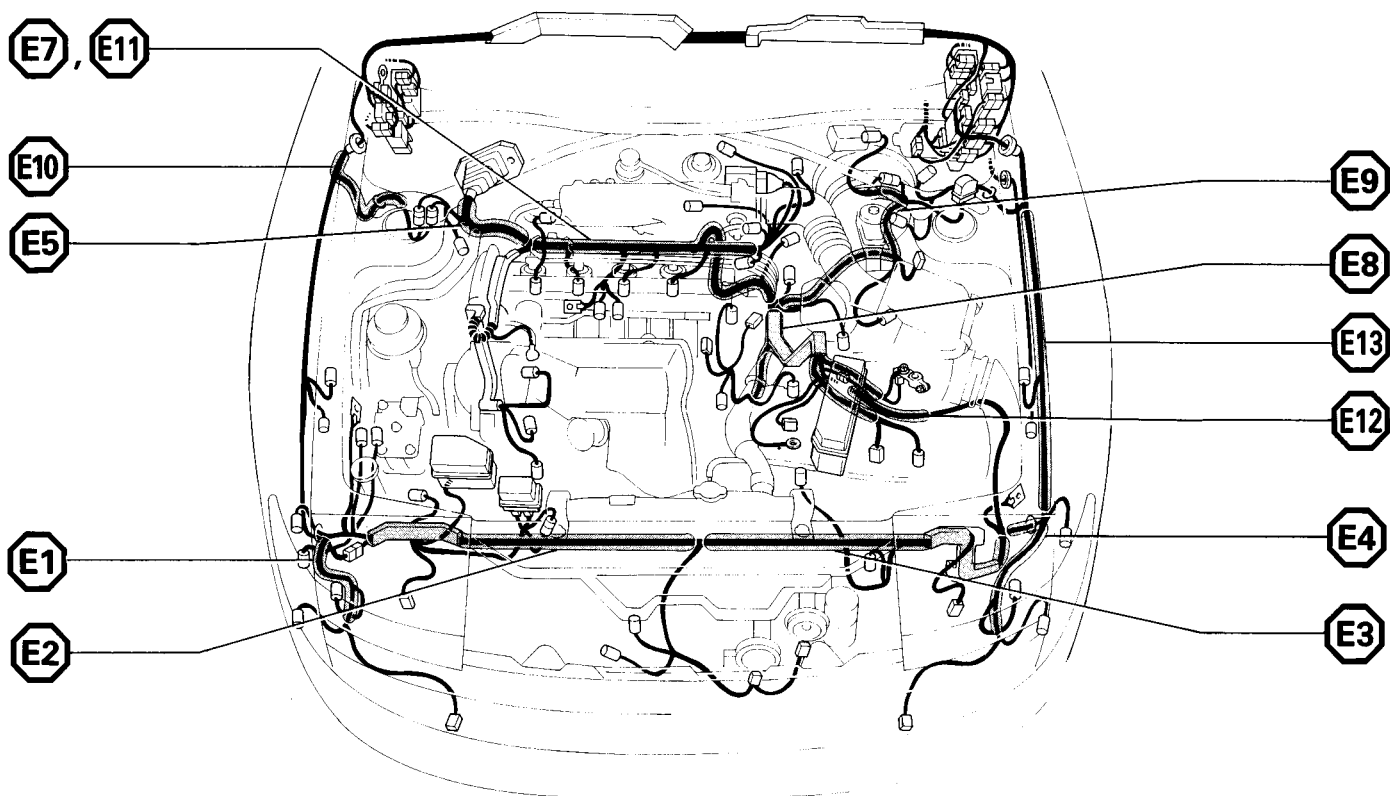

Connector Joining Wire Harness and Wire Harness

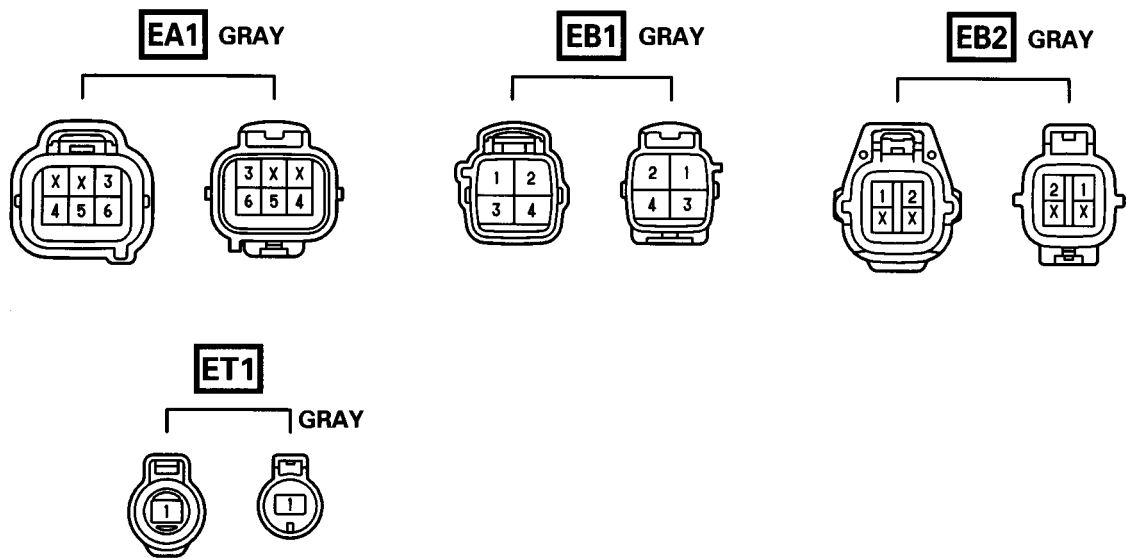


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[4A-FE]

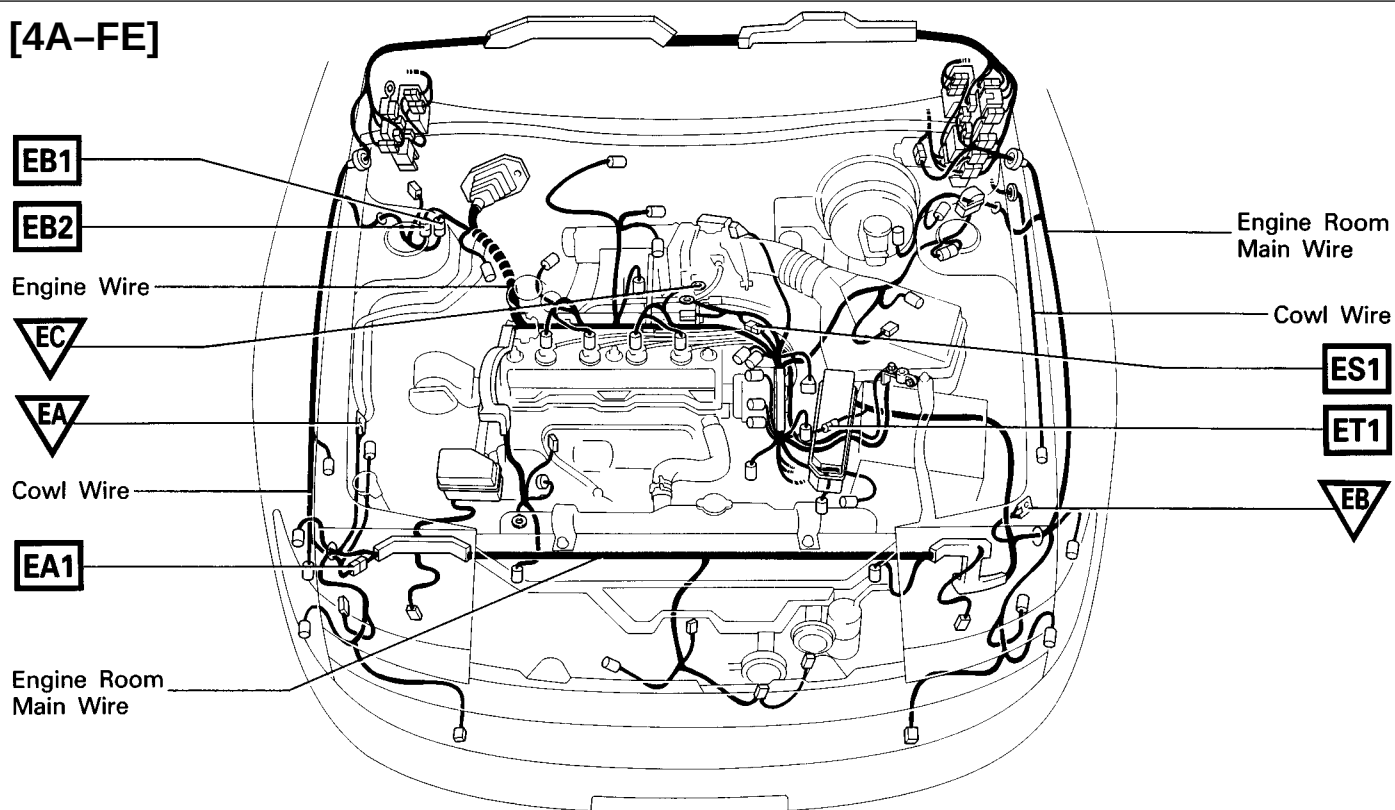

○ : Location of Splice Points

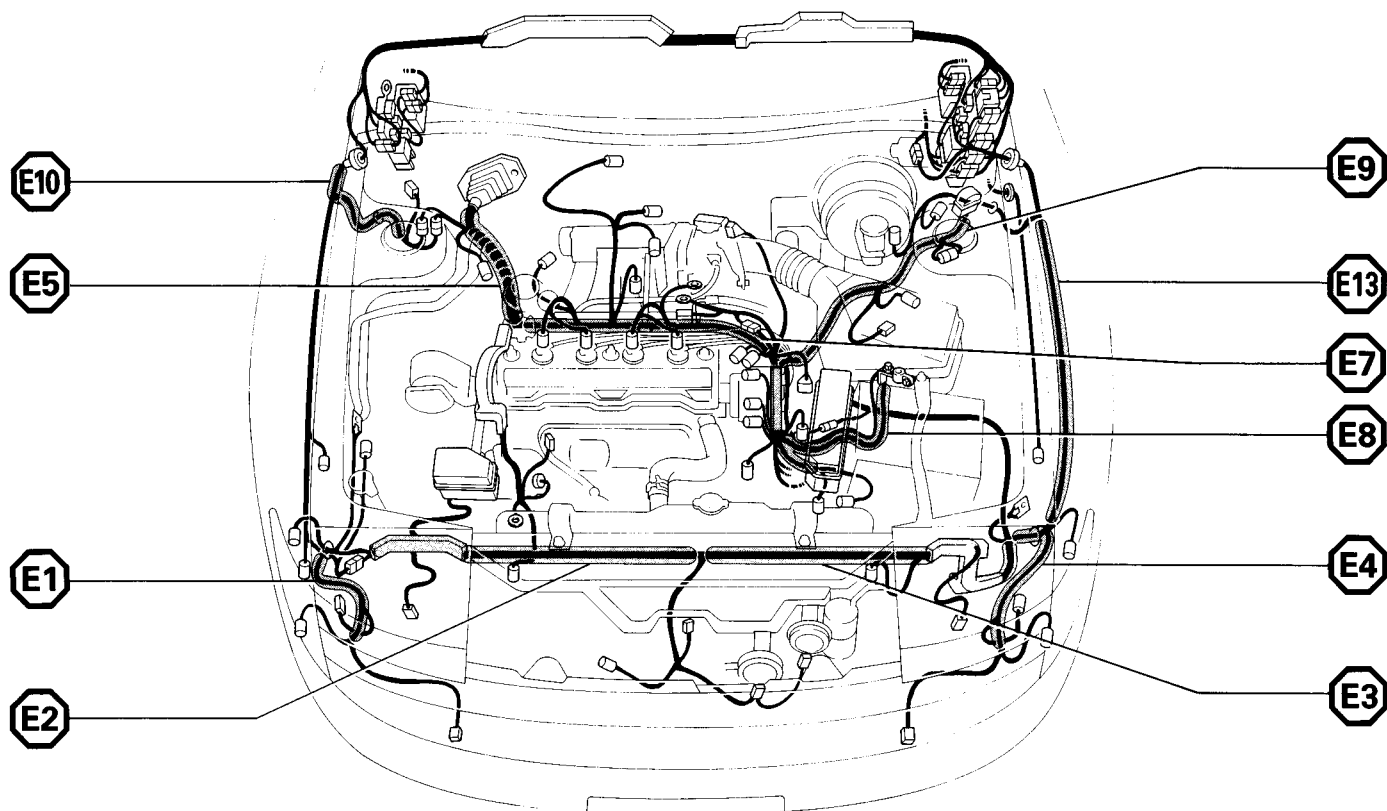


Connector Joining Wire Harness and Wire Harness

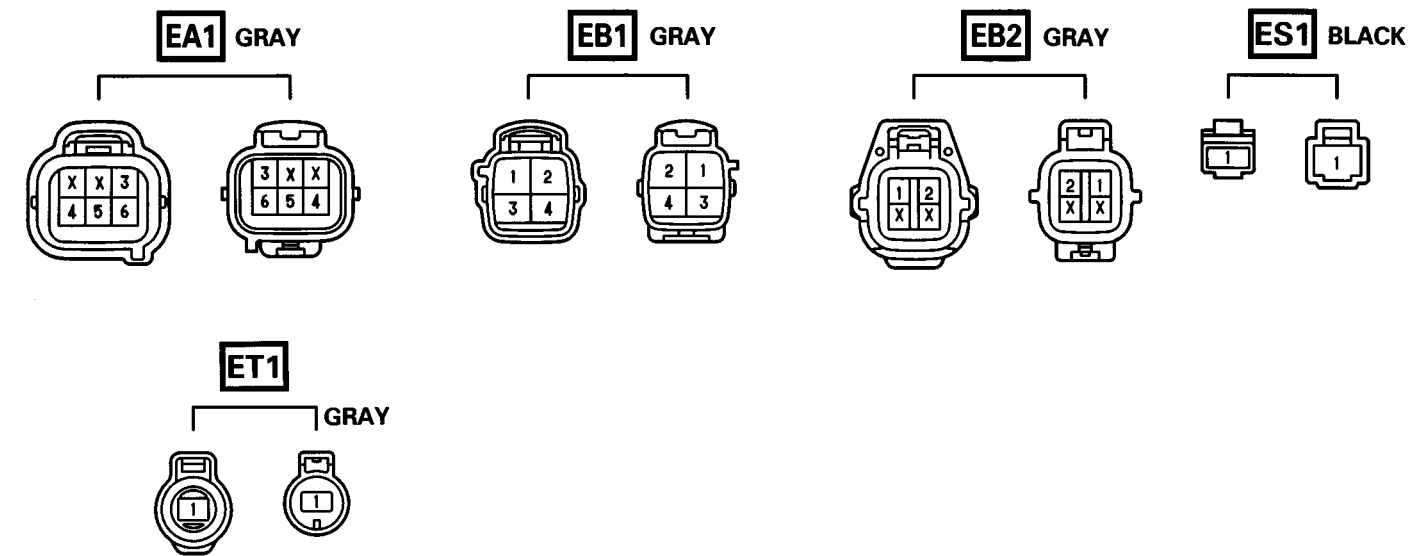


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ES1	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE STARTER)
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

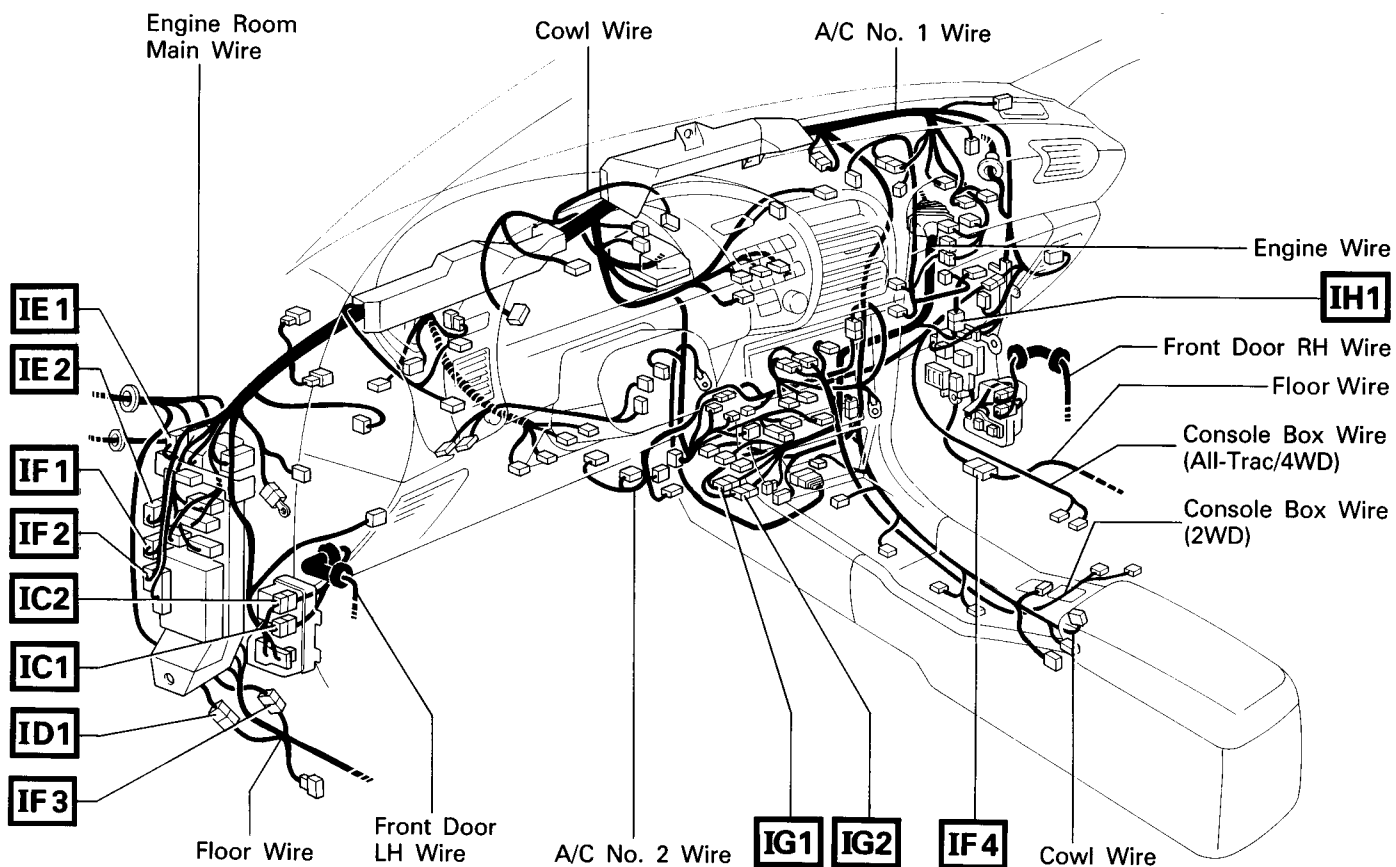

▽ : Location of Ground Points

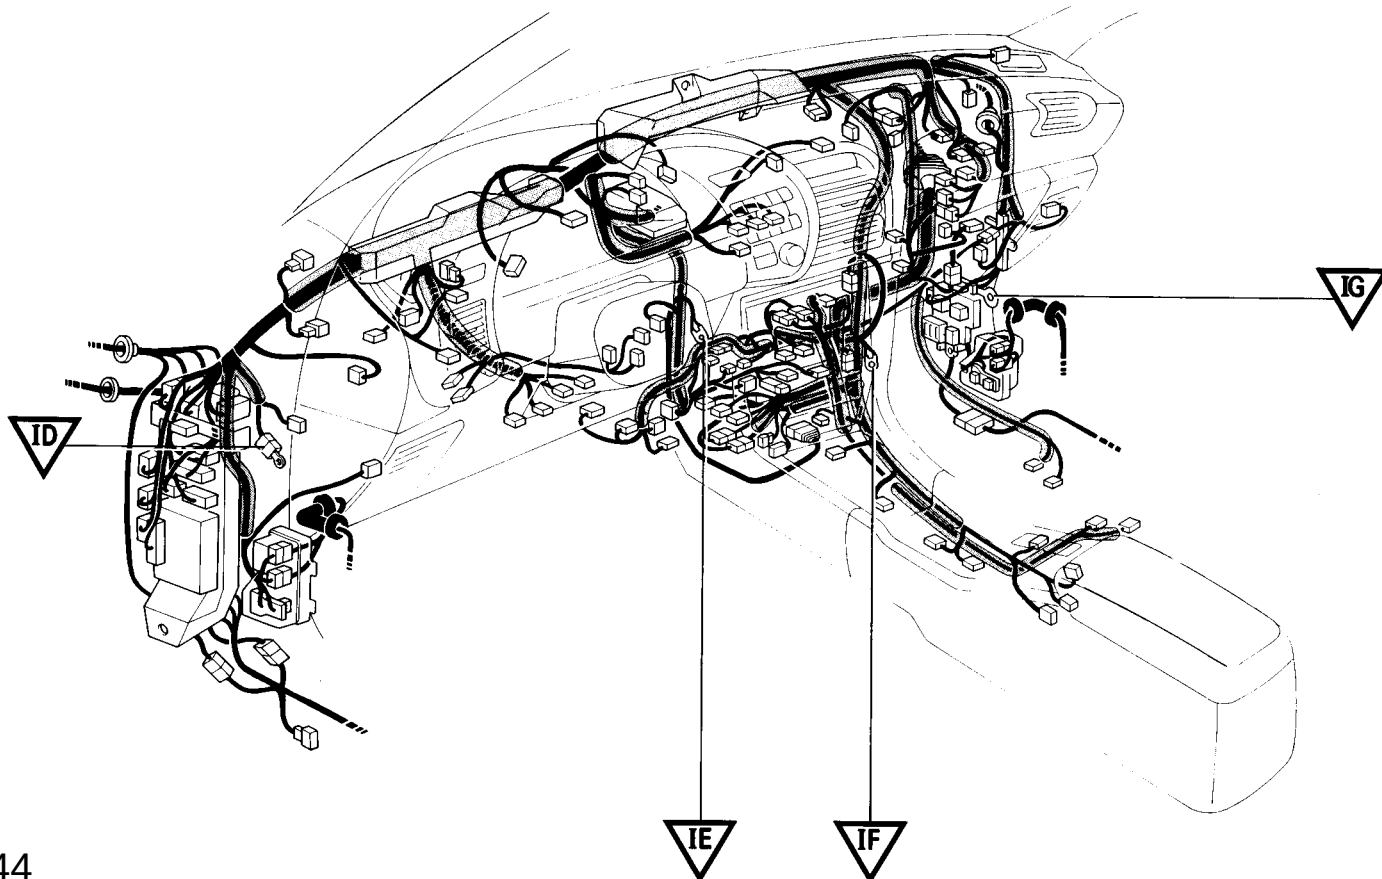


Connector Joining Wire Harness and Wire Harness

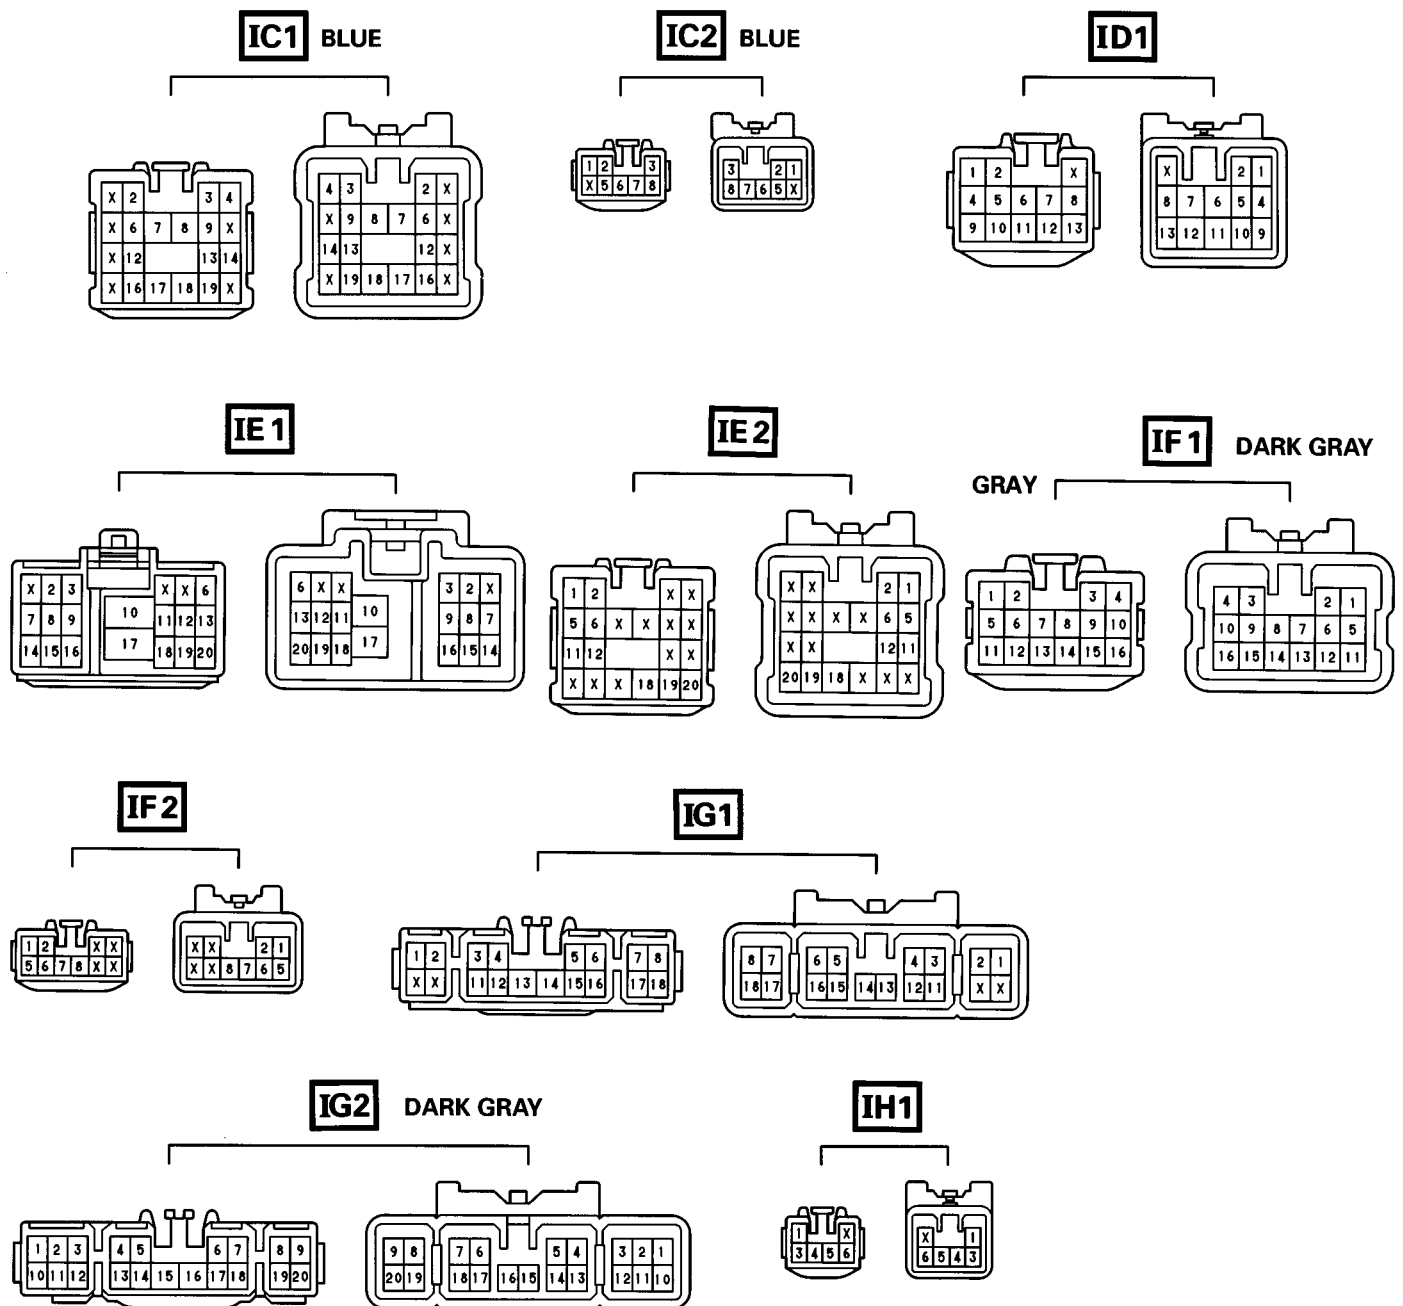


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE1	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IH1	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

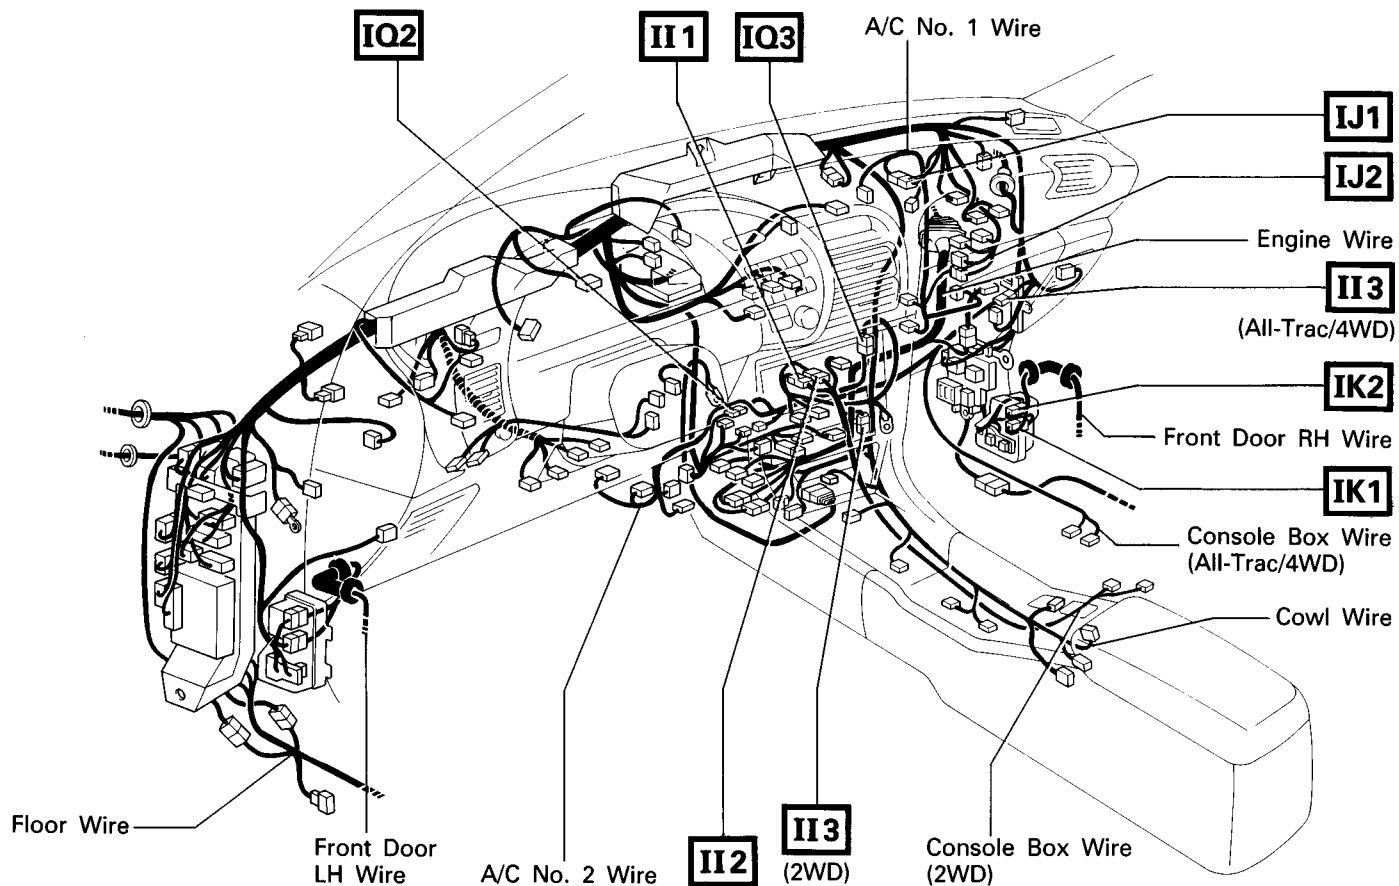

○ : Location of Splice Points

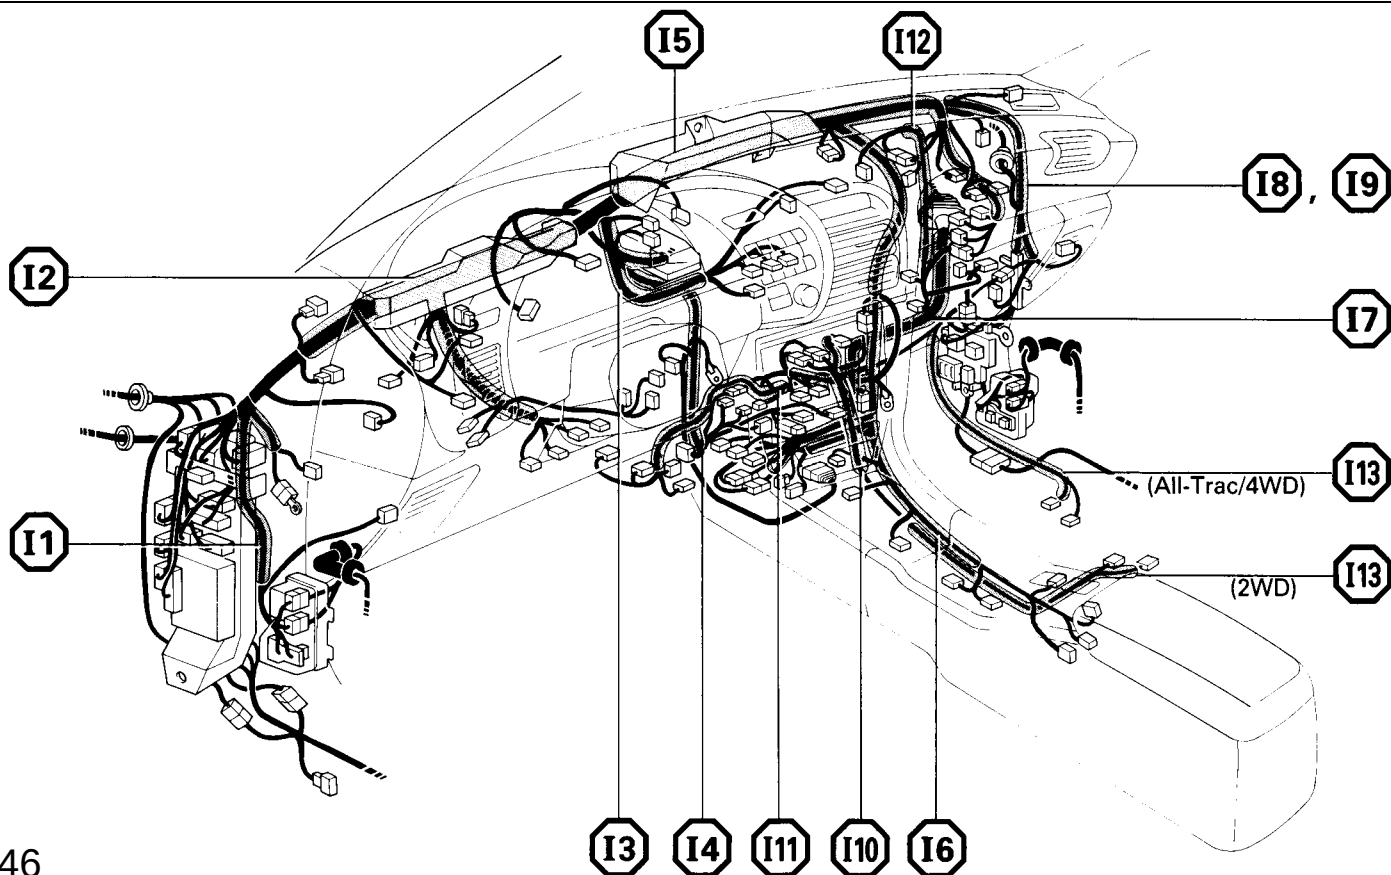

Connector Joining Wire Harness and Wire Harness

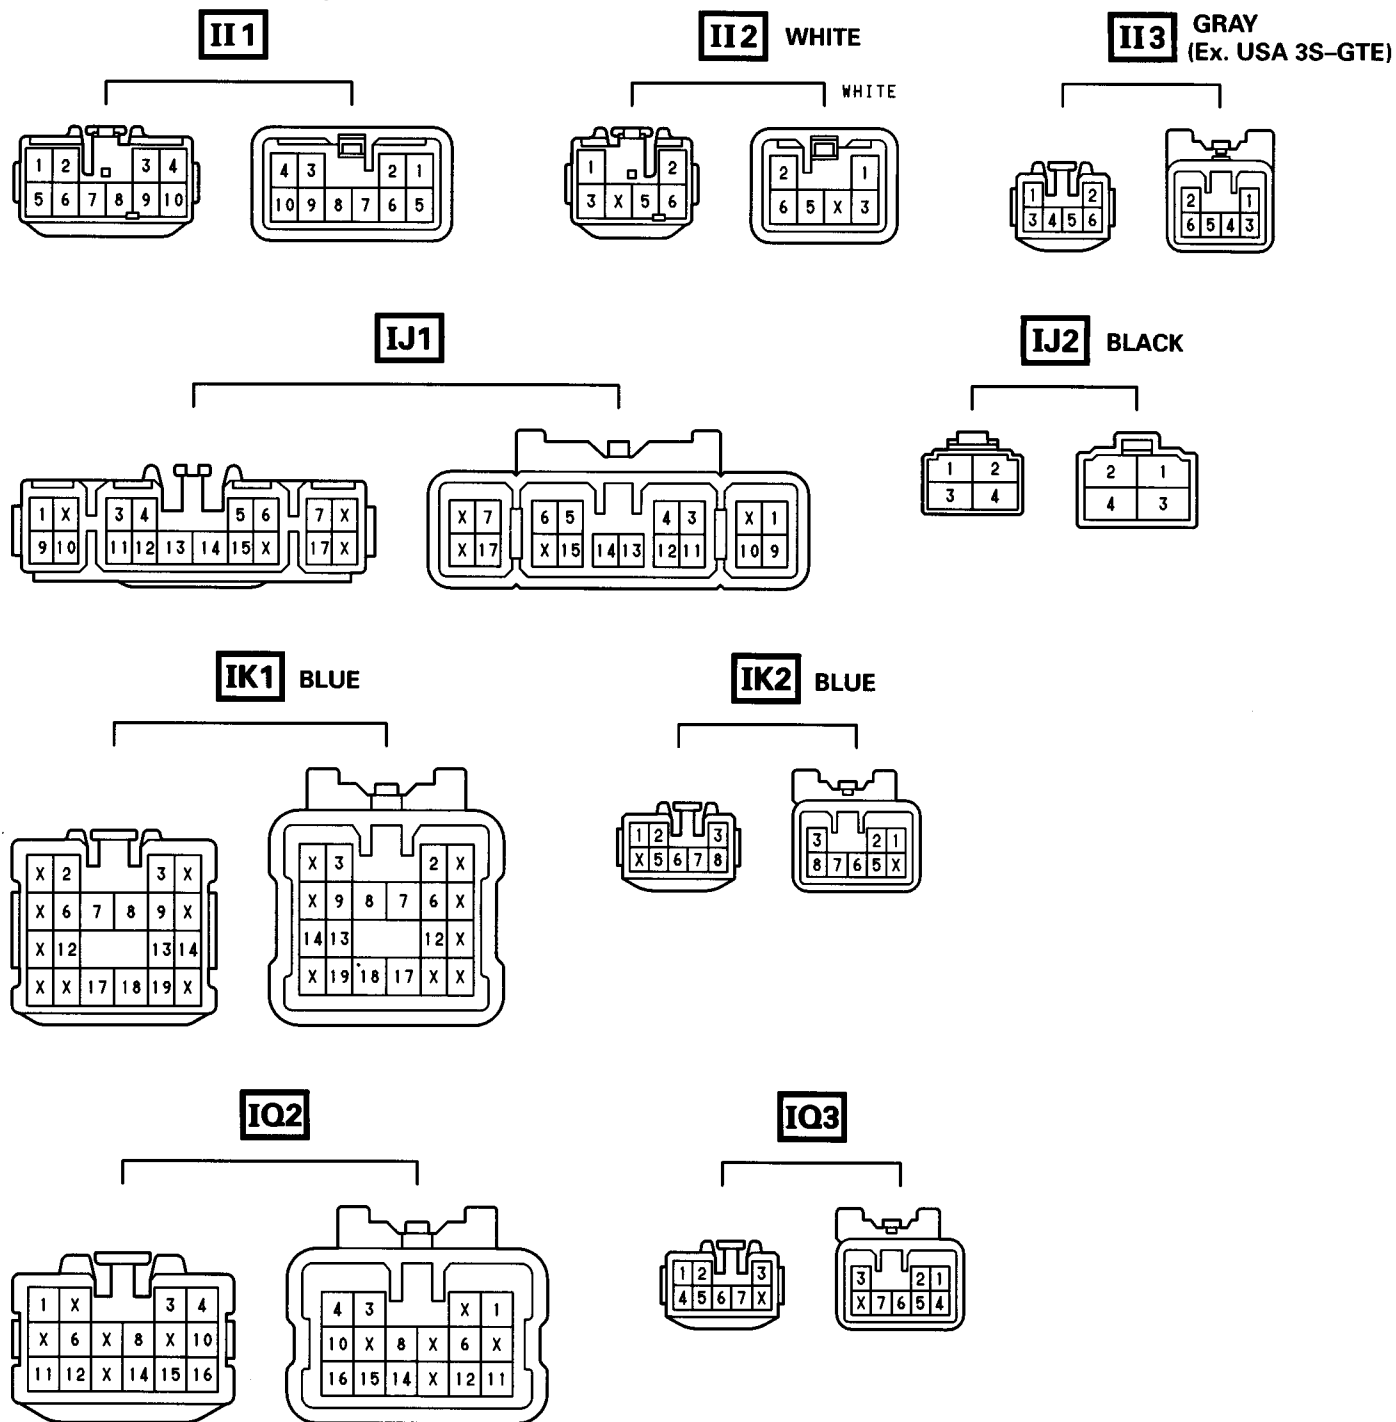


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2	
II3	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF ALL-TRACK/4WD)
	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF 2WD)
IJ1	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ2	
IK1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK2	
IQ2	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
IQ3	

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[L/B]

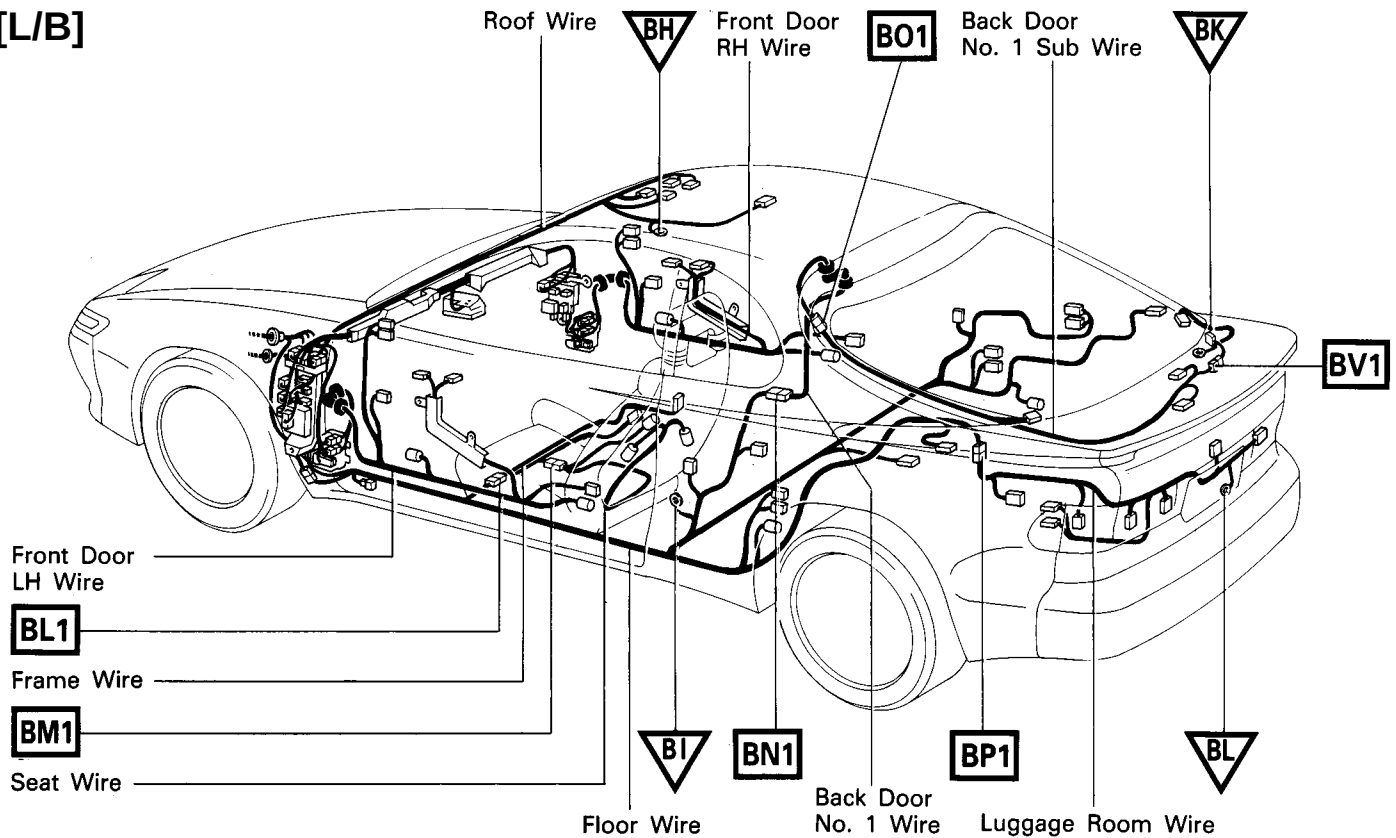

○ : Location of Splice Points

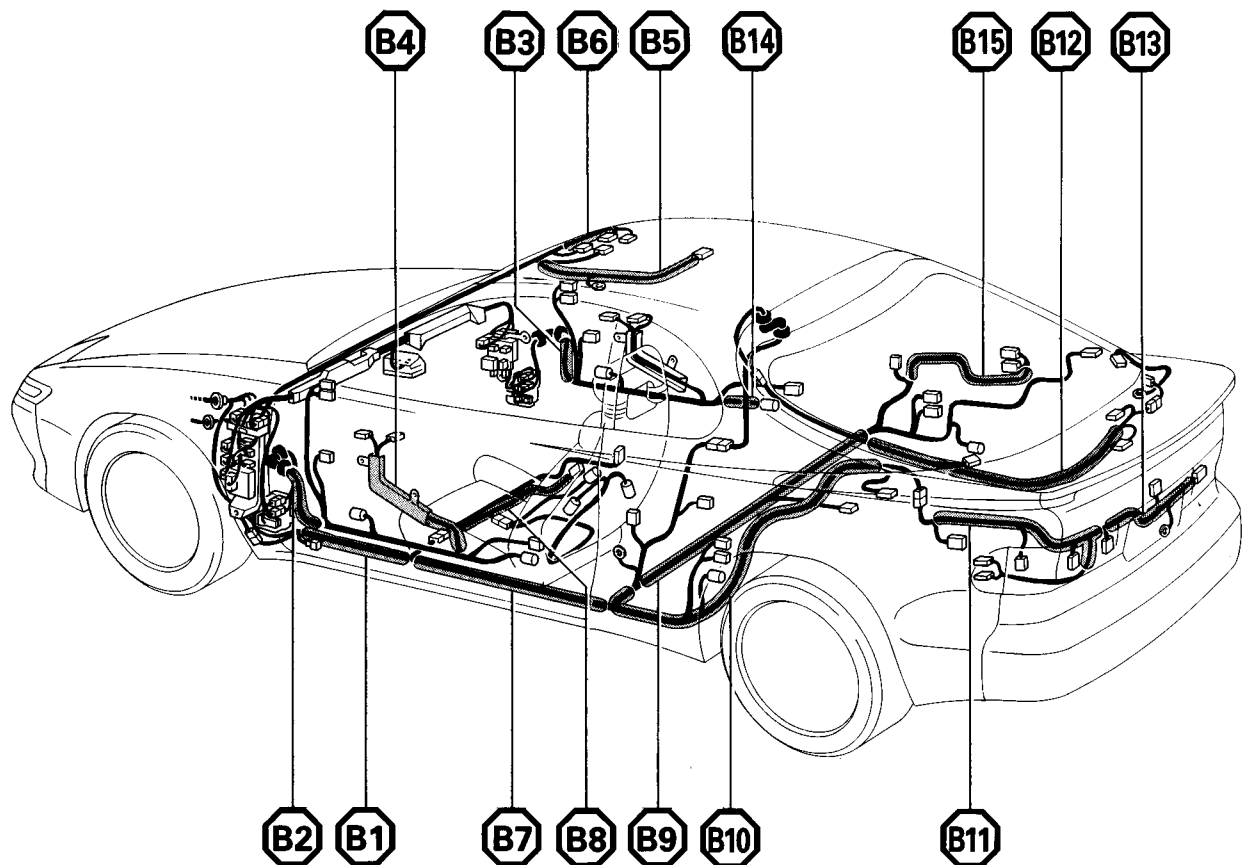

Connector Joining Wire Harness and Wire Harness

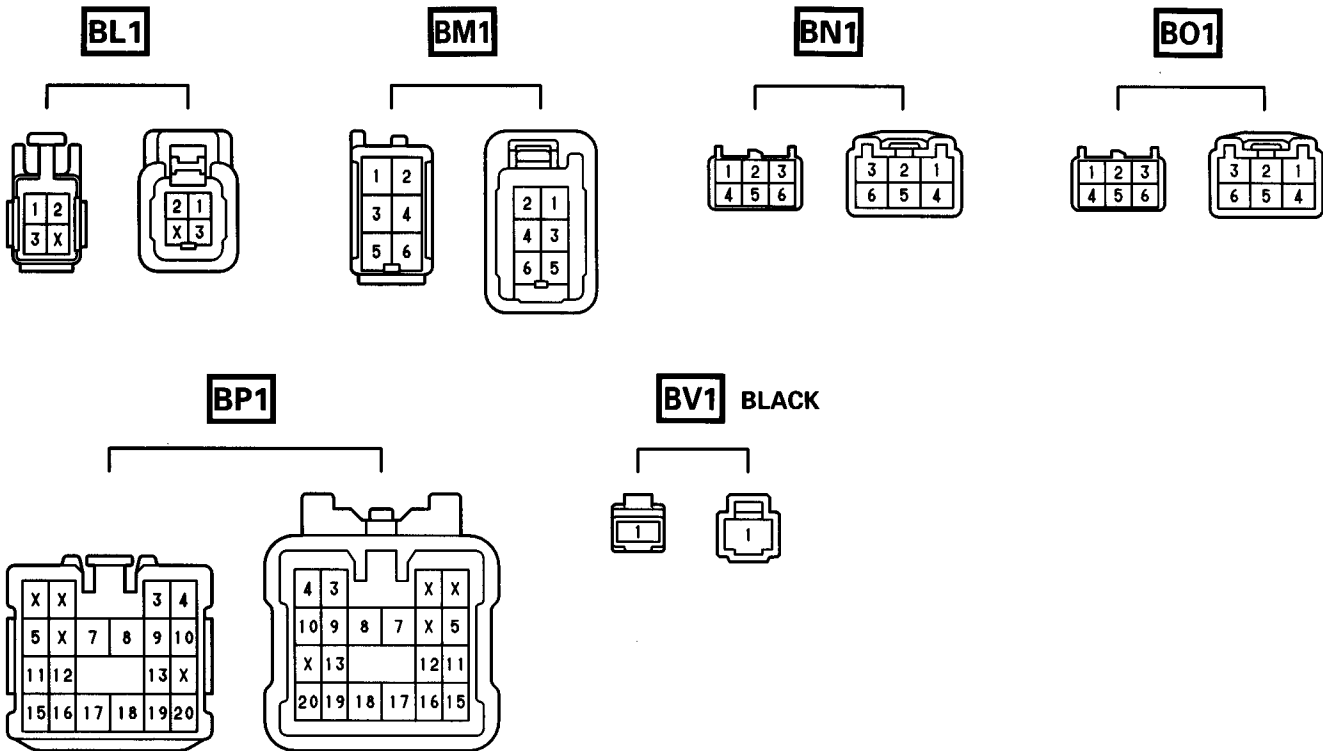


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BL1	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
BM1	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
BN1	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BV1	BACK DOOR NO. 1 SUB WIRE AND REAR WINDOW DEFOGGER WIRE (BACK DOOR RIGHT)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[C/P]

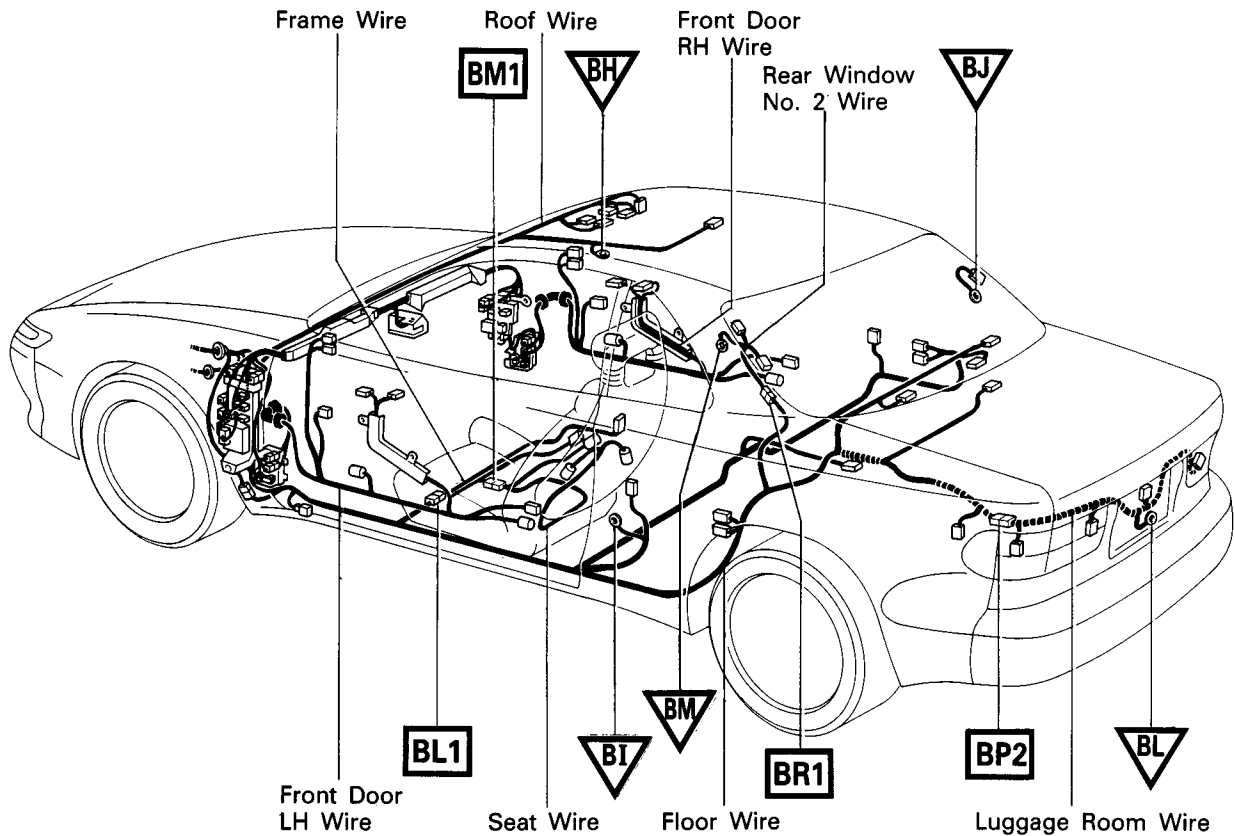

○ : Location of Splice Points

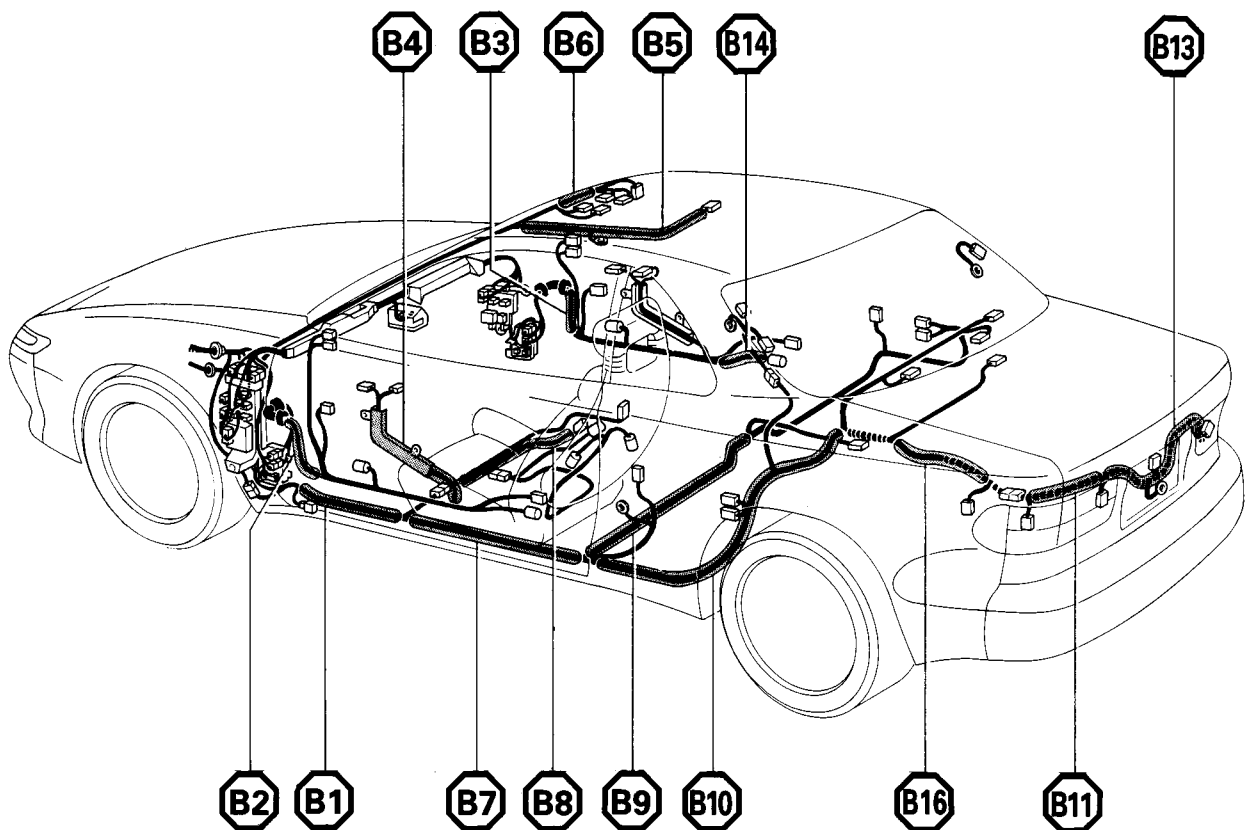

Connector Joining Wire Harness and Wire Harness

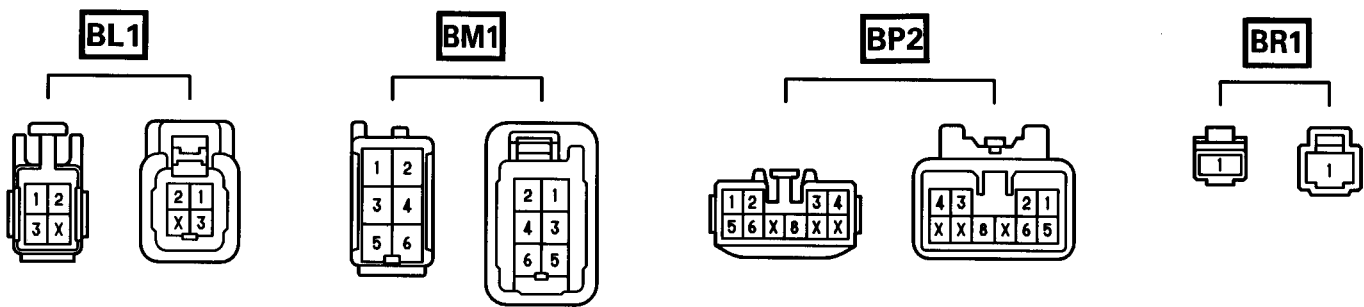


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BL1	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
BM1	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
BP2	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
BR1	FLOOR WIRE AND REAR WINDOW NO. 2 WIRE (LEFT REAR PILLAR)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[C/P]

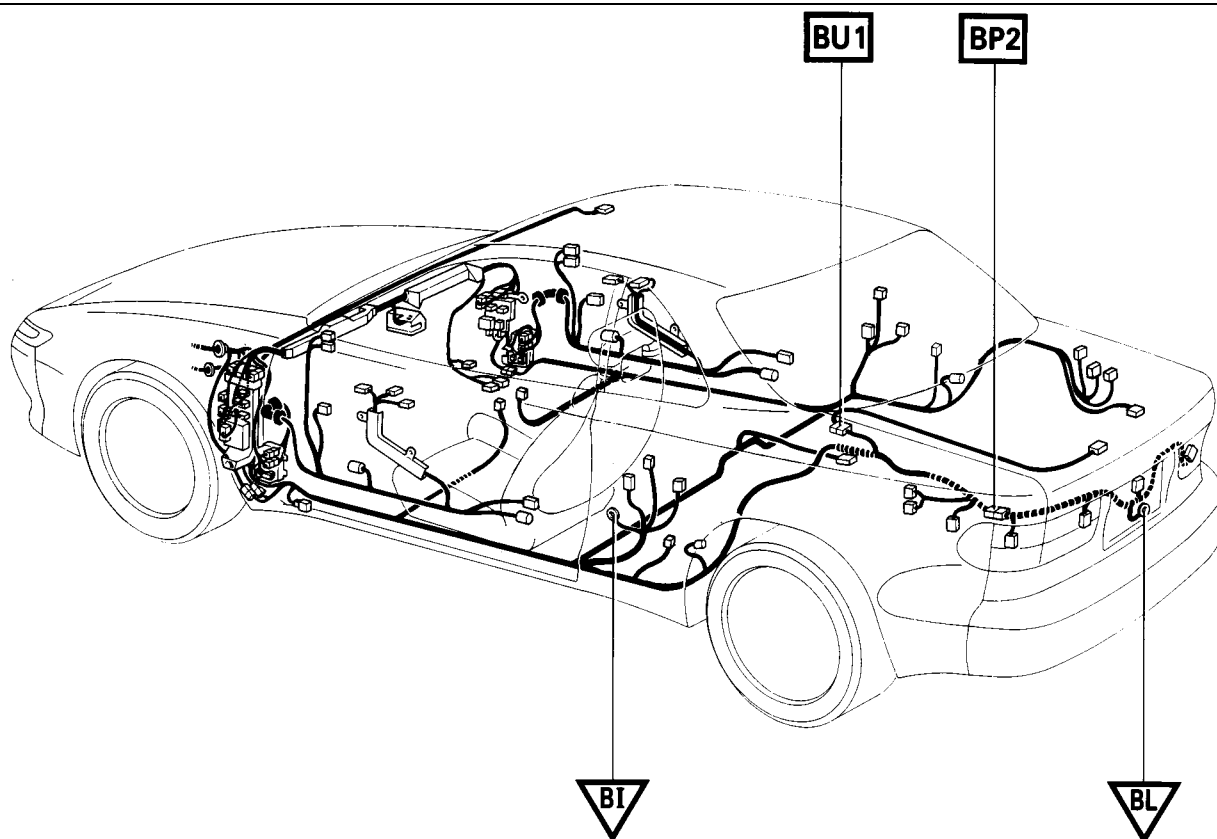

○ : Location of Splice Points

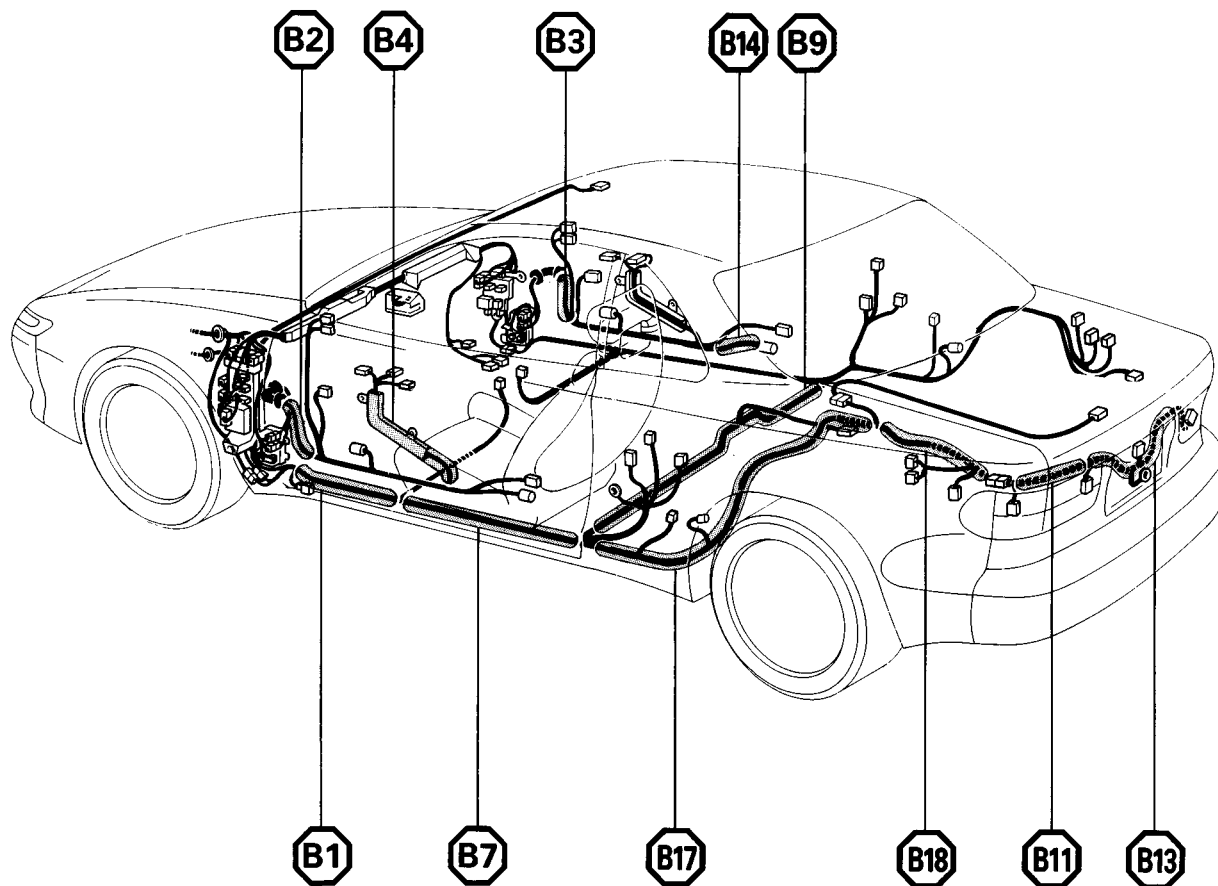

Connector Joining Wire Harness and Wire Harness

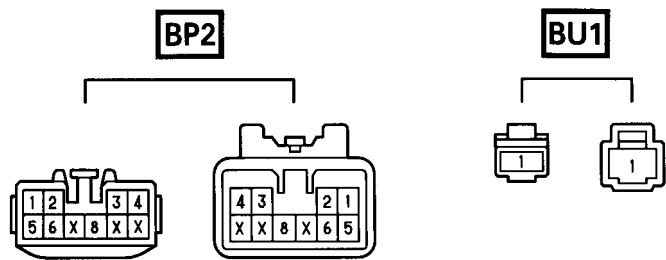

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BP2	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
BU1	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LUGGAGE COMPARTMENT LEFT)