

ENGINE CONTROL (3S-GTE)

SYSTEM OUTLINE

THE ENGINE CONTROL SYSTEM UTILIZES A MICROCOMPUTER AND MAINTAINS OVERALL CONTROL OF THE ENGINE AN OUTLINE OF ENGINE CONTROL IS GIVEN HERE.

1. INPUT SIGNALS

(1) ENGINE COOLANT TEMP. (WATER TEMP.) SIGNAL SYSTEM

THE ENGINE COOLANT TEMPERATURE SENSOR (EFI WATER TEMP. SENSOR) DETECTS THE ENGINE COOLANT TEMP. AND HAS A BUILT-IN THERMISTOR WITH A RESISTANCE WHICH VARIES ACCORDING TO THE ENGINE COOLANT TEMP. (WATER TEMP.). THUS THE ENGINE COOLANT TEMP (WATER TEMP.). IS INPUT IN THE FORM OF A CONTROL SIGNAL TO **TERMINAL THW** OF THE ENGINE CONTROL MODULE (ECU).

(2) INTAKE AIR TEMP. SIGNAL SYSTEM

THE INTAKE AIR TEMP. SENSOR IS INSTALLED INSIDE THE VOLUME AIR FLOW (AIR FLOW METER) AND DETECTS THE INTAKE AIR TEMP. WHICH IS INPUT AS A CONTROL SIGNAL TO **TERMINAL THA** OF THE ENGINE CONTROL MODULE (ECU).

(3) HEATED OXYGEN SENSOR (OXYGEN SENSOR) SIGNAL SYSTEM

THE HEATED OXYGEN DENSITY IN THE EXHAUST EMISSIONS IS DETECTED AND INPUT AS A CONTROL SIGNAL TO **TERMINAL OX1** OF THE ENGINE CONTROL MODULE (ECU). TO MAINTAIN STABLE DETECTION PERFORMANCE BY THE HEATED OXYGEN SENSOR (OXYGEN SENSOR), A HEATER IS USED FOR WARMING THE SENSOR. THE HEATER IS ALSO CONTROLLED BY THE ENGINE CONTROL MODULE (ECU) (HT).

(4) RPM SIGNAL SYSTEM

CRANKSHAFT POSITION IS DETECTED BY THE PICK-UP COIL INSTALLED INSIDE THE DISTRIBUTOR. CRANKSHAFT POSITION IS INPUT AS A CONTROL SIGNAL TO **TERMINALS G1** AND **G2** OF THE ENGINE CONTROL MODULE (ECU), AND RPM IS INPUT TO **TERMINAL NE**.

(5) THROTTLE SIGNAL SYSTEM

THE THROTTLE POSITION SENSOR DETECTS THE THROTTLE VALVE OPENING ANGLE WHICH IS INPUT AS A CONTROL SIGNAL TO **TERMINAL VTA** OF THE ENGINE CONTROL MODULE (ECU), OR WHEN THE VALVE IS FULLY CLOSED, TO **TERMINAL IDL**.

(6) VEHICLE SPEED SIGNAL SYSTEM

THE SPEED SENSOR, INSTALLED INSIDE THE COMBINATION METER, DETECTS THE VEHICLE SPEED AND INPUTS A CONTROL SIGNAL TO **TERMINAL SPD** OF THE ENGINE CONTROL MODULE (ECU).

(7) A/C SW SIGNAL SYSTEM

THE OPERATING VOLTAGE OF THE A/C MAGNETIC CLUTCH IS DETECTED AND INPUT IN THE FORM OF A CONTROL SIGNAL TO **TERMINAL AC1** OF THE ENGINE CONTROL MODULE (ECU).

(8) BATTERY SIGNAL SYSTEM

VOLTAGE IS CONSTANTLY APPLIED TO **TERMINAL BATT** OF THE ENGINE CONTROL MODULE (ECU). WHEN THE IGNITION SW IS TURNED TO ON, VOLTAGE FOR ENGINE CONTROL MODULE (ECU) OPERATION IS APPLIED VIA THE EFI MAIN RELAY TO **TERMINALS +B** AND **B1** OF THE ENGINE CONTROL MODULE (ECU).

(9) INTAKE AIR VOLUME SIGNAL SYSTEM

INTAKE AIR VOLUME IS DETECTED BY THE POTENTIOMETER INSTALLED INSIDE THE VOLUME AIR FLOW (AIR FLOW METER) AND IS INPUT AS A CONTROL SIGNAL TO **TERMINAL VS** OF THE ENGINE CONTROL MODULE (ECU).

(10) STOP LIGHT SW SIGNAL SYSTEM

THE STOP LIGHT SW IS USED TO DETECT WHETHER OR NOT THE VEHICLE IS BRAKING AND THE INFORMATION IS INPUT AS A CONTROL SIGNAL TO **TERMINAL STP** OF THE ENGINE CONTROL MODULE (ECU).

(11) STA SIGNAL SYSTEM

TO CONFIRM THAT THE ENGINE IS CRANKING, THE VOLTAGE APPLIED TO THE STARTER MOTOR DURING CRANKING IS DETECTED AND IS INPUT AS A CONTROL SIGNAL TO **TERMINAL STA** OF THE ENGINE CONTROL MODULE (ECU).

(12) ENGINE KNOCK CONTROL SYSTEM

ENGINE KNOCKING IS DETECTED BY THE KNOCK SENSOR AND INPUT AS A CONTROL SIGNAL TO **TERMINAL KNK** OF THE ENGINE CONTROL MODULE (ECU).

(13) ELECTRICAL IDLE-UP SYSTEM

THE SIGNAL WHEN SYSTEMS SUCH AS THE REAR WINDOW DEFOGGER, HEADLIGHTS, ETC. WHICH CAUSE A HIGH ELECTRICAL BURDEN ARE ON IS INPUT TO **TERMINAL ELS** AS A CONTROL SIGNAL.

2. CONTROL SYSTEM

* SFI (SEQUENTIAL MULTIPOINT FUEL INJECTION) (EFI) SYSTEM

THE SFI (EFI) SYSTEM MONITORS THE ENGINE CONDITIONS THROUGH THE SIGNALS EACH SENSOR (INPUT SIGNALS (1) TO (12)) INPUTS TO THE ENGINE CONTROL MODULE (ECU). BASED ON THIS DATA AND THE PROGRAM MEMORIZED IN THE ENGINE CONTROL MODULE (ECU). THE MOST APPROPRIATE FUEL INJECTION TIMING IS DECIDED AND CURRENT IS OUTPUT TO **TERMINALS #1, #2, #3 AND #4** OF THE ENGINE CONTROL MODULE (ECU). CAUSING THE INJECTORS TO OPERATE (TO INJECT FUEL). IT IS THIS SYSTEM WHICH THROUGH THE WORK OF THE ENGINE CONTROL MODULE (ECU). FINELY CONTROLS FUEL INJECTION IN RESPONSE TO DRIVING CONDITIONS.

* ESA (ELECTRONIC SPARK ADVANCE) SYSTEM

THE ESA SYSTEM MONITORS THE ENGINE CONDITIONS USING THE SIGNALS (INPUT SIGNALS (1, 3, 4, 6, 7, 9, 11)) INPUT TO THE ENGINE CONTROL MODULE (ECU) FROM EACH SENSOR. BASED ON THIS DATA AND THE PROGRAM MEMORIZED IN THE ENGINE CONTROL MODULE (ECU). THE MOST APPROPRIATE IGNITION TIMING IS DECIDED AND CURRENT IS OUTPUT TO **TERMINAL IGT** OF THE ENGINE CONTROL MODULE (ECU). THIS OUTPUT CONTROLS THE IGNITER TO PRODUCE THE MOST APPROPRIATE IGNITION TIMING FOR THE DRIVING CONDITIONS.

* FUEL PUMP CONTROL SYSTEM

COMPUTER OPERATION OUTPUTS TO **TERMINAL FPR** AND CONTROLS THE FUEL PUMP CONTROL RELAY AND THUS CONTROLS THE FUEL PUMP DRIVE SPEED IN RESPONSE TO CONDITIONS.

* OXYGEN SENSOR HEATER CONTROL SYSTEM

THE OXYGEN SENSOR HEATER CONTROL SYSTEM TURNS THE HEATER TO ON WHEN THE INTAKE AIR VOLUME IS LOW (TEMP. OF EXHAUST EMISSIONS LOW). AND WARMS UP THE OXYGEN SENSOR TO IMPROVE DETECTION PERFORMANCE OF THE SENSOR. THE ENGINE CONTROL MODULE (ECU) EVALUATES THE SIGNALS FROM EACH SENSOR (INPUT SIGNALS (1, 6, 8, 9, 11)), CURRENT IS OUTPUT TO **TERMINAL HT** AND CONTROLS THE HEATER.

* IDLE AIR CONTROL (ISC) VALVE SYSTEM

THE IDLE AIR CONTROL (ISC) SYSTEM (ROTARY SOLENOID TYPE) INCREASES THE RPM AND PROVIDES IDLING STABILITY FOR FAST IDLE-UP WHEN THE ENGINE IS COLD AND WHEN THE IDLE SPEED HAS DROPPED DUE TO ELECTRICAL LOAD, ETC. THE ENGINE CONTROL MODULE (ECU) EVALUATES THE SIGNALS FROM EACH SENSOR (INPUT SIGNALS 1, 4 TO 8, 11, 13)), OUTPUTS CURRENT TO **TERMINALS ISC1 AND ISC2** AND CONTROLS THE IDLE AIR CONTROL VALVE (ISC VALVE).

* EGR CONTROL SYSTEM

WITH THE EGR CONTROL SYSTEM, THE ENGINE CONTROL MODULE (ECU) EVALUATES THE (INPUT SIGNALS (1, 4, 10)) FROM EACH SENSOR, CURRENT IS OUTPUT TO **TERMINAL EGR** AND OPERATION OF THE EGR VALVE IS CONTROLLED.

* INTAKE AIR CONTROL SYSTEM

IN THE INTAKE AIR CONTROL SYSTEM, EACH CYLINDER IN THE INTAKE MANIFOLD IS DIVIDED INTO TWO PARTS, WITH AN INTAKE AIR CONTROL VALVE INSTALLED IN THE PASSAGE ON ONE SIDE. THE OPENING AND CLOSING OF THE VALVE PROVIDES THE MOST APPROPRIATE INTAKE AIR FLOW AND, AS WELL AS PREVENTING PERFORMANCE LOSS AT LOW SPEEDS, ALSO IMPROVES FUEL ECONOMY. THE ENGINE CONTROL MODULE (ECU) EVALUATES THE SIGNALS FROM EACH SENSOR (INPUT SIGNALS (1, 4, 5)), OUTPUTS CURRENT TO **TERMINAL TVIS** CONTROLS THE VSV (FOR T-VIS) AND, CARRIES OUT OPENING AND CLOSING OF THE VALVE.


3. DIAGNOSIS SYSTEM


WITH THE DIAGNOSIS SYSTEM, WHEN THERE IS A MALFUNCTION IN THE ENGINE CONTROL MODULE (ECU) SIGNAL SYSTEM, THE MALFUNCTIONING SYSTEM IS RECORDED IN THE MEMORY. THE MALFUNCTIONING SYSTEM CAN THEN BE FOUND BY READING THE DISPLAY (CODE) OF THE MALFUNCTION INDICATOR LAMP (CHECK ENGINE WARNING LIGHT).

4. FAIL-SAFE SYSTEM


WHEN A MALFUNCTION OCCURS IN ANY SYSTEM, IF THERE IS A POSSIBILITY OF ENGINE TROUBLE BEING CAUSED BY CONTINUED CONTROL BASED ON THE SIGNALS FROM THAT SYSTEM. THE FAIL-SAFE SYSTEM EITHER CONTROLS THE SYSTEM BY USING DATA (STANDARD VALUES) RECORDED IN THE ECU MEMORY OR ELSE STOPS THE ENGINE.

ENGINE CONTROL (3S-GTE)

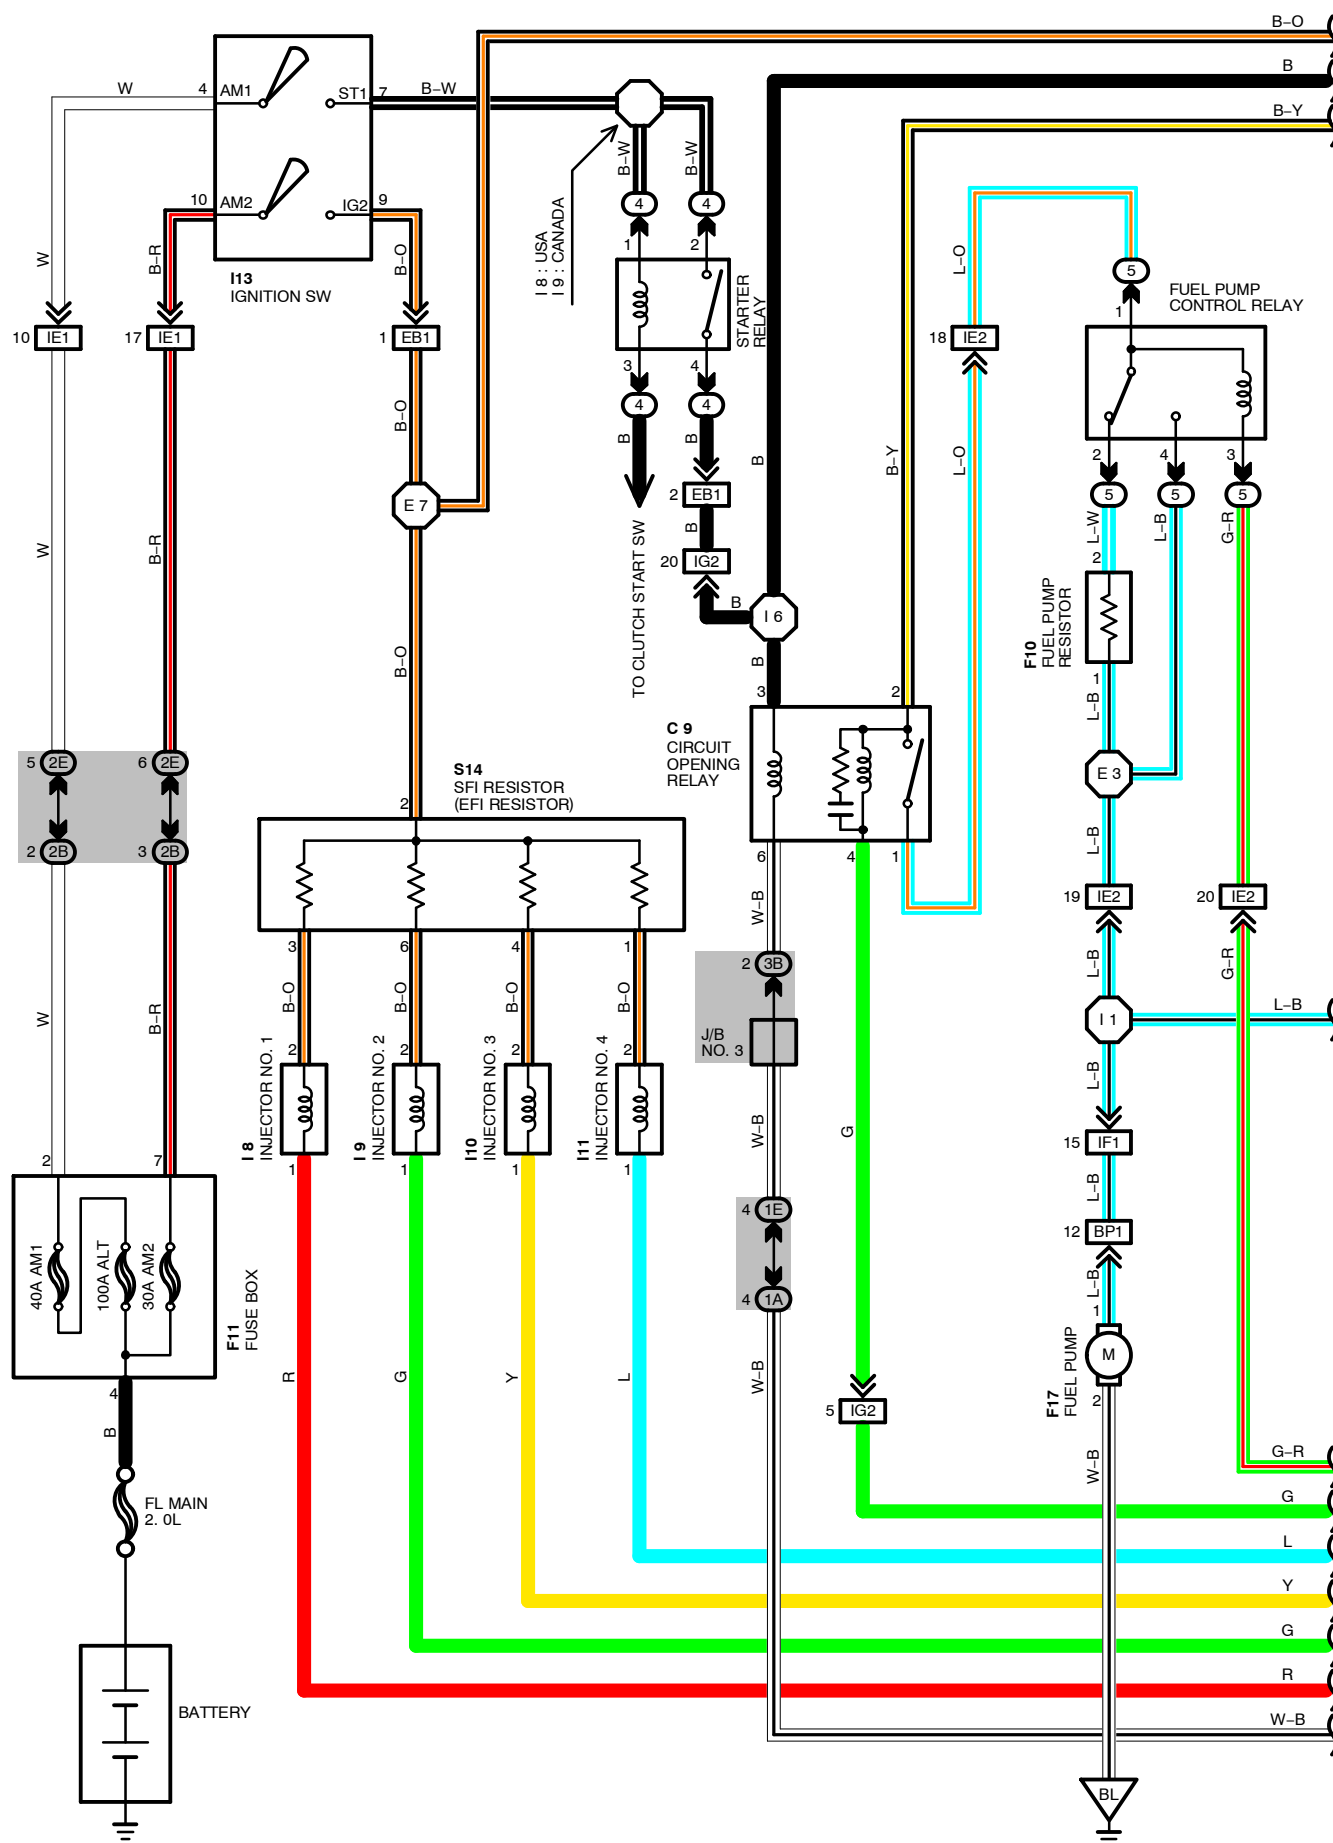

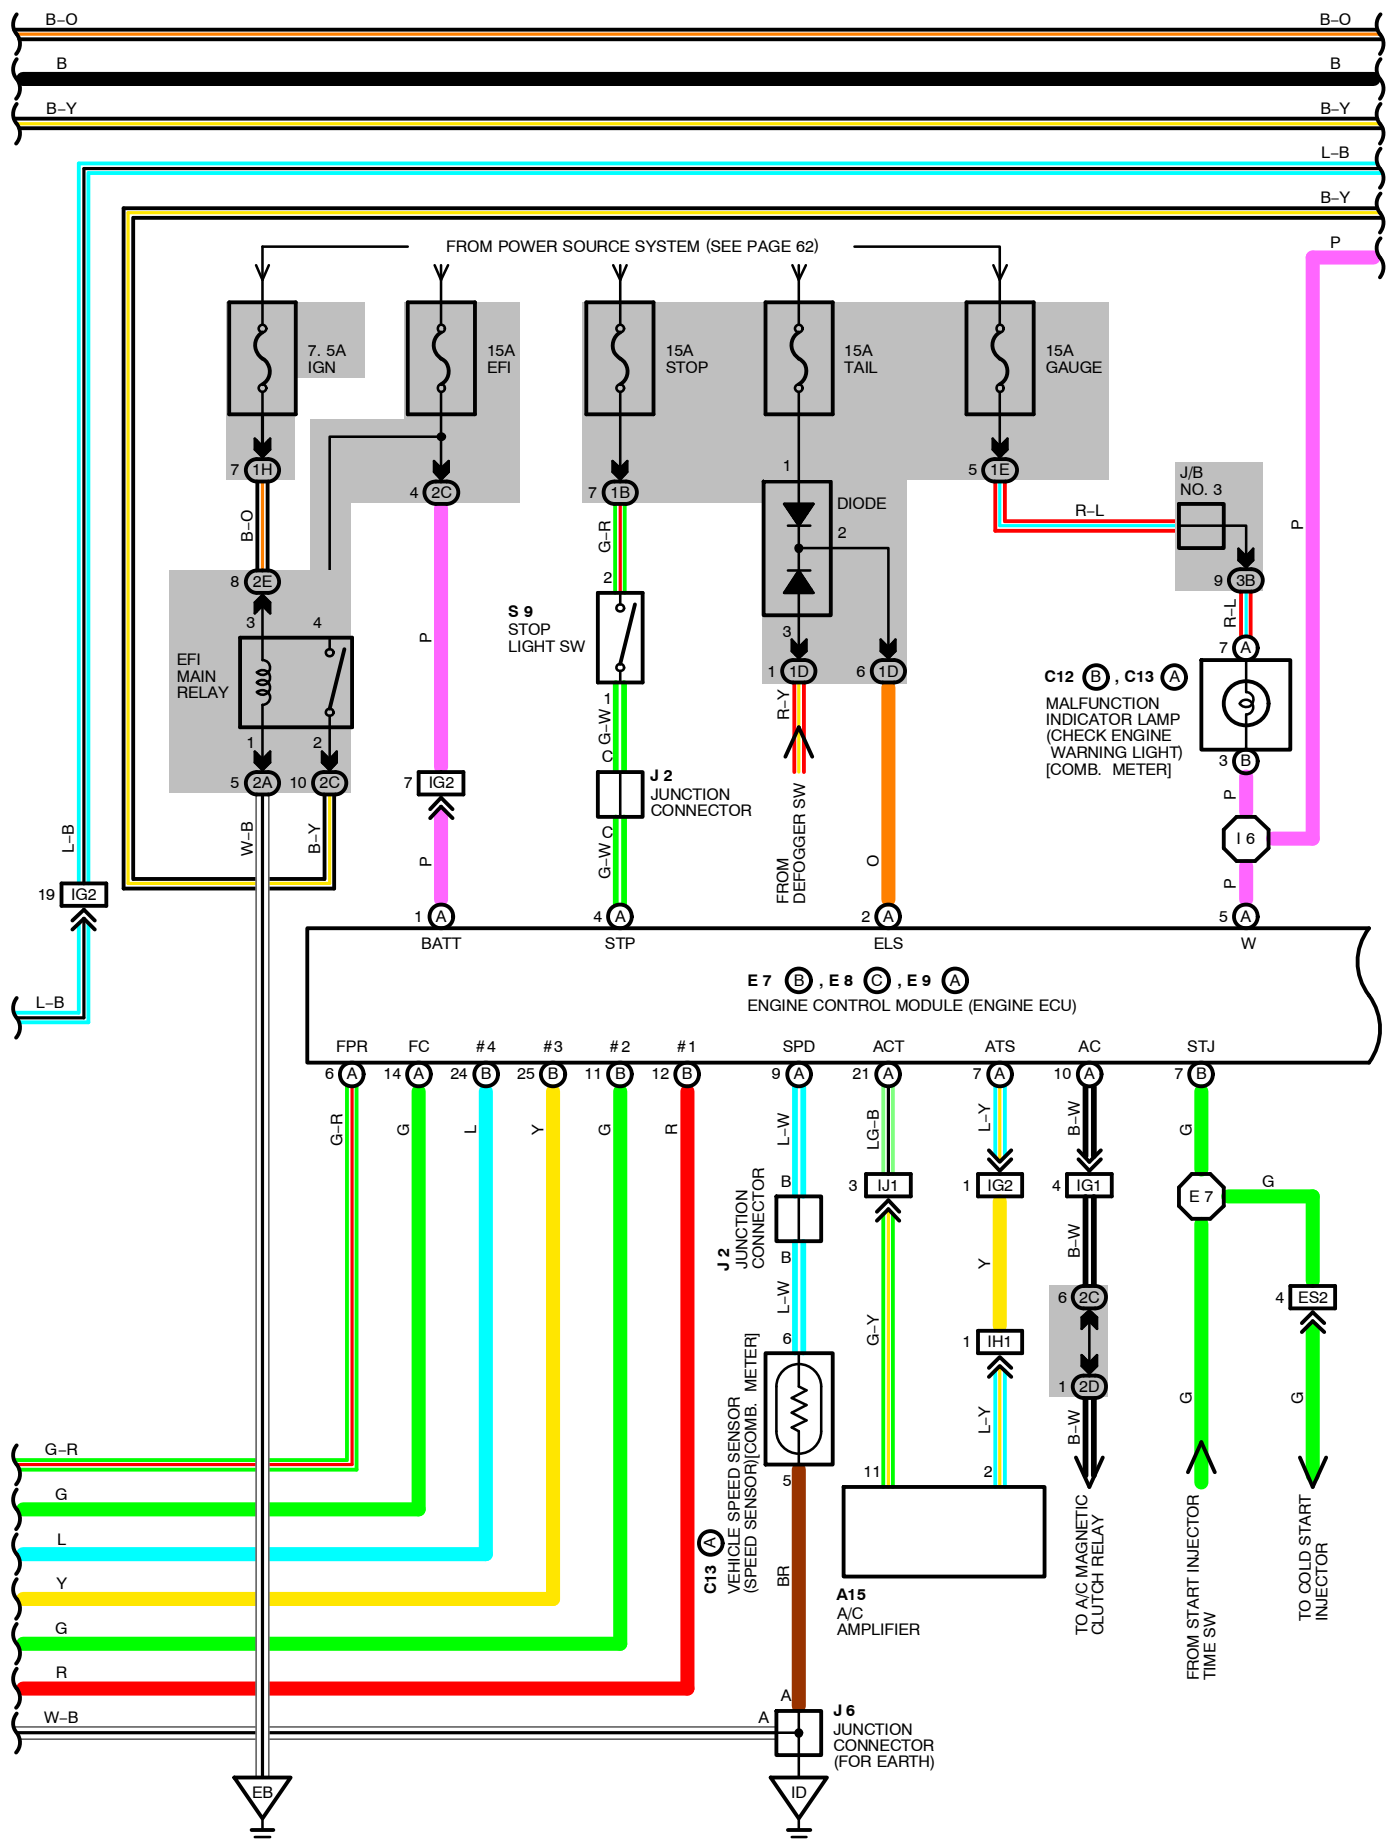

ENGINE CONTROL (3S-GTE)

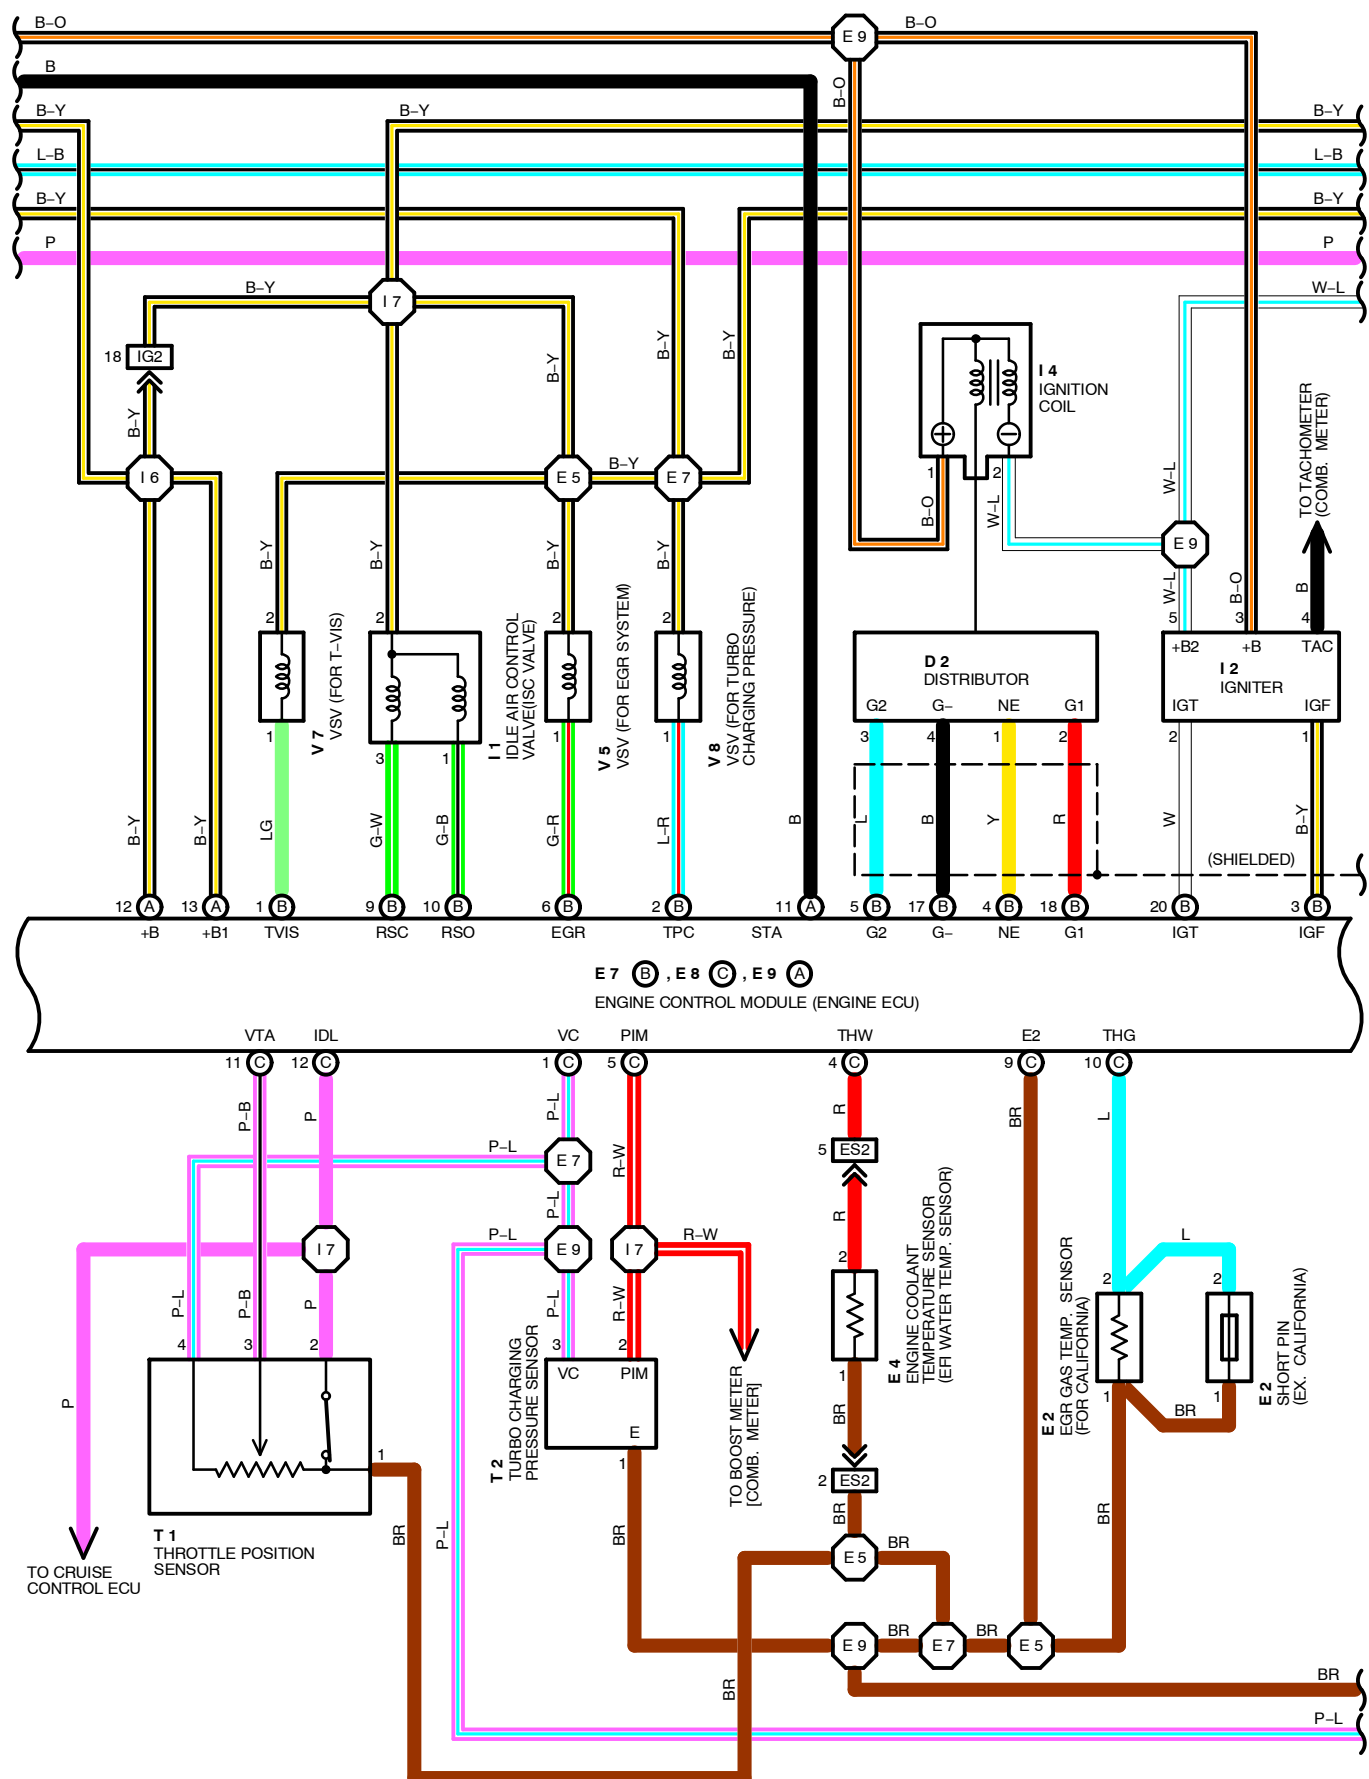

ENGINE CONTROL (3S-GTE)

SERVICE HINTS

EFI MAIN RELAY

4-2 : CLOSED WITH IGNITION SW AT ON OR ST POSITION

S14 SFI RESISTOR (EFI RESISTOR)

2-1, 3, 4, 5 : 5-7 Ω

I 8, I 9, I10, I11 INJECTOR

1-2 : 2-4 Ω

F10 FUEL PUMP RESISTOR

1-2: APPROX. 73 Ω

V 4 VOLUME AIR FLOW (AIR FLOW METER)

1-2 : CLOSED WITH STARTER RUNNING OR MEASURING PLATE OPEN

5-6 : 200-600 Ω (MEASURING PLATE CLOSED)

20-1000 Ω (MEASURING PLATE OPEN)

5-4 : 200-400 Ω

5-7 : 10-20 K Ω (-20°C, -4°F)

4-7 K Ω (0°C, 32°F)

2-3 K Ω (20°C, 68°F)

0.9-1.3 K Ω (40°C, 104°F)

0.4-0.7 K Ω (60°C, 140°F)

E 4 ENGINE COOLANT TEMPERATURE SENSOR (EFI WATER TEMP. SENSOR)

1-2: 10-20 K Ω (-20°C, -4°F)

4-7 K Ω (0°C, 32°F)

2-7 K Ω (20°C, 68°F)

0.9-1.3 K Ω (40°C, 104°F)

0.4-0.7 K Ω (60°C, 140°F)

0.2-0.4 K Ω (80°C, 176°F)

T 1 THROTTLE POSITION SENSOR

2-4: 0.2-0.8 K Ω WITH CLEARANCE BETWEEN LEVER AND STOP SCREW 0 MM (0 IN)

3-4: LESS THAN 2.3 K Ω WITH CLEARANCE BETWEEN LEVER AND STOP SCREW 0.50 MM (0.020 IN)

∞ Ω WITH 0.7 MM (0.028 IN.)

2-4: 3.3-10 K Ω WITH THROTTLE VALVE FULLY OPEN

1-4: 3-8 K Ω

E 7, E 8, E 9 ENGINE CONTROL MODULE (ENGINE ECU)

VOLTAGE AT ENGINE CONTROL MODULE (ENGINE ECU) CONNECTORS

BATT-E1 : 9-14 VOLTS

+B, +B1-E1 : 9-14 VOLTS (IGNITION SW ON)

IDL-E2 : 9-14 VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)

VTA-E2 : 0.3-0.8 VOLTS (IGNITION SW ON AND THROTTLE VALVE FULLY CLOSED)

3.2-4.8 VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)

VC-E2 : 4.5-5.5 VOLTS (IGNITION SW ON)

VS-E2 : 4.0-5.5 VOLTS (IGNITION SW ON AND MEASURING PLATE FULLY CLOSED)

1.0 VOLTS OR LESS (IGNITION SW ON AND MEASURING PLATE FULLY OPEN)

2.0-4.0 VOLTS (IDLING)

1.0-2.0 VOLTS (3000 RPM)

THA-E2 : 0.5-3.4 VOLTS (IGNITION SW ON AND INTAKE AIR TEMP. 20°C, (68°F))

THW-E2 : 0.2-1.0 VOLTS (IGNITION SW ON AND COOLANT TEMP. 80°C, (176°F))

STA-E1 : 6-14 VOLTS (CRANKING)

#1, #2, #3, #4 - E01, E02 : 10-14 VOLTS (IGNITION SW ON)

IGT-E1 : 0.7-1.0 VOLTS (CRANKING OR IDLING)

TVIS-E1 : 2.0 VOLTS OR LESS WITH IGNITION SW ON AND THROTTLE VALVE FULLY CLOSED

9-14 VOLTS WITH IGNITION SW ON AND THROTTLE VALVE OPEN

2.0 VOLTS OR LESS IDLING

9-14 VOLTS WITH 4200 RPM OR MORE

TE1-E1 : 9-14 VOLTS WITH IGNITION SW ON AND DATA LINK CONNECTOR 1 (CHECK CONNECTOR) T-E1 NO CONNECT

0.5 VOLTS OR LESS WITH IGNITION SW ON AND DATA LINK CONNECTOR 1 (CHECK CONNECTOR) T-E1 CONNECT

AC-E1 : 7.5-14 VOLTS WITH IGNITION SW ON A/C SWITCH ON

RSC, RSO-E1 : 9-14 VOLTS (IGNITION SW ON)

PIM-E2 : 3.3-3.9 VOLTS (IGNITION SW ON)

W-E1 : 9-14 VOLTS (NO TROUBLE (MALFUNCTION INDICATOR LAMP (CHECK ENGINE WARNING LIGHT) OFF) AND ENGINE RUNNING)

RESISTANCE AT ENGINE CONTROL MODULE (ENGINE ECU) CONNECTORS

(DISCONNECT WIRING CONNECTOR FROM ENGINE CONTROL MODULE (ENGINE ECU))

IDL-E1 : INFINITY (THROTTLE VALVE OPEN)

LESS THAN 2300 Ω (THROTTLE VALVE FULLY CLOSED)

VTA-E2 : 3300-10000 Ω (THROTTLE VALVE OPEN)

200-800 Ω (THROTTLE VALVE FULLY CLOSED)

VS-E2 : 200-600 Ω (MEASURING PLATE FULLY CLOSED)

20-1200 Ω (MEASURING PLATE FULLY OPEN)

THA-E2 : 2000-3000 Ω (INTAKE AIR TEMP. 20°C, 68°F)

THW-E2 : 200-400 Ω (COOLANT TEMP. 80°C, 176°F)

G1, G2-G- : 140-180 Ω

NE-G- : 180-220 Ω

RSO, RSC-+B, +B1 : 17.7-23.9 Ω

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A15	32	F11	28 (3S-GTE)	J 6	33
C 9	32	F17	34	K 1	33
C12	B 32	H 7	29 (3S-GTE)	S 9	33
C13	A 32	I 1	29 (3S-GTE)	S14	28 (3S-GTE)
D 1	28 (3S-GTE)	I 2	29 (3S-GTE)	T 1	29 (3S-GTE)
D 2	28 (3S-GTE)	I 4	29 (3S-GTE)	T 2	29 (3S-GTE)
E 2	28 (3S-GTE)	I 8	29 (3S-GTE)	V 4	29 (3S-GTE)
E 4	28 (3S-GTE)	I 9	29 (3S-GTE)	V 5	29 (3S-GTE)
E 7	B 33	I10	29 (3S-GTE)	V 7	29 (3S-GTE)
E 8	C 33	I11	29 (3S-GTE)	V 8	29 (3S-GTE)
E 9	A 33	I13	33		
F10	28 (3S-GTE)	J 2	33		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
4	27	R/B NO. 4 (RIGHT KICK PANEL)
5	27	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2A	23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	23 (ALL-TRAC/4WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C		
2D	23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2E		
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	36 (3S-GTE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
ES2	36 (3S-GTE)	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
IE1	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2		
IF1	42	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	42	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE CONTROL MODULE (ENGINE ECU))
IG2		
IH1	42	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ1	44	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
BP1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (3S-GTE)	FRONT LEFT FENDER
EC	36 (3S-GTE)	INTAKE MANIFOLD
ID	42	LEFT KICK PANEL
BL	46 (L/B)	BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	36 (3S-GTE)	ENGINE ROOM MAIN WIRE	I 2	44	COWL WIRE
E 5	36 (3S-GTE)	ENGINE WIRE	I 6		
E 7			I 7		ENGINE WIRE
E 9			I 8		COWL WIRE
I 1	44	COWL WIRE	I 9	44	


ENGINE CONTROL (3S-GTE)

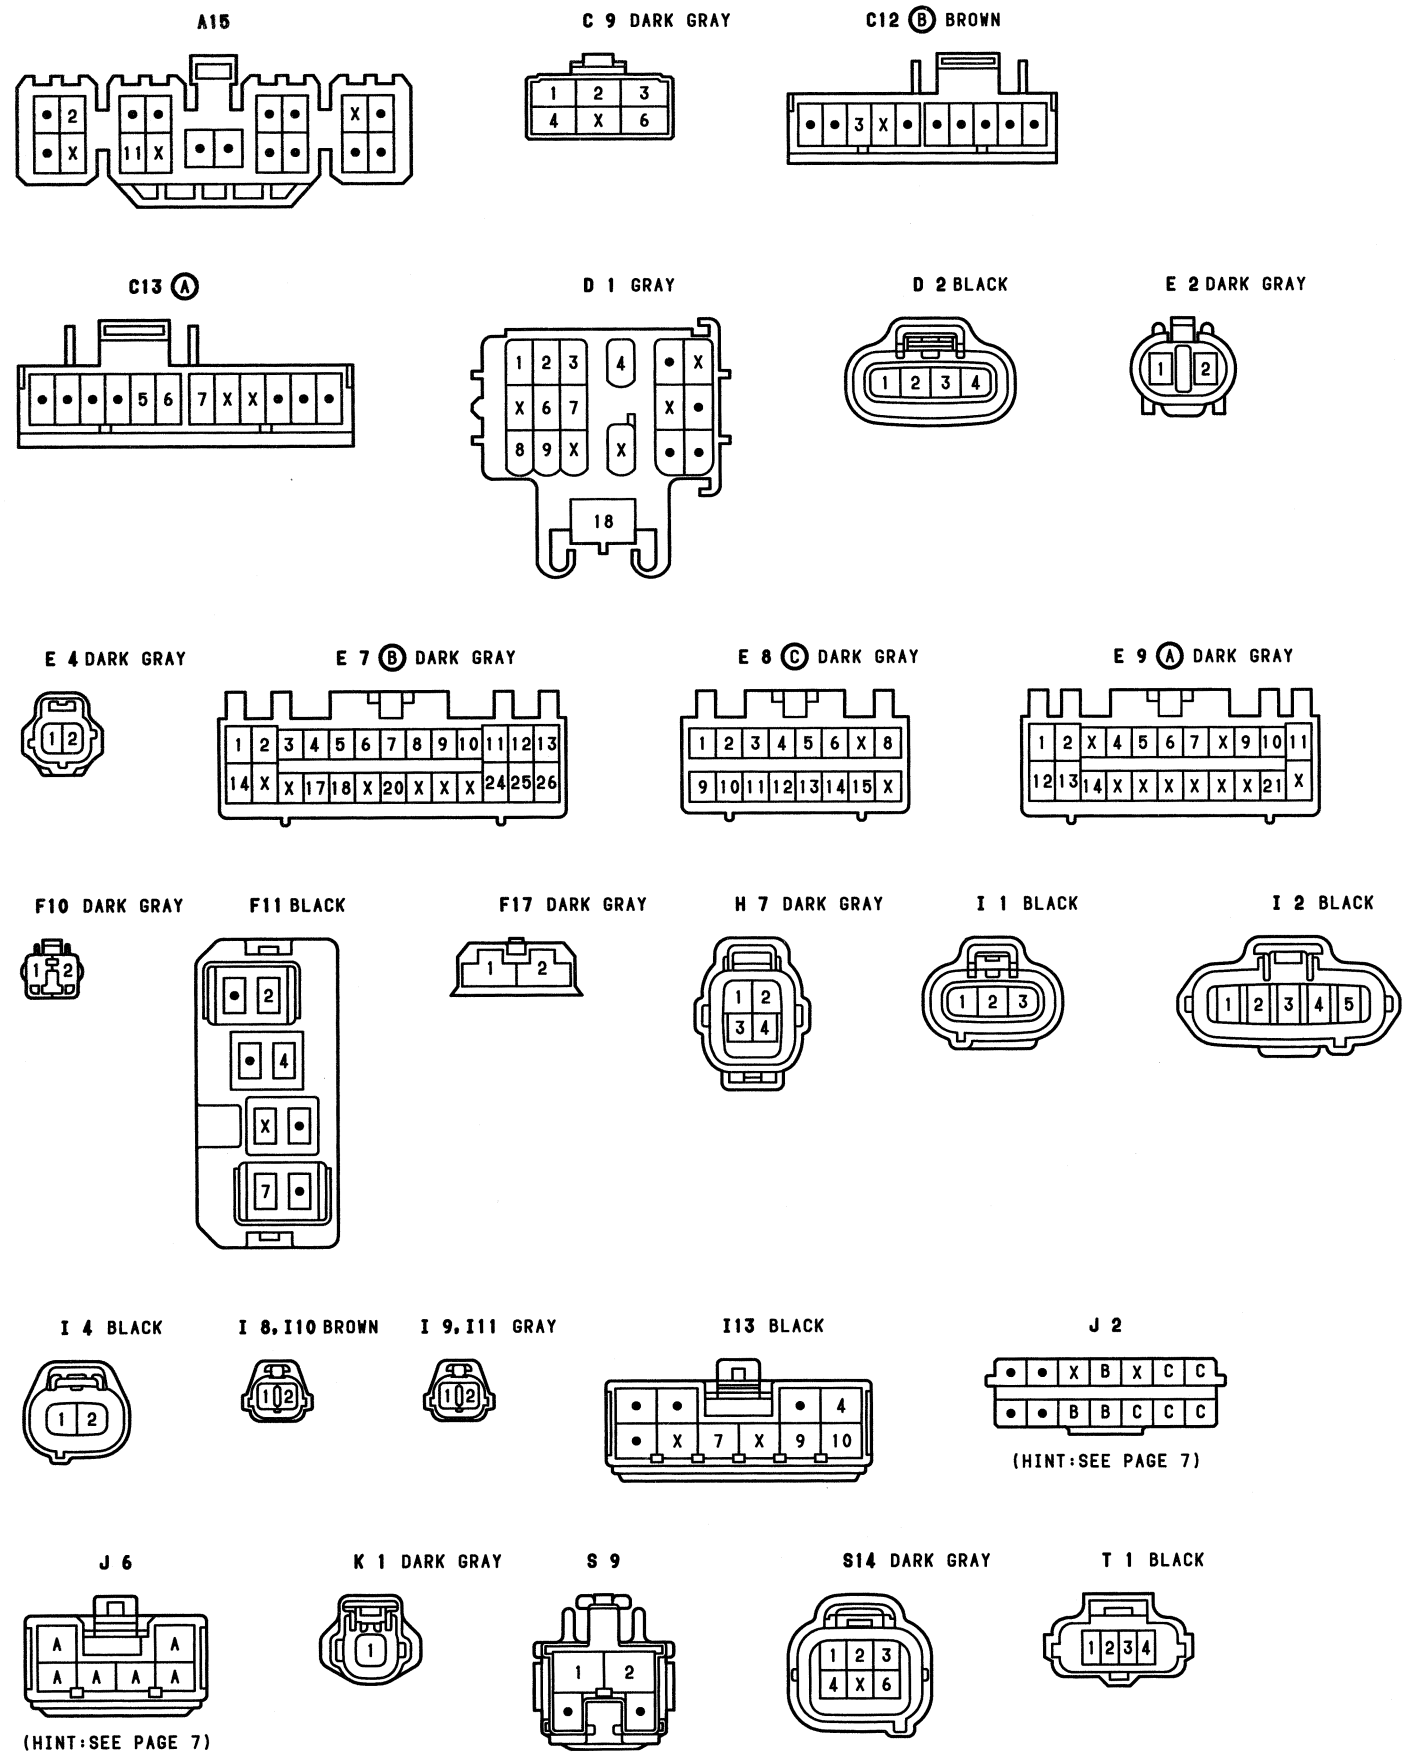

T 2 BLACK

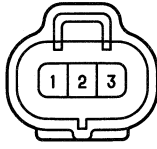

V 4 BLACK



V 5,V 7 BROWN



V 8 BLUE

