

*1 : W/ DIVERSITY ANTENNA
*2 : W/O DIVERSITY ANTENNA

The diagram illustrates the electrical circuit for the rear window defogger system. Key components and their connections are as follows:

- Power Sources:** A 15A GAUGE and a 30A DEFOGGER are connected to the main power lines.
- DEFOGGER RELAY:** This relay controls the power to the defogger system. It has terminals 1, 2, 3, 4, and 5. Terminal 1 is connected to the 30A DEFOGGER. Terminal 2 is connected to the 15A GAUGE. Terminal 3 is connected to the DEFOGGER SW. Terminal 4 is connected to the NOISE FILTER. Terminal 5 is connected to the DEFOGGER SW.
- NOISE FILTER (N 4):** A noise filter for the defogger system, connected to the relay and ground.
- REAR WINDOW DEFOGGER:** Three units are shown: R19 (A, R22 B), R20 (C, R21 D), and R21 (D, R22 B). Each unit has terminals 1 and 2.
- DEFOGGER SW (D 3):** A switch mechanism that controls the power to the defogger units. It has terminals 1, 2, 3, and 4.
- Junction Connectors:** J6 (JUNCTION CONNECTOR FOR EARTH) and J/B NO. 3 are used to connect the system to the vehicle's electrical network.
- Wiring Details:** The diagram shows various wire colors (W-B, B, R-L, R-Y) and their connections to terminals and components. It also includes a detailed view of the DEFOGGER SW mechanism, showing its internal components and wiring.

SERVICE HINTS

DEFOGGER RELAY

1-3 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D3 DEFOGGER SW

3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 3	32	R19	A 34 (L/B), 35 (C/P)	R21	D 35 (C/P)
J 6	33	R20	C 34 (L/B)	R22	B 34 (L/B), 35 (C/P)
N 4	33	R20	E 35 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	20	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	46 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	46 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BR1	48 (C/P)	FLOOR WIRE AND REAR WINDOW NO. 2 WIRE (LEFT REAR PILLAR)
BV1	48 (C/P)	FLOOR WIRE AND LUGGAGE ROOM NO. 4 WIRE


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	42	LEFT KICK PANEL
BJ	48 (C/P)	RIGHT REAR PILLAR (C/P)
BK	46 (L/B)	BACK DOOR RIGHT (L/B)
BM	48 (C/P)	LEFT REAR PILLAR (C/P)

D 3 BLACK



J 6

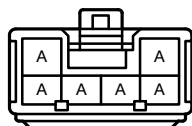

(HINT : SEE PAGE 7)

N 4



R19 (A), R20 (E) BLACK



R20 (C)



R21 (D), R22 (B) BLACK

