



RELAY LOCATIONS

[Engine Compartment]

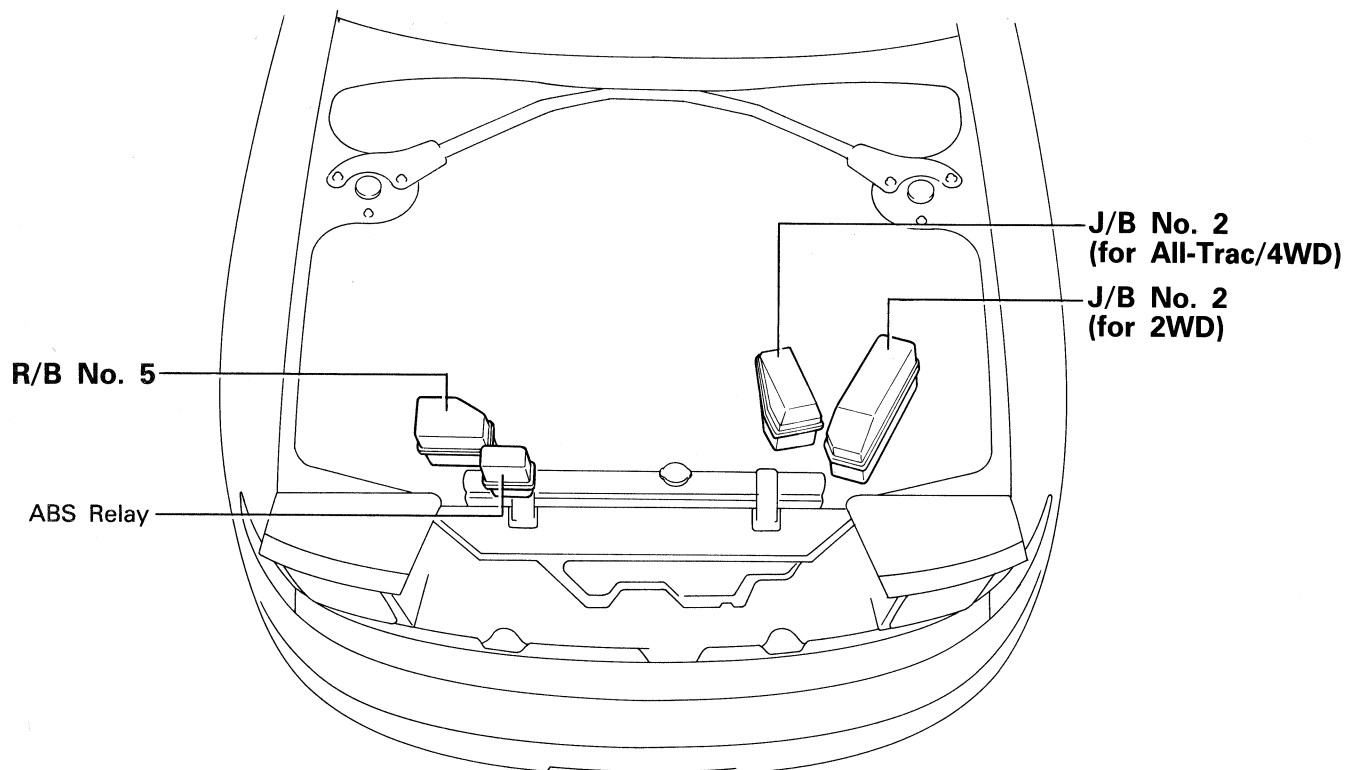


[Instrument Panel]

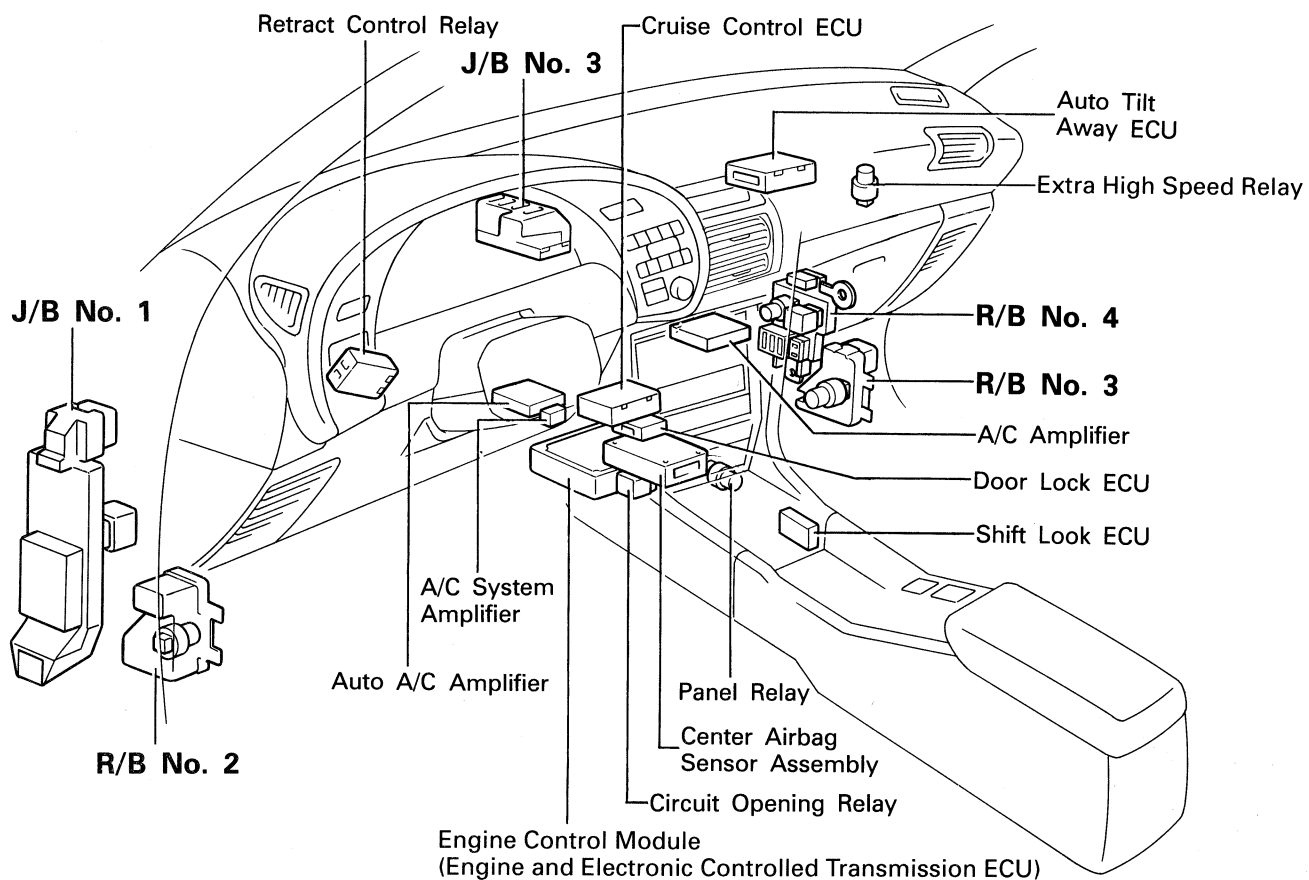


[Body]

[Lift Back]

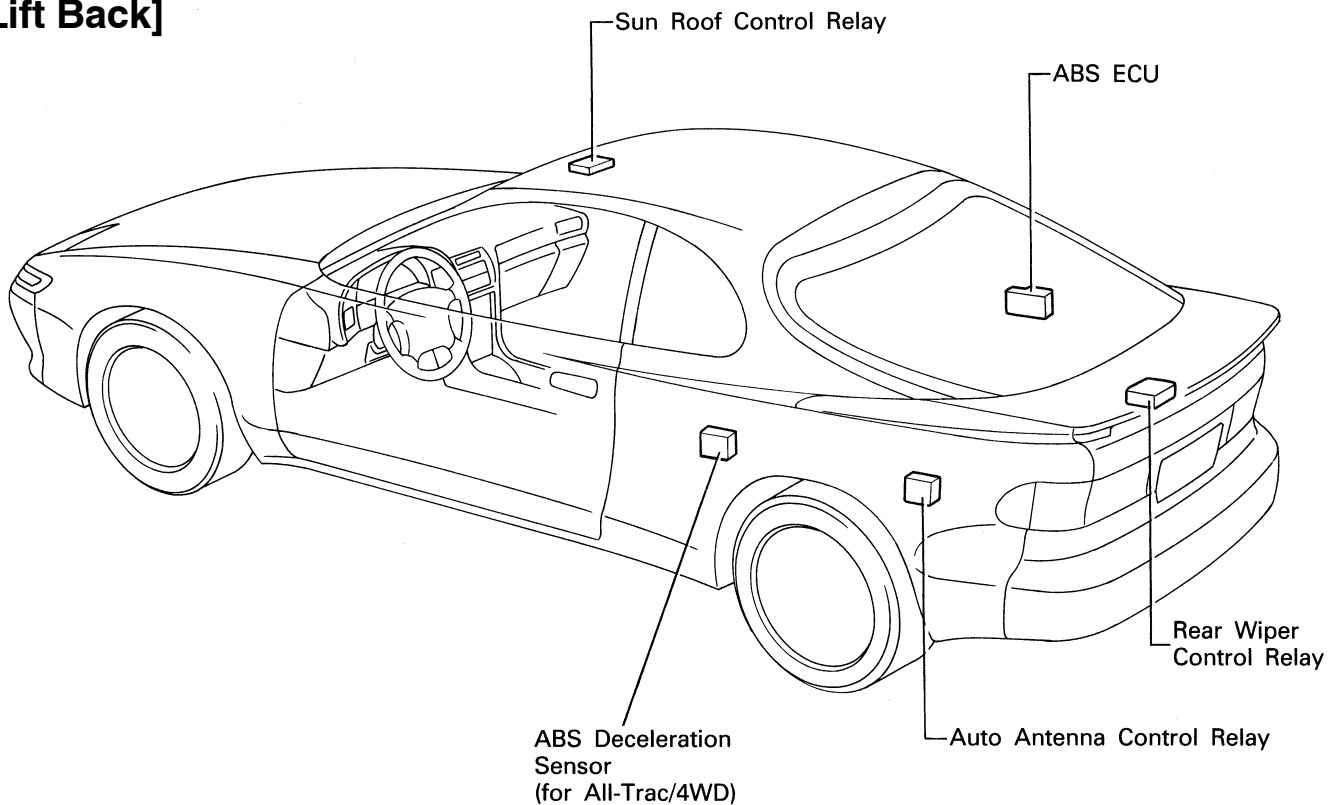

[Body]


[Coupe]

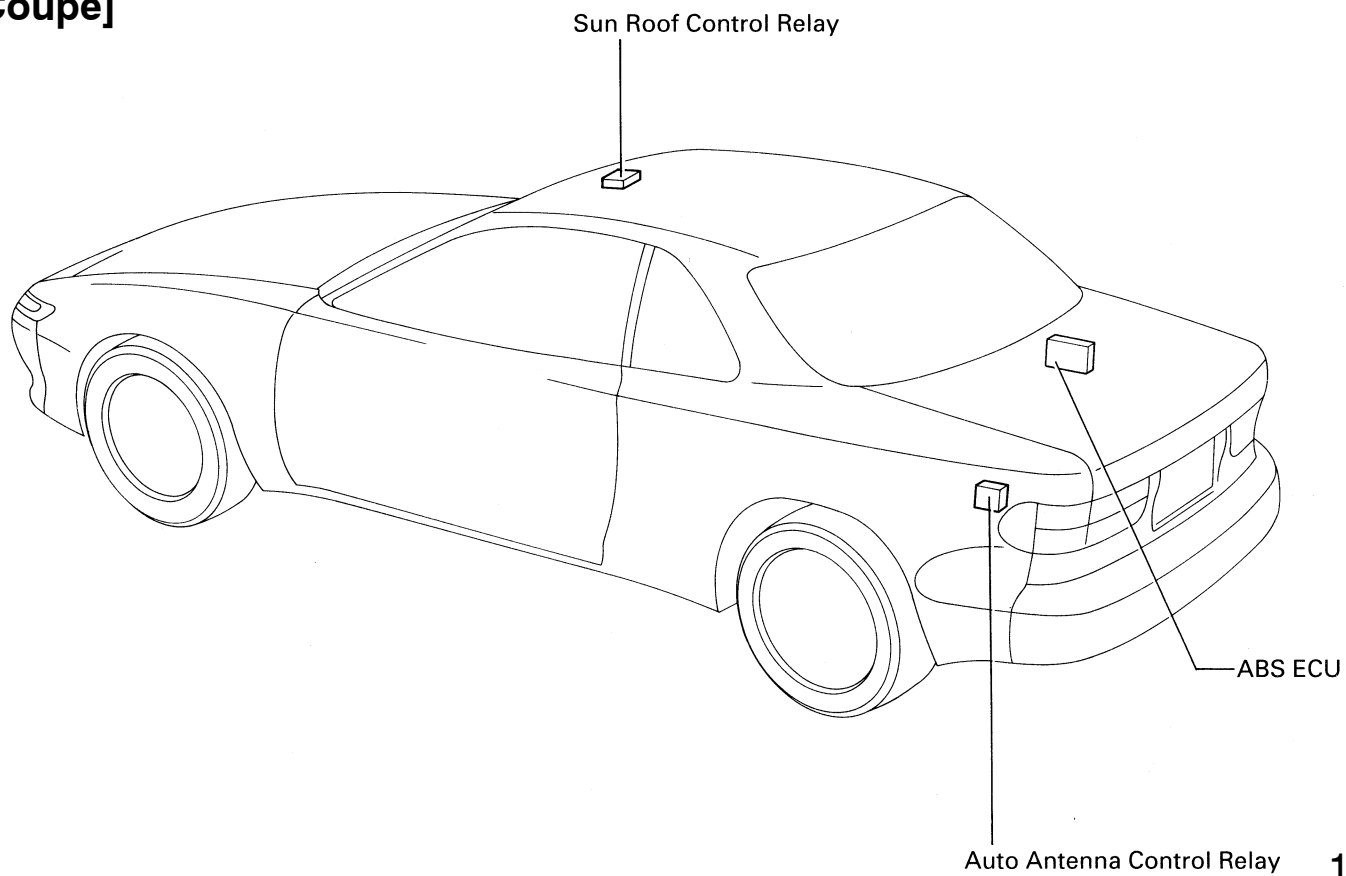


Auto Antenna Control Relay

RELAY LOCATIONS

○ : J/B No. 1 **Left Kick Panel** (See Page 18)

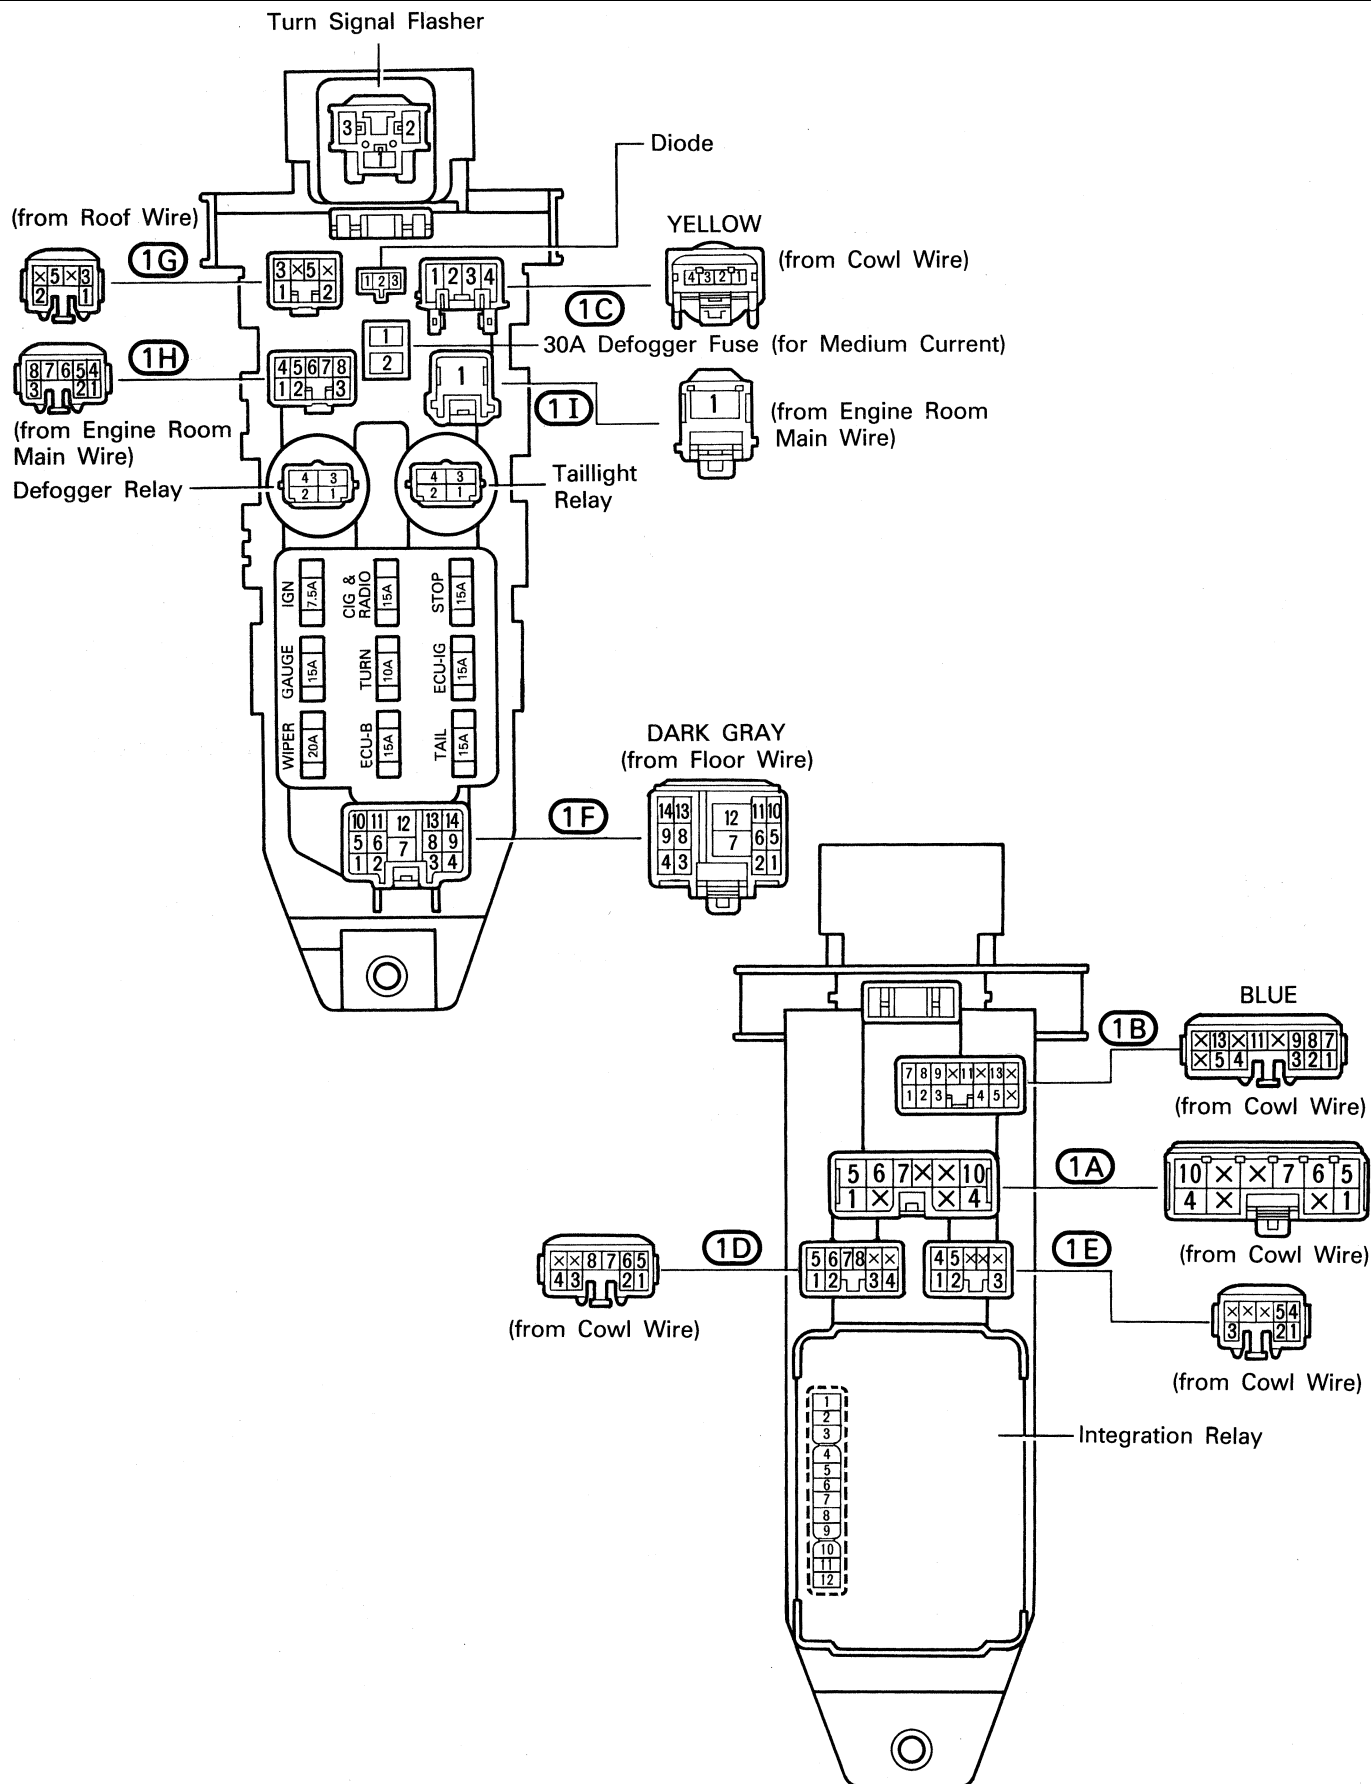



[J/B No. 1 Inner Circuit]

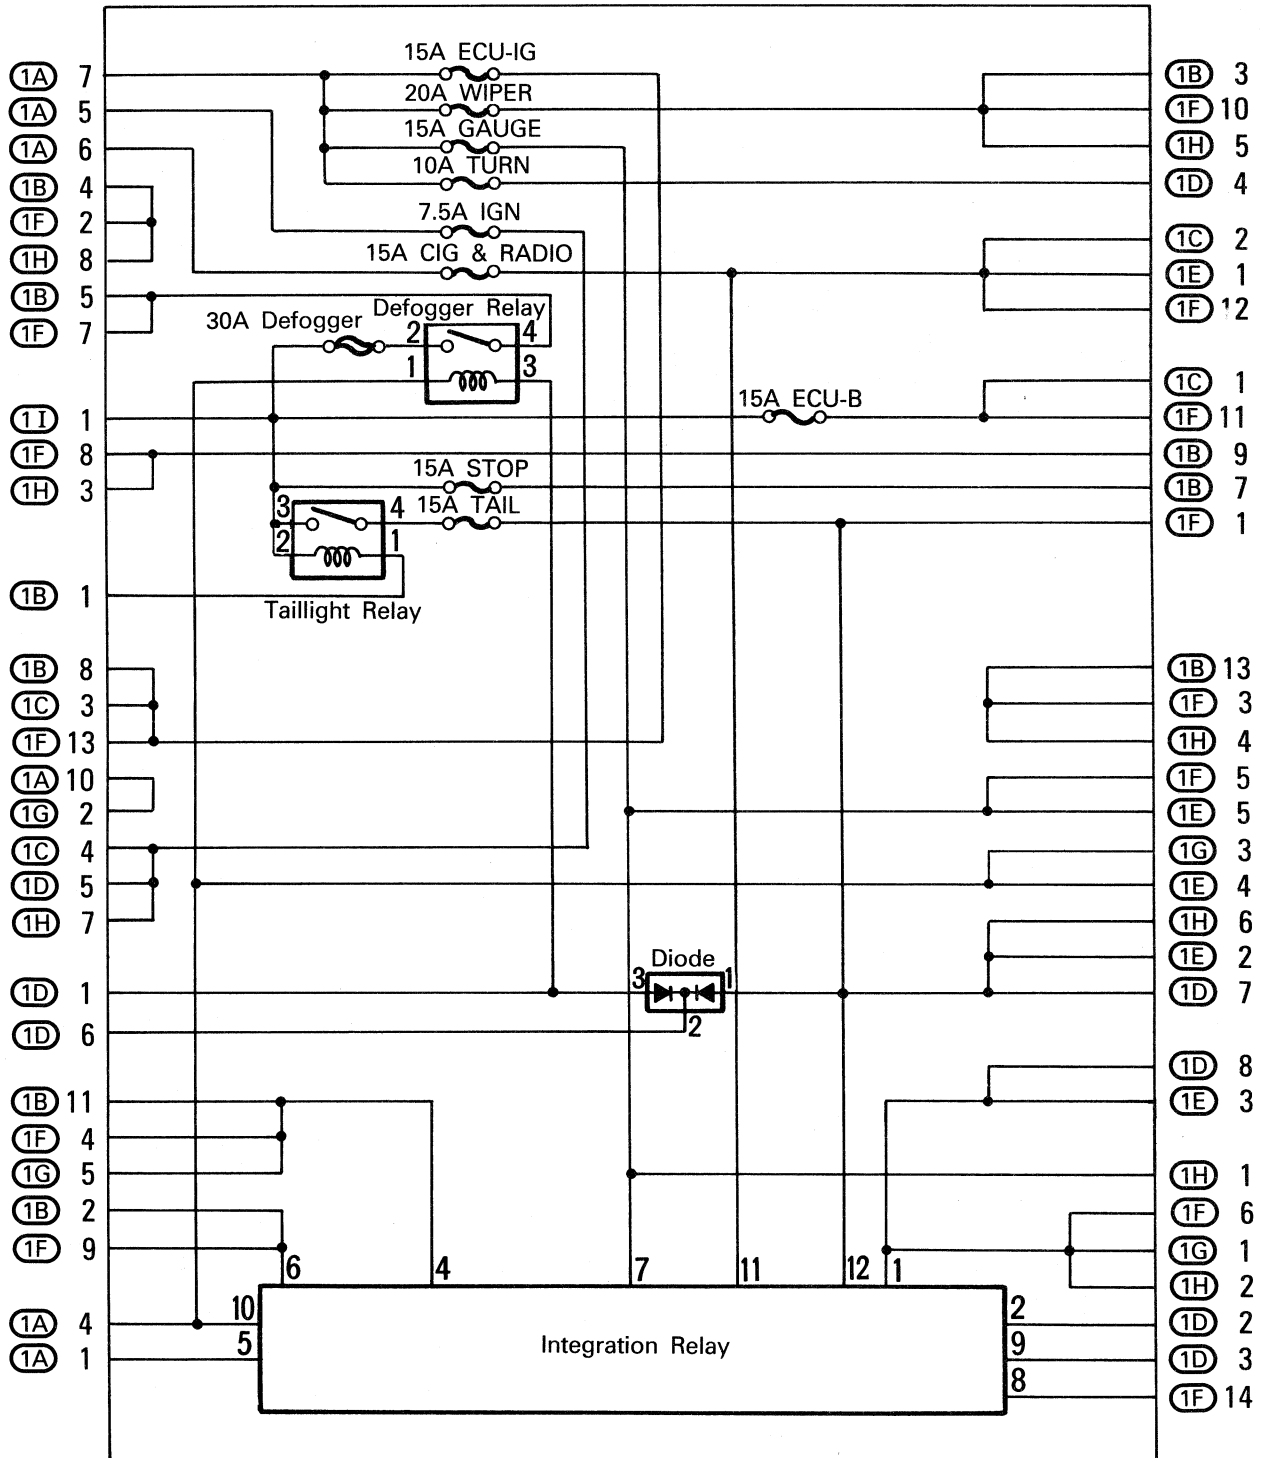



RELAY LOCATIONS

○ : J/B No. 2	Near the Battery	(See Page 18)
---------------	------------------	---------------

[2WD]

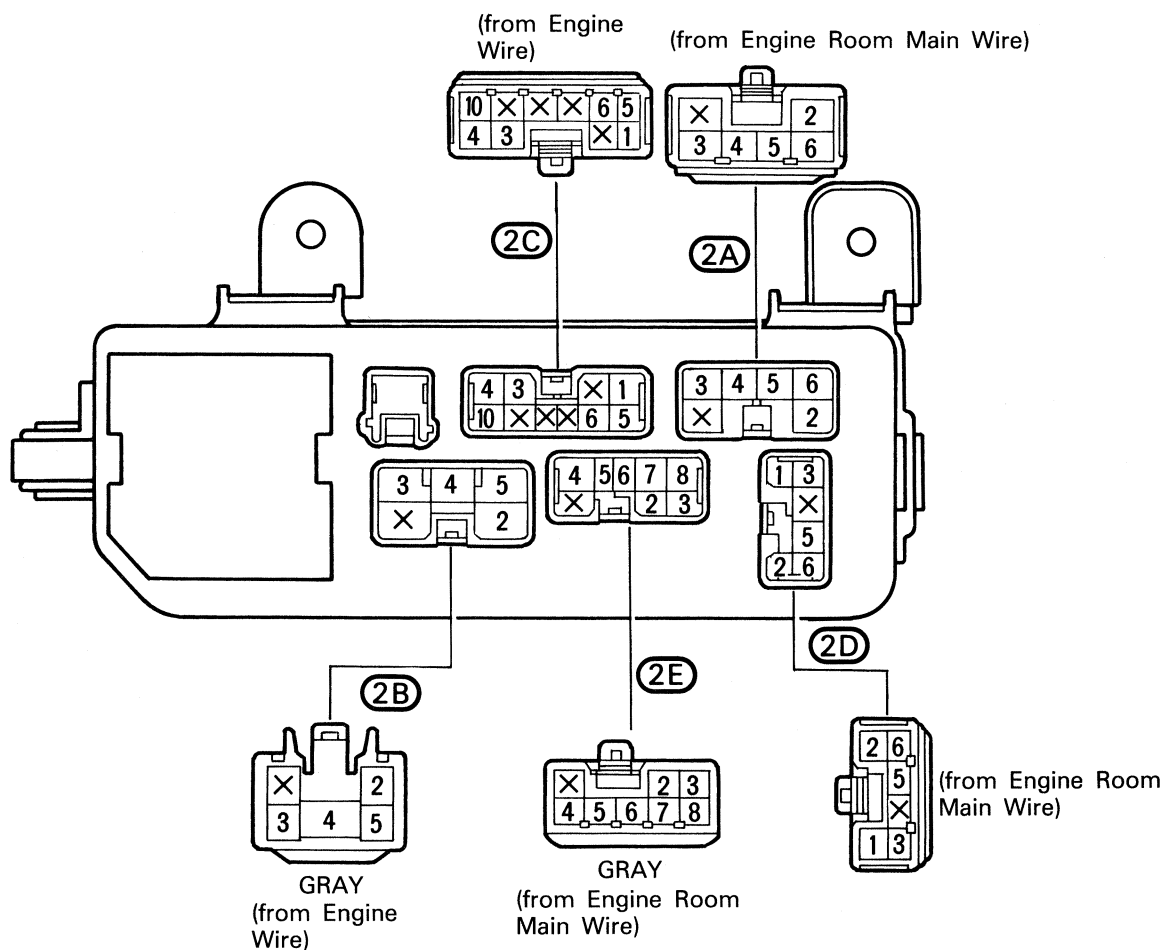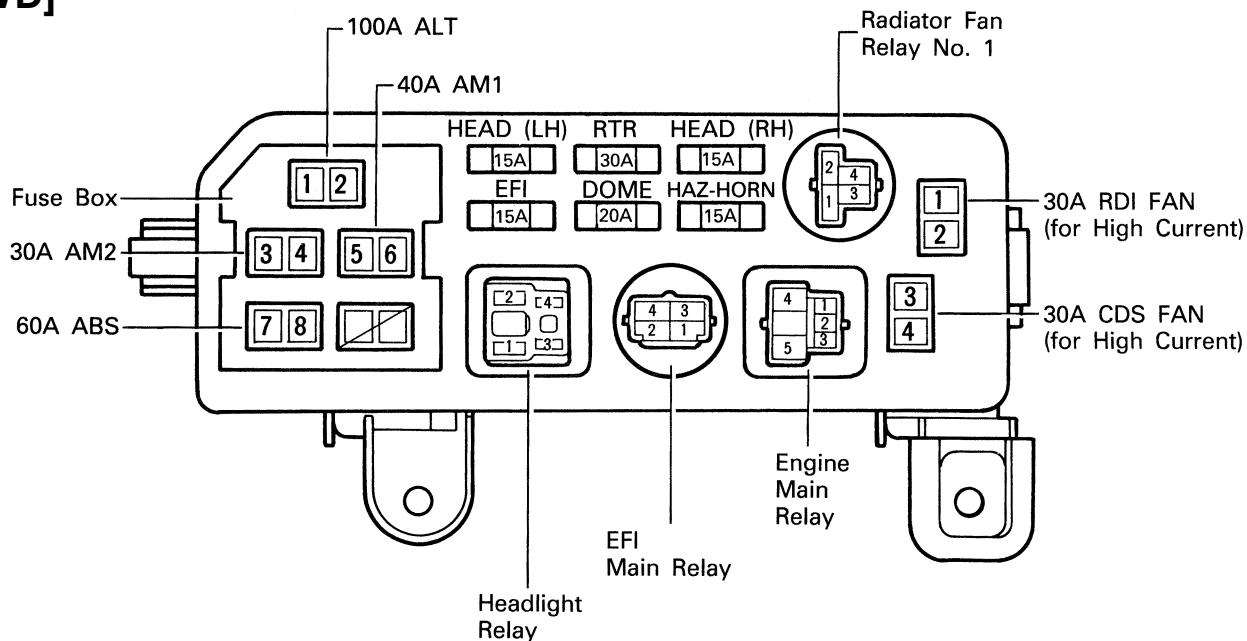



[All-Trac/4WD]

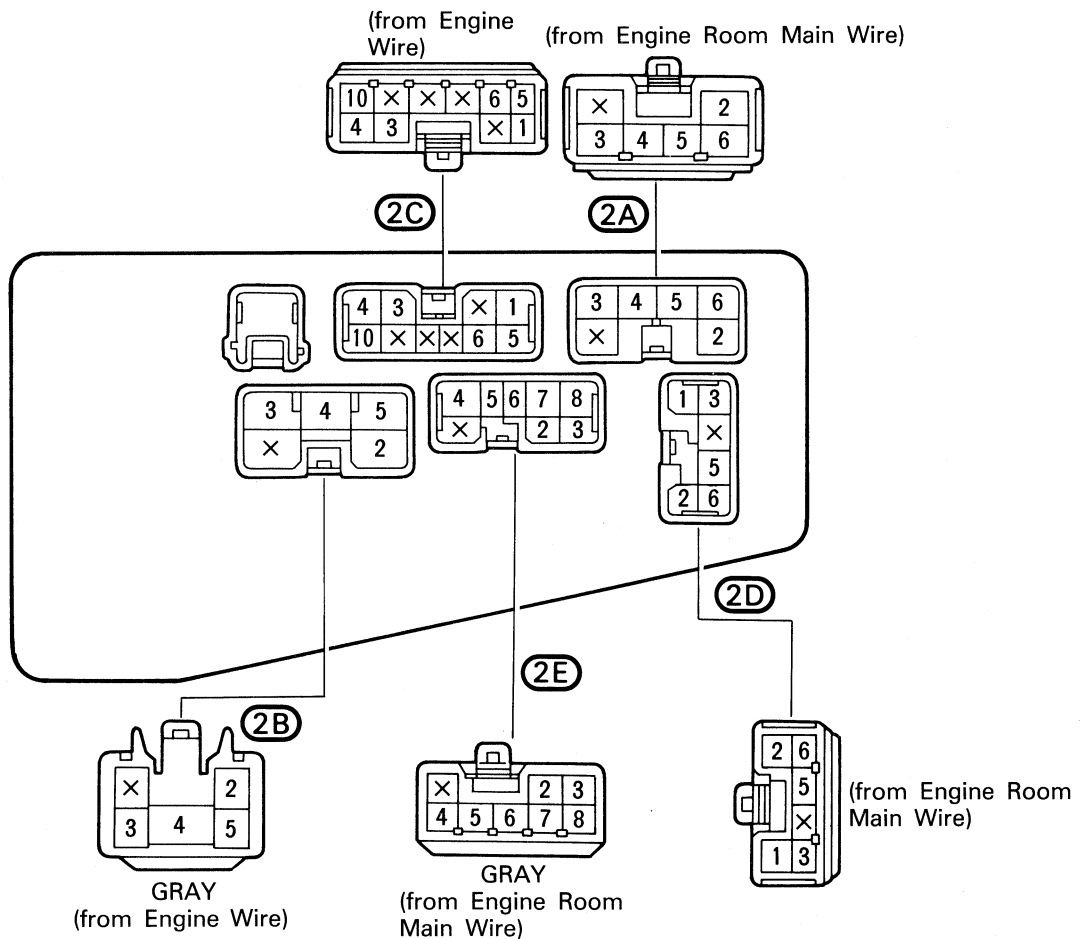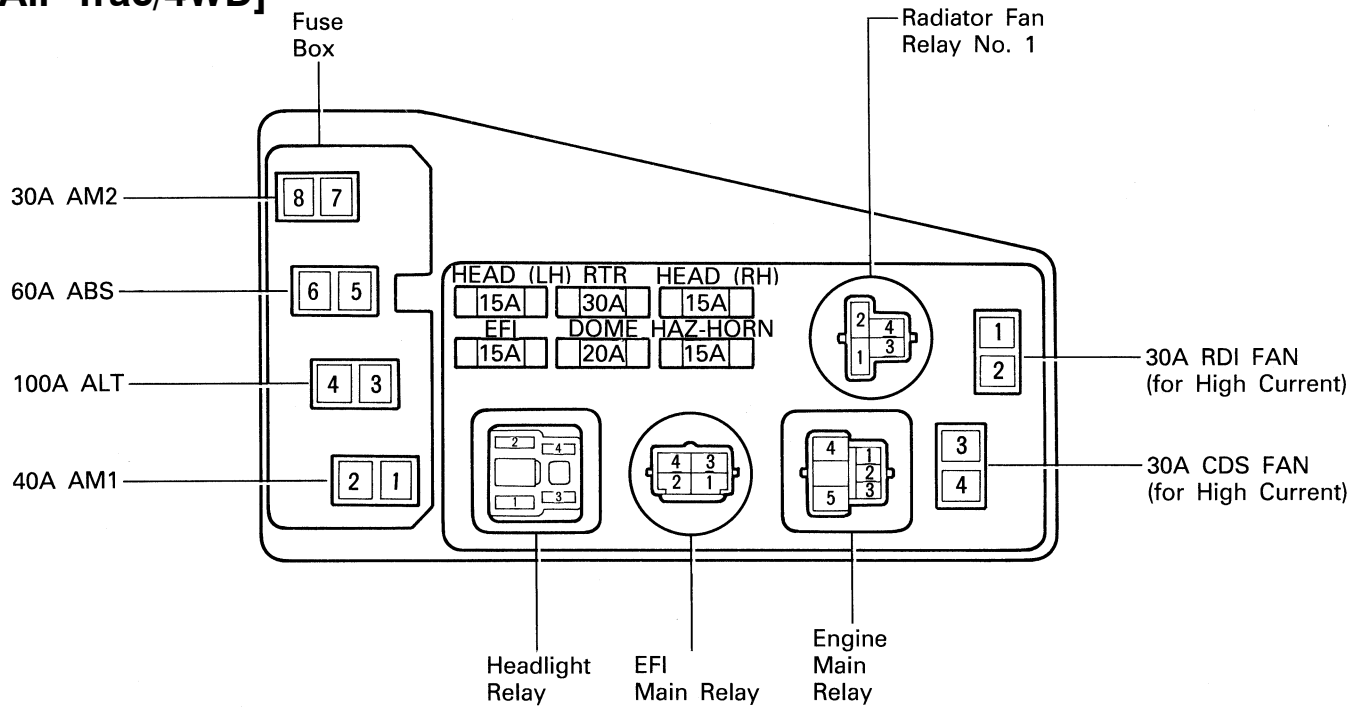


RELAY LOCATIONS

[J/B No. 2 Inner Circuit]

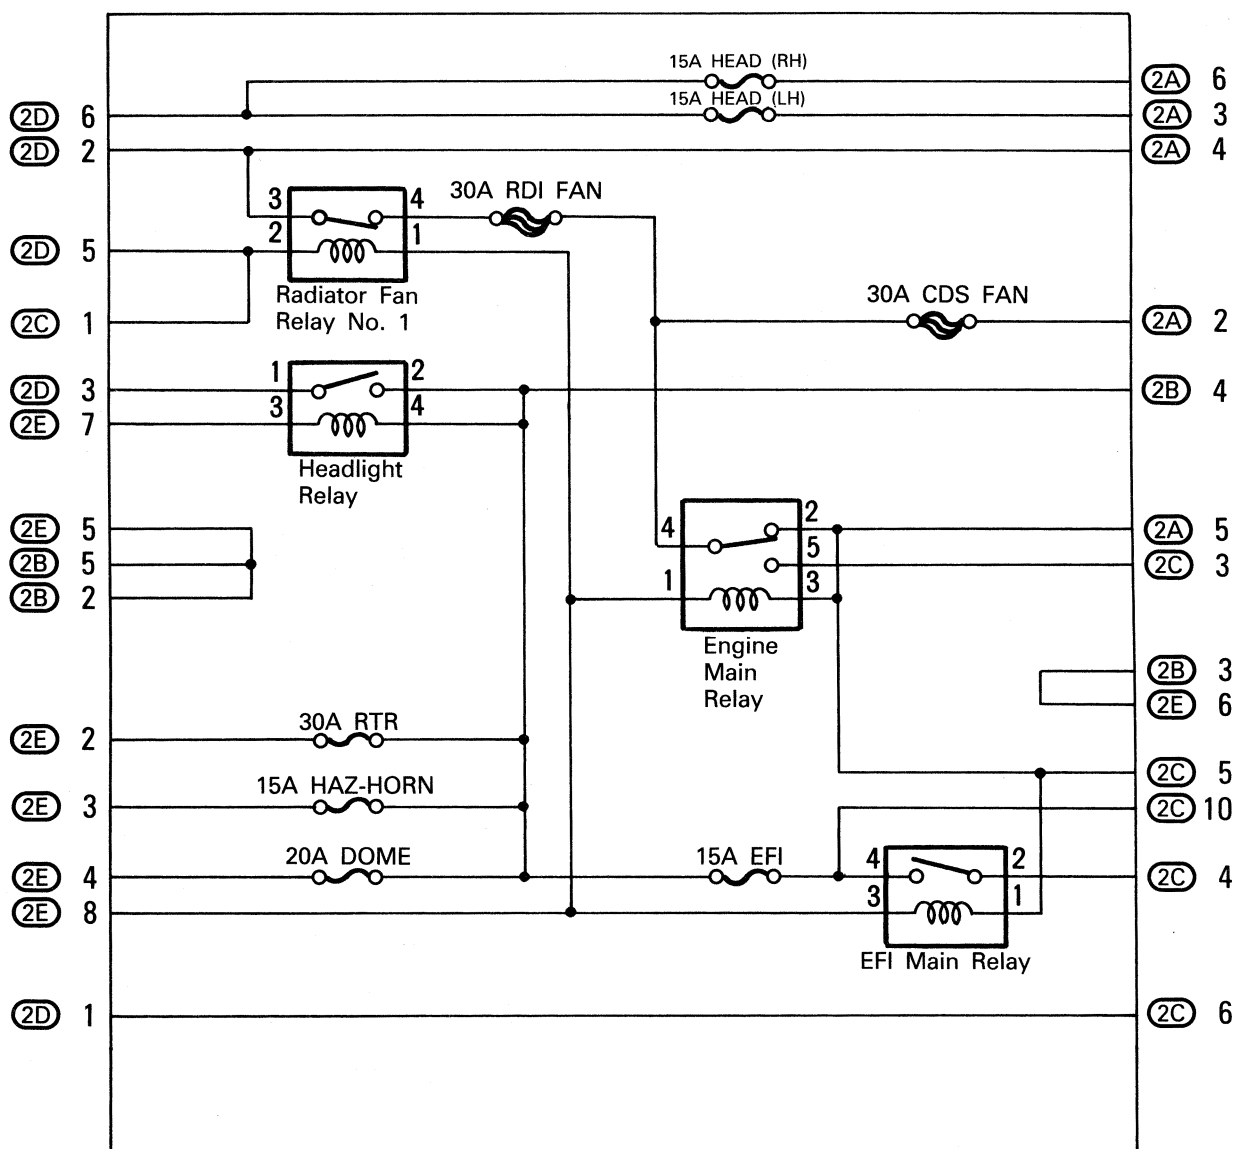

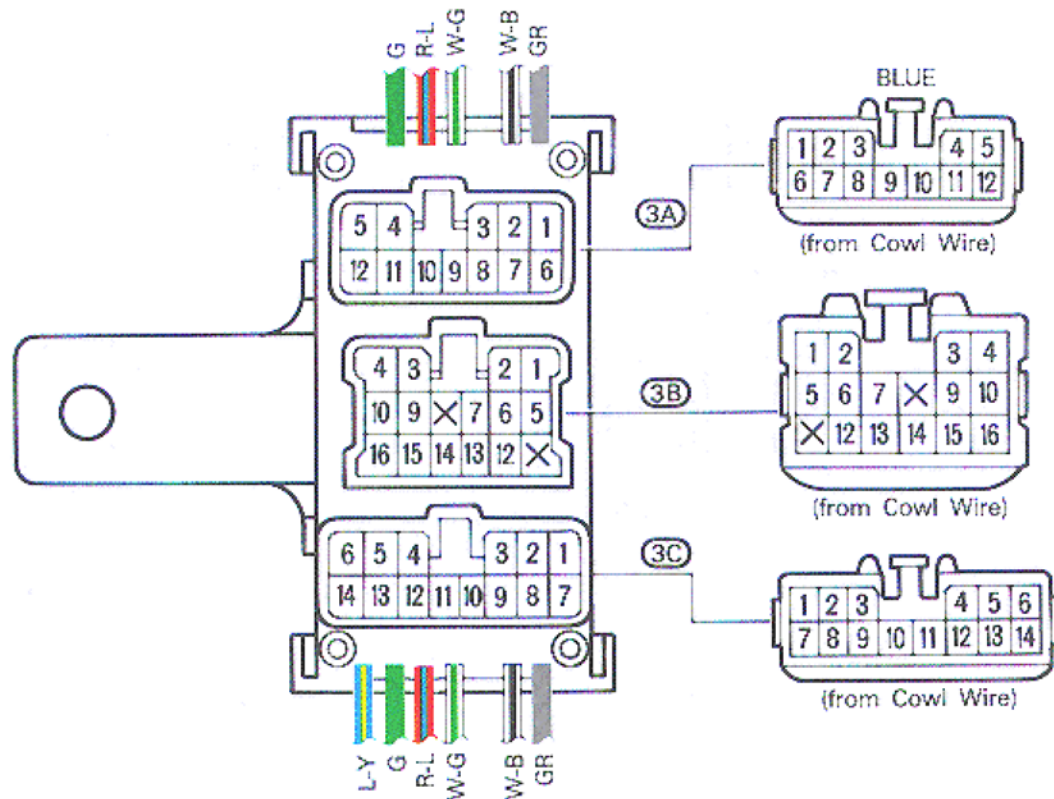


[J/B No. 3 Inner Circuit]

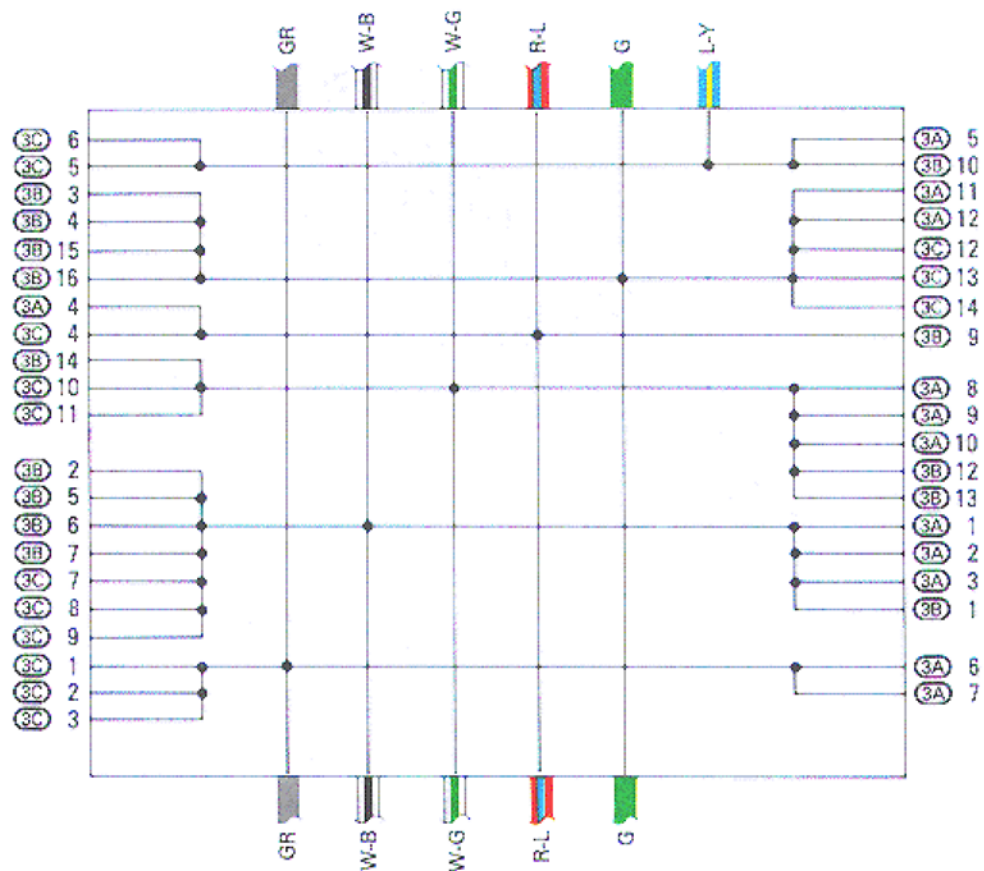


RELAY LOCATIONS

② : R/B No. 2	Left Kick Panel (See Page 18)
---------------	-------------------------------

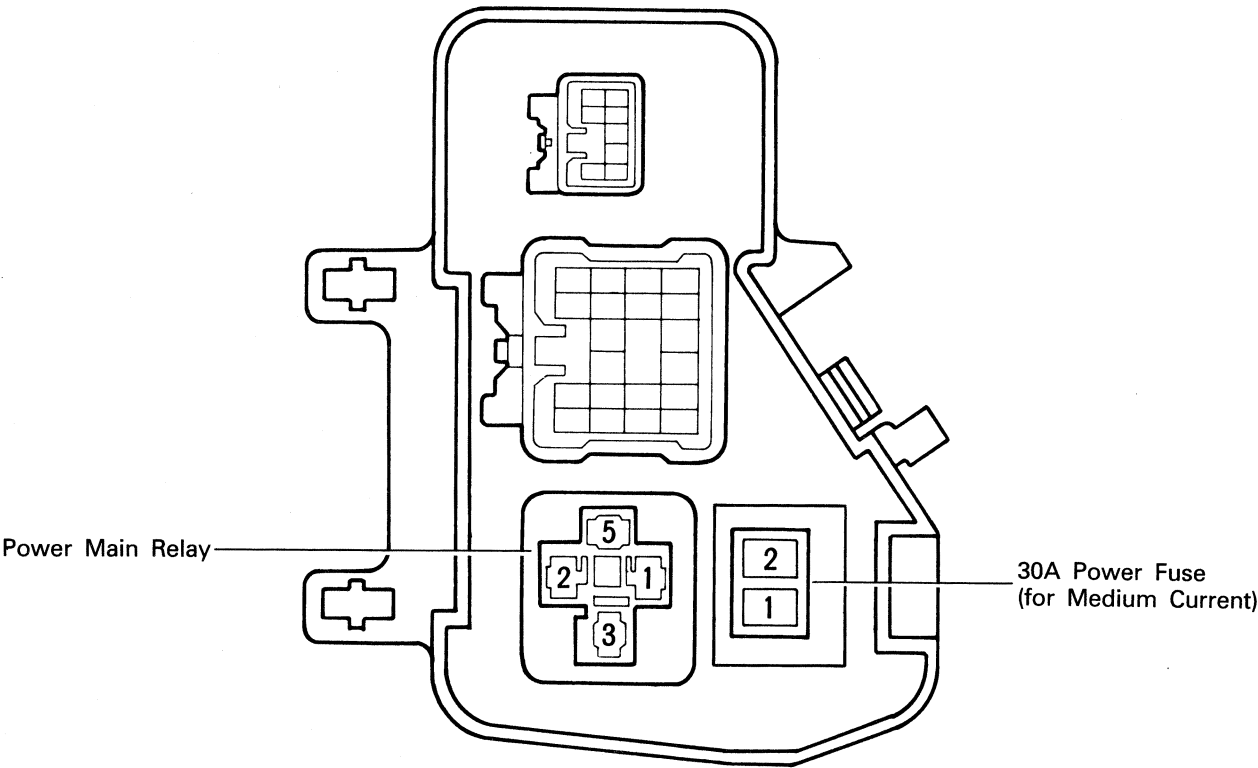


③ : R/B No. 3	Right Kick Panel (See Page 18)
---------------	--------------------------------

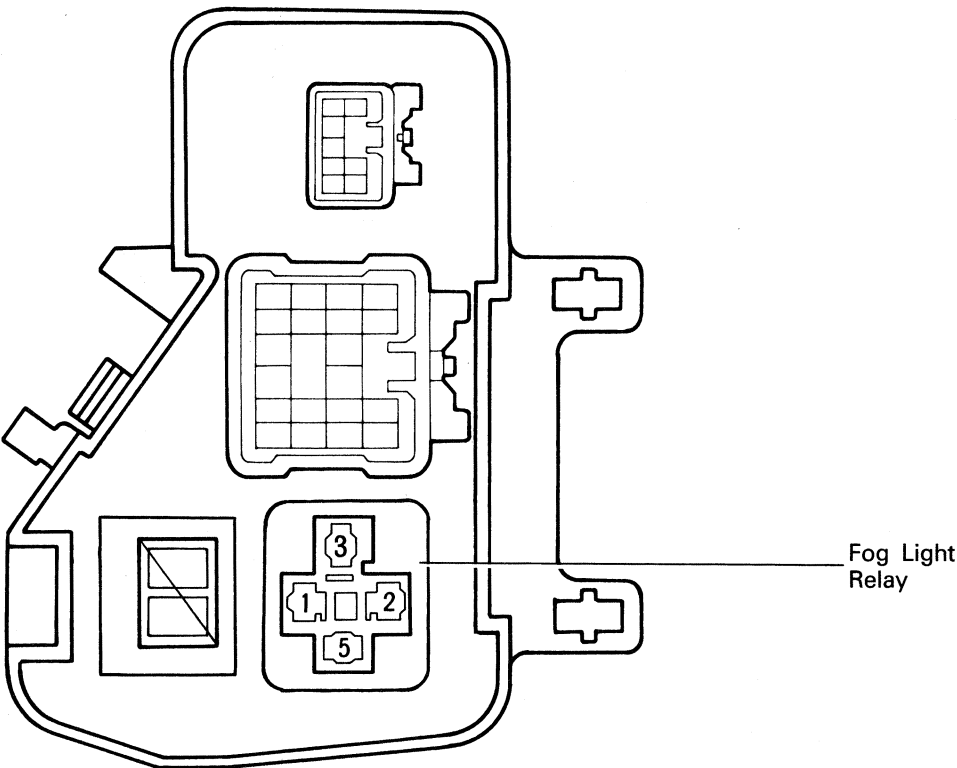

④ : R/B No. 4

Right Kick Panel

(See Page 18)

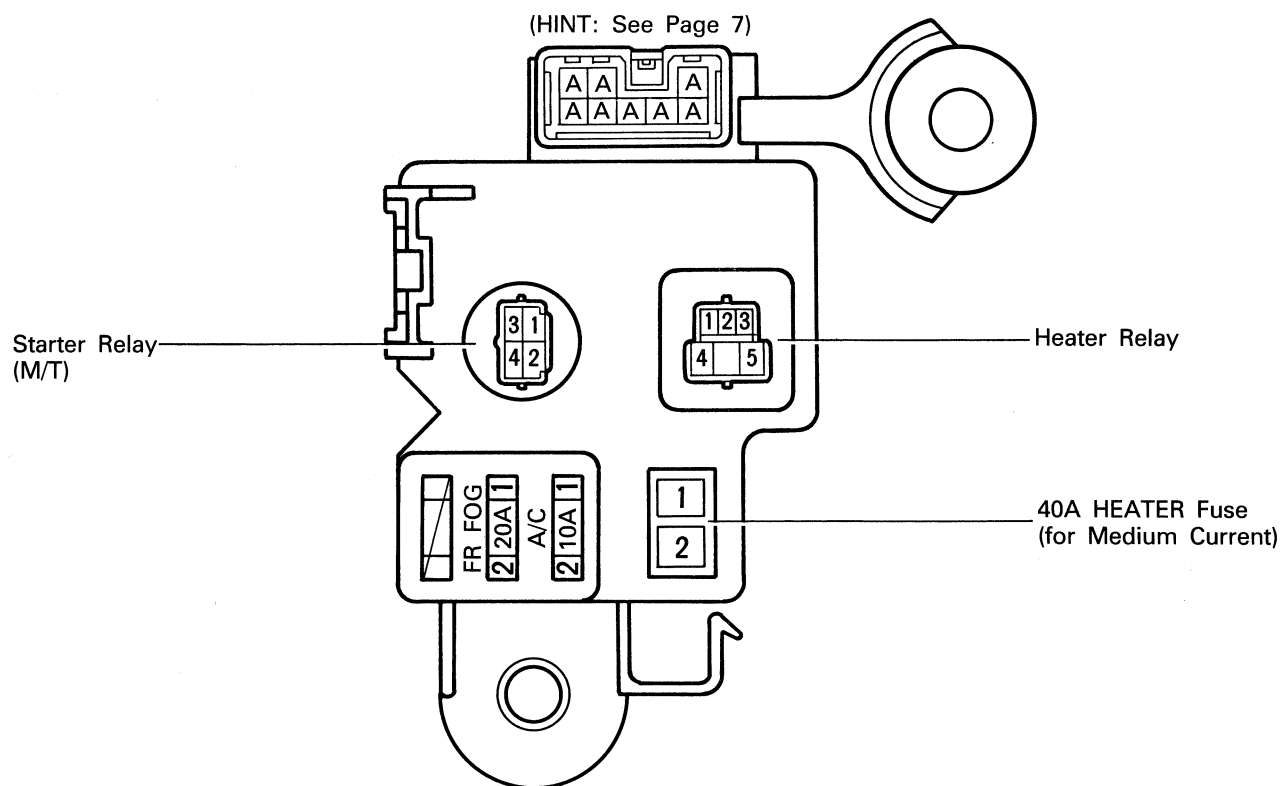

⑤ : R/B No. 5

Engine Compartment Front Right

(See Page 18)

