


# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[3S-GTE]

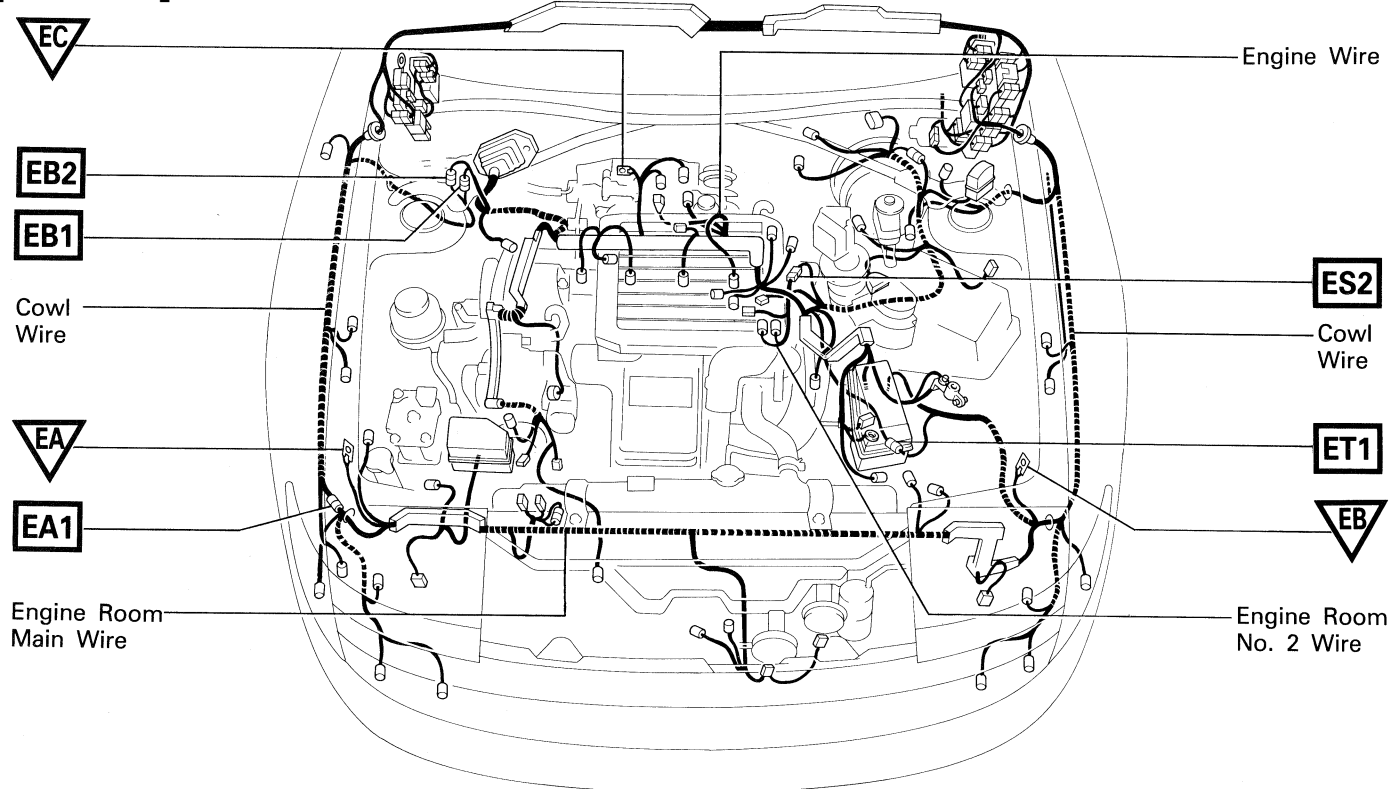

○ : Location of Splice Points

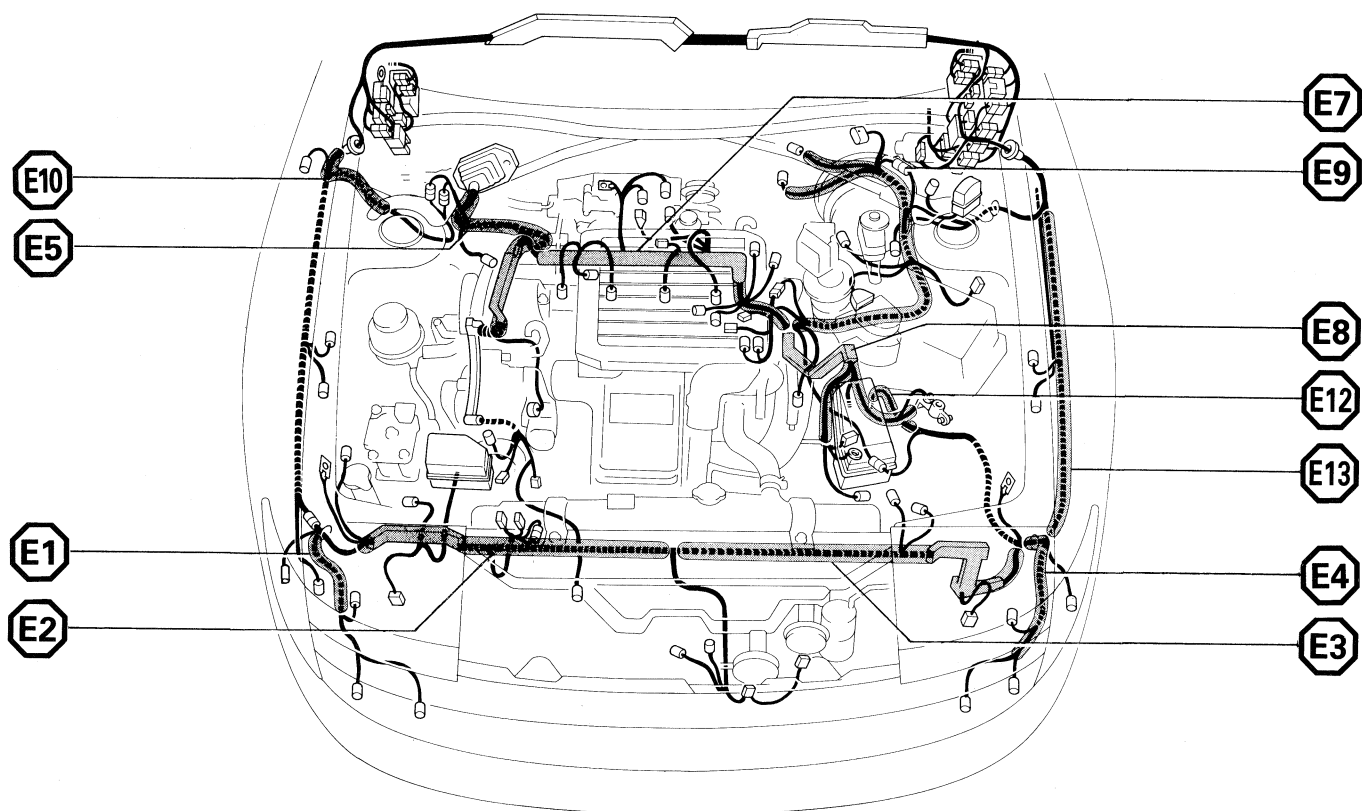

# Connector Joining Wire Harness and Wire Harness

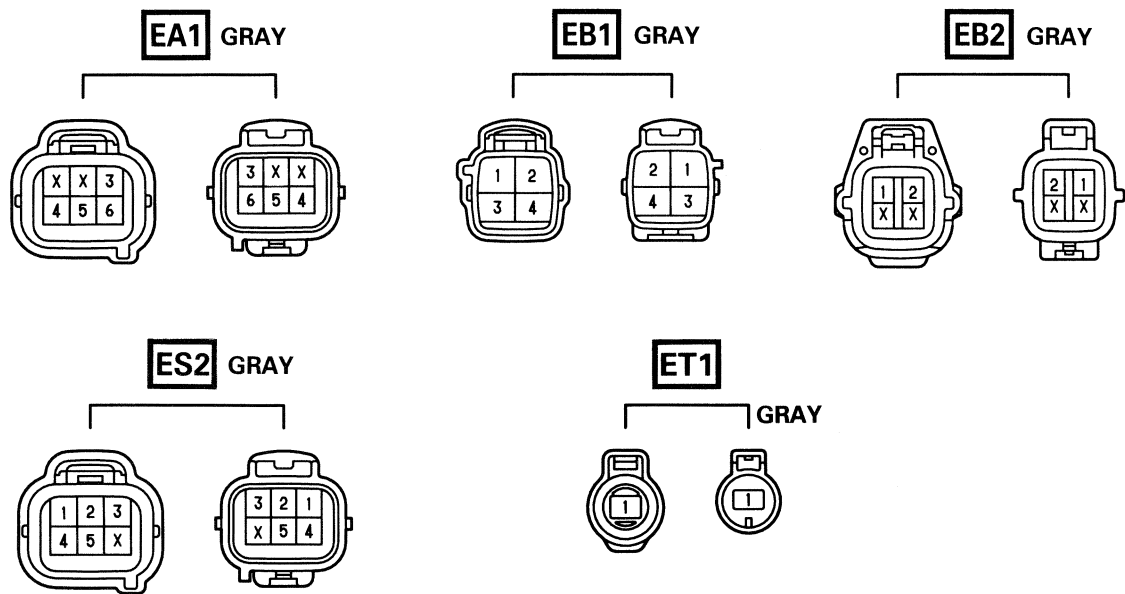


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)             |
|------|------------------------------------------------------------------------|
| EA1  | COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER) |
| EB1  | ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)            |
| EB2  |                                                                        |
| ES2  | ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)          |
| ET1  | ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)             |

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[5S-FE]

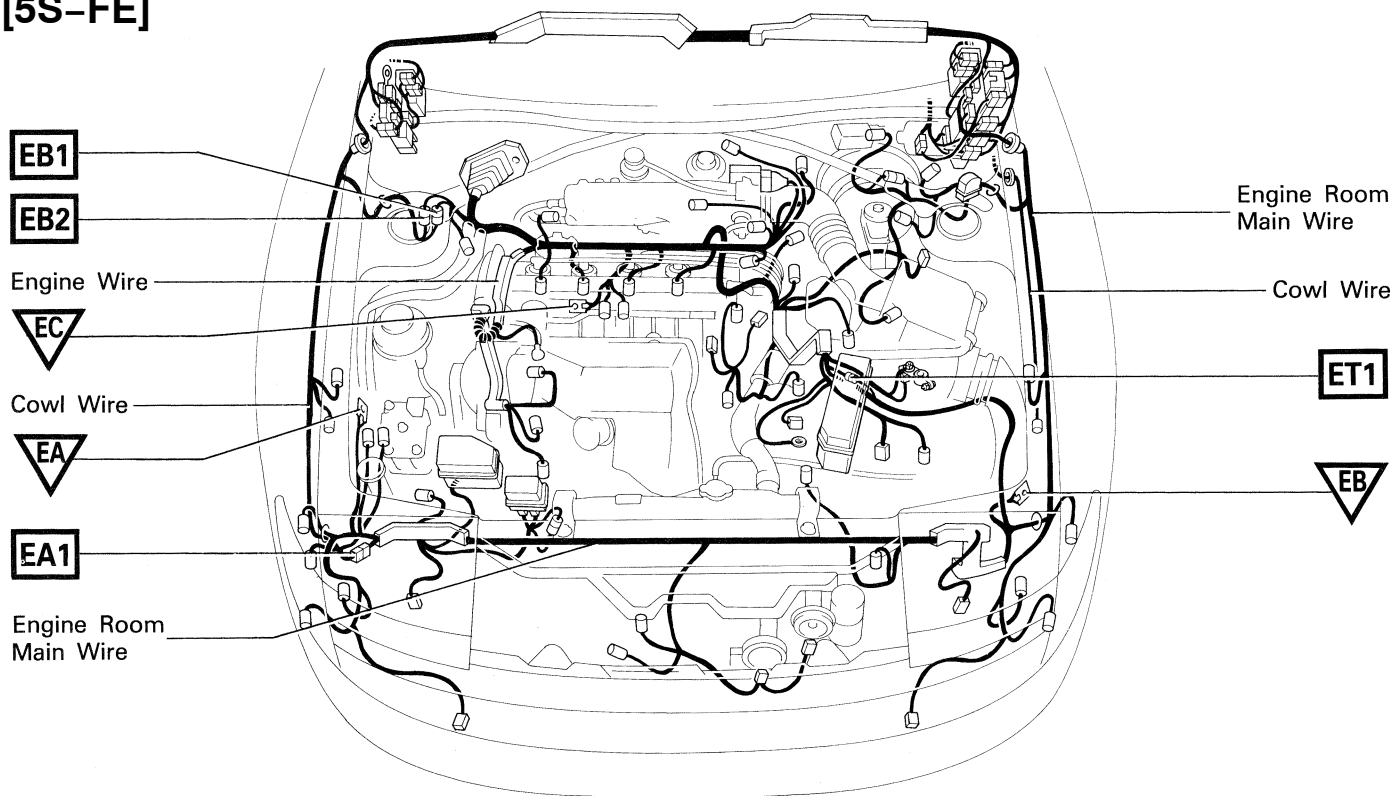

○ : Location of Splice Points

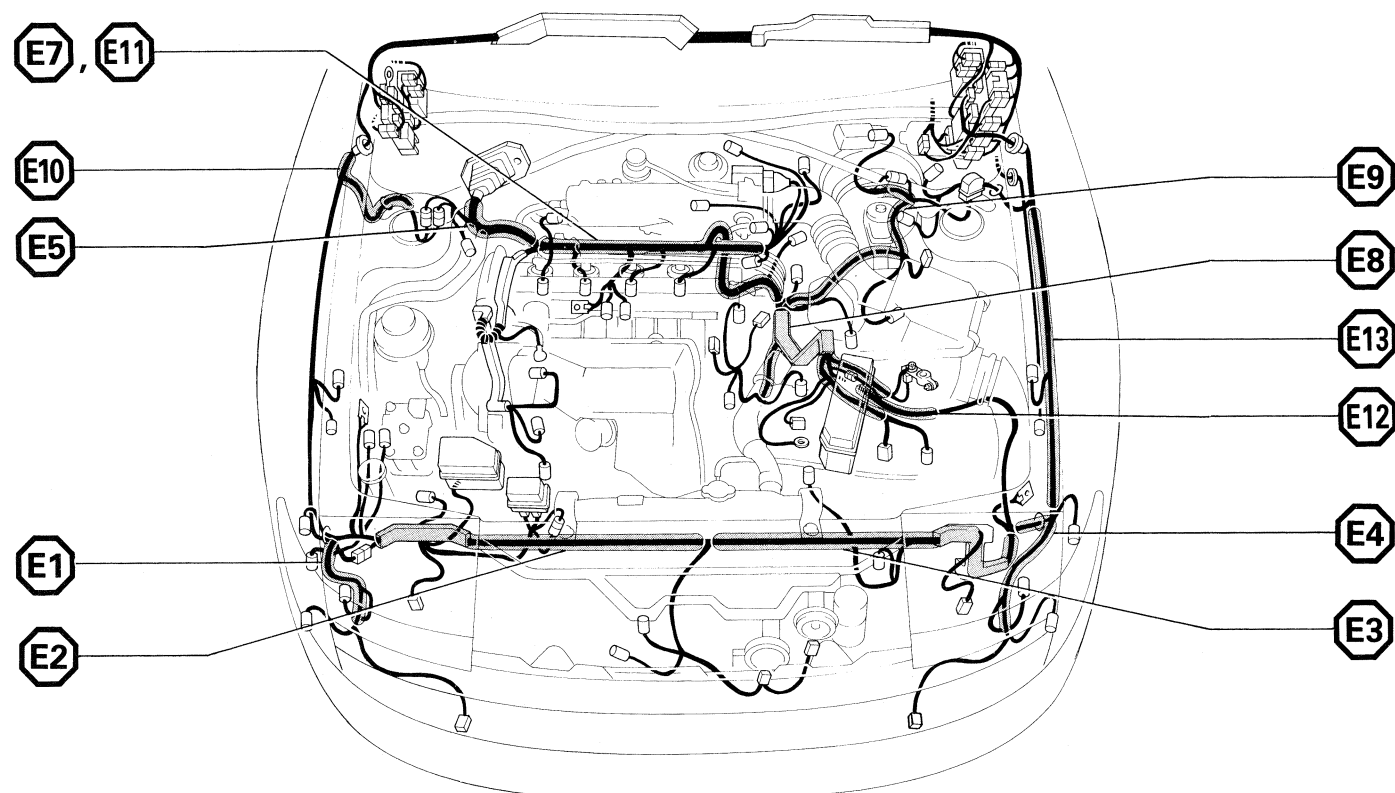

# Connector Joining Wire Harness and Wire Harness

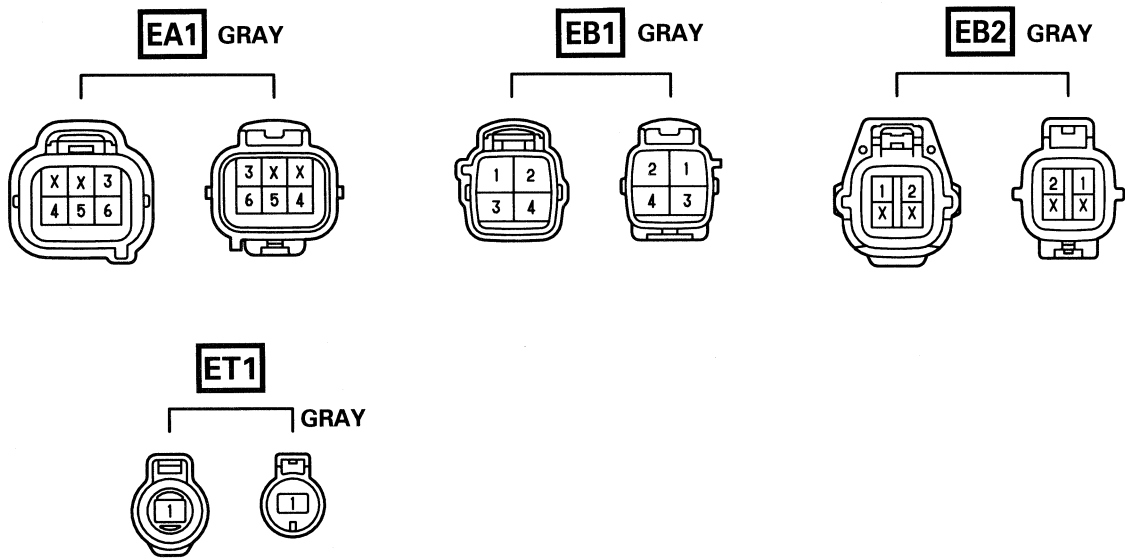


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)             |
|------|------------------------------------------------------------------------|
| EA1  | COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER) |
| EB1  | ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)            |
| EB2  |                                                                        |
| ET1  | ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)             |

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[4A-FE]

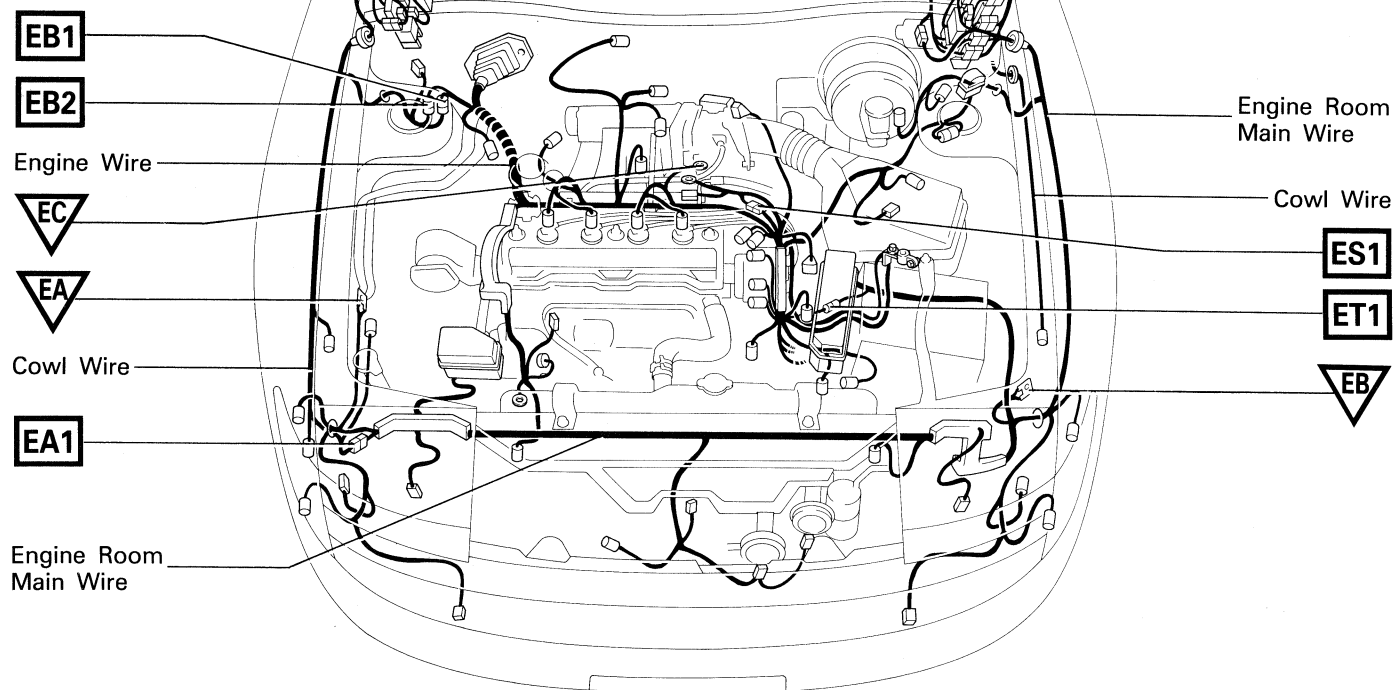

○ : Location of Splice Points

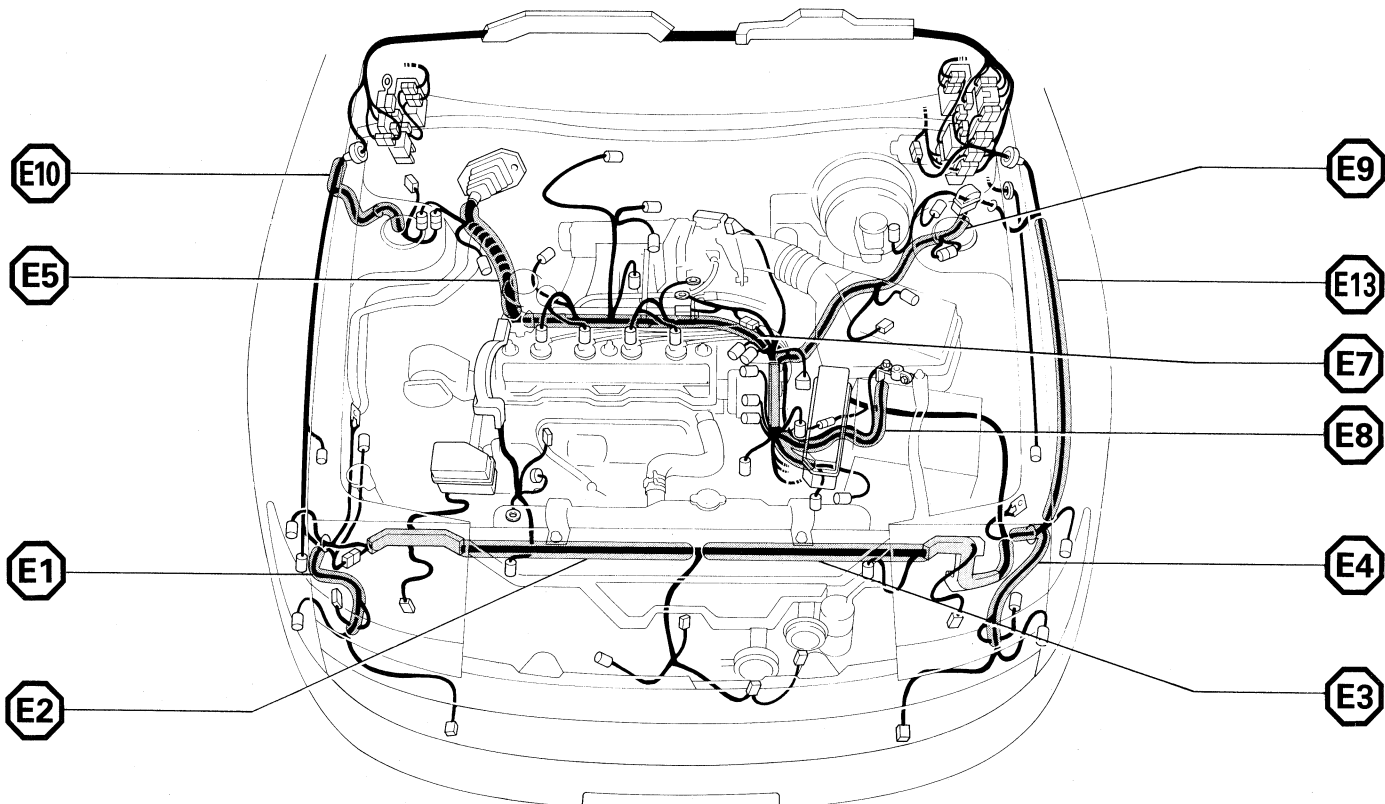


# Connector Joining Wire Harness and Wire Harness

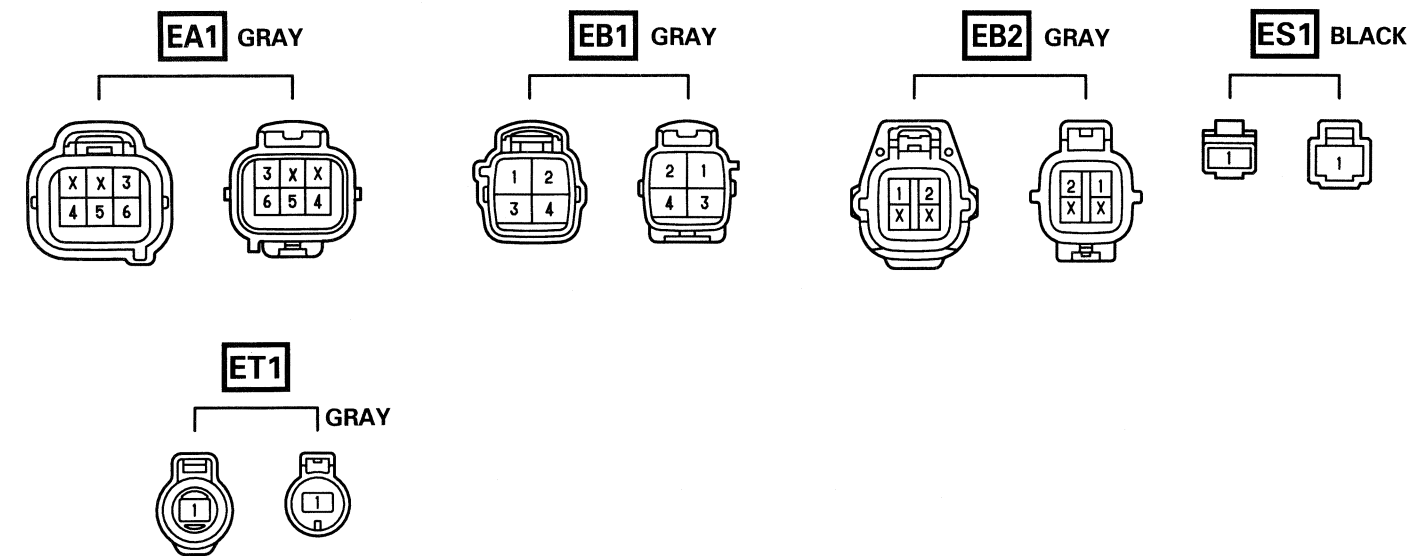

| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)             |
|------|------------------------------------------------------------------------|
| EA1  | COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER) |
| EB1  | ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)            |
| EB2  |                                                                        |
| ES1  | ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE STARTER)              |
| ET1  | ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)             |

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

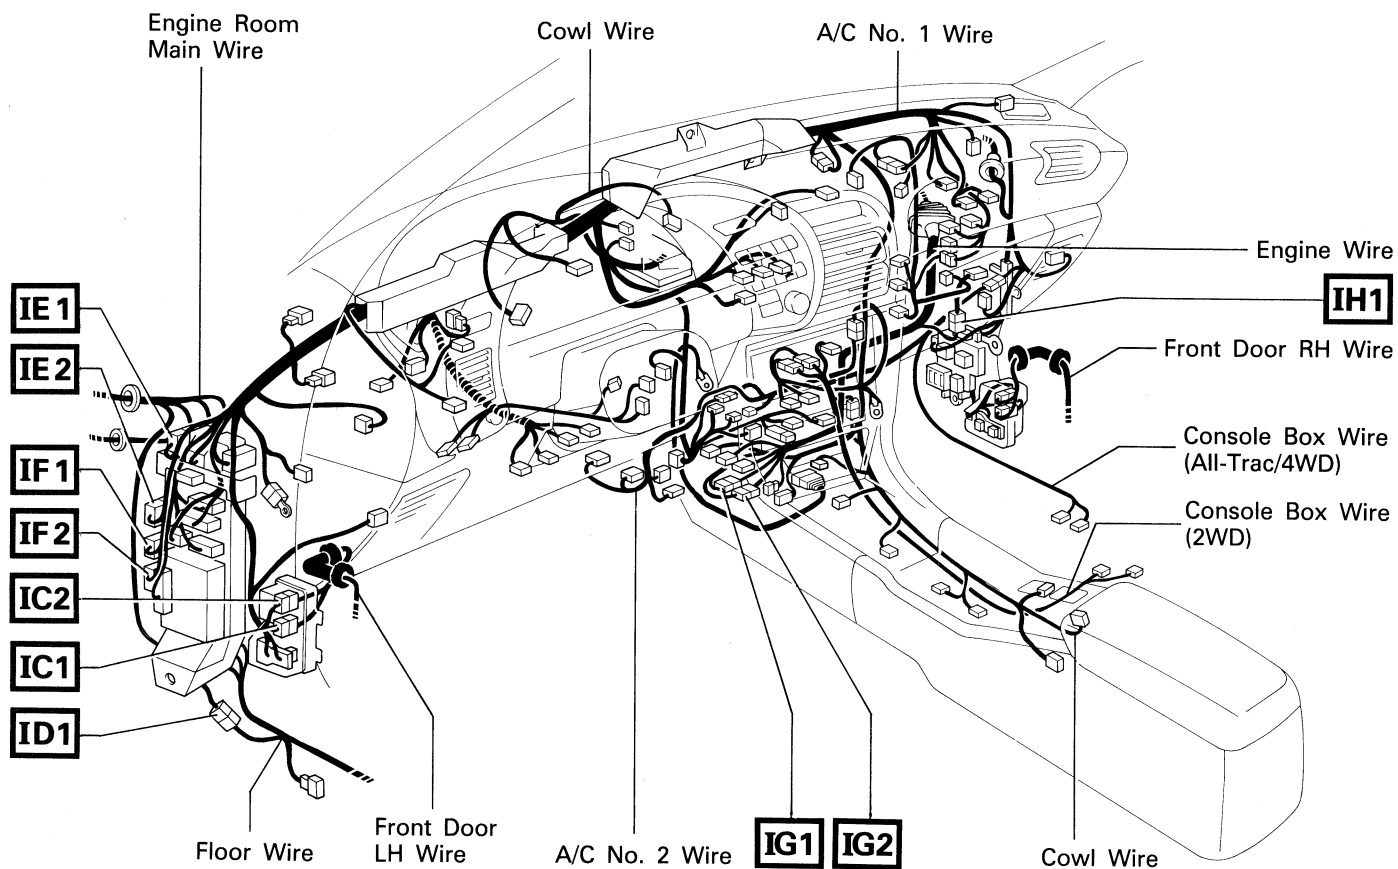

▽ : Location of Ground Points



## Connector Joining Wire Harness and Wire Harness

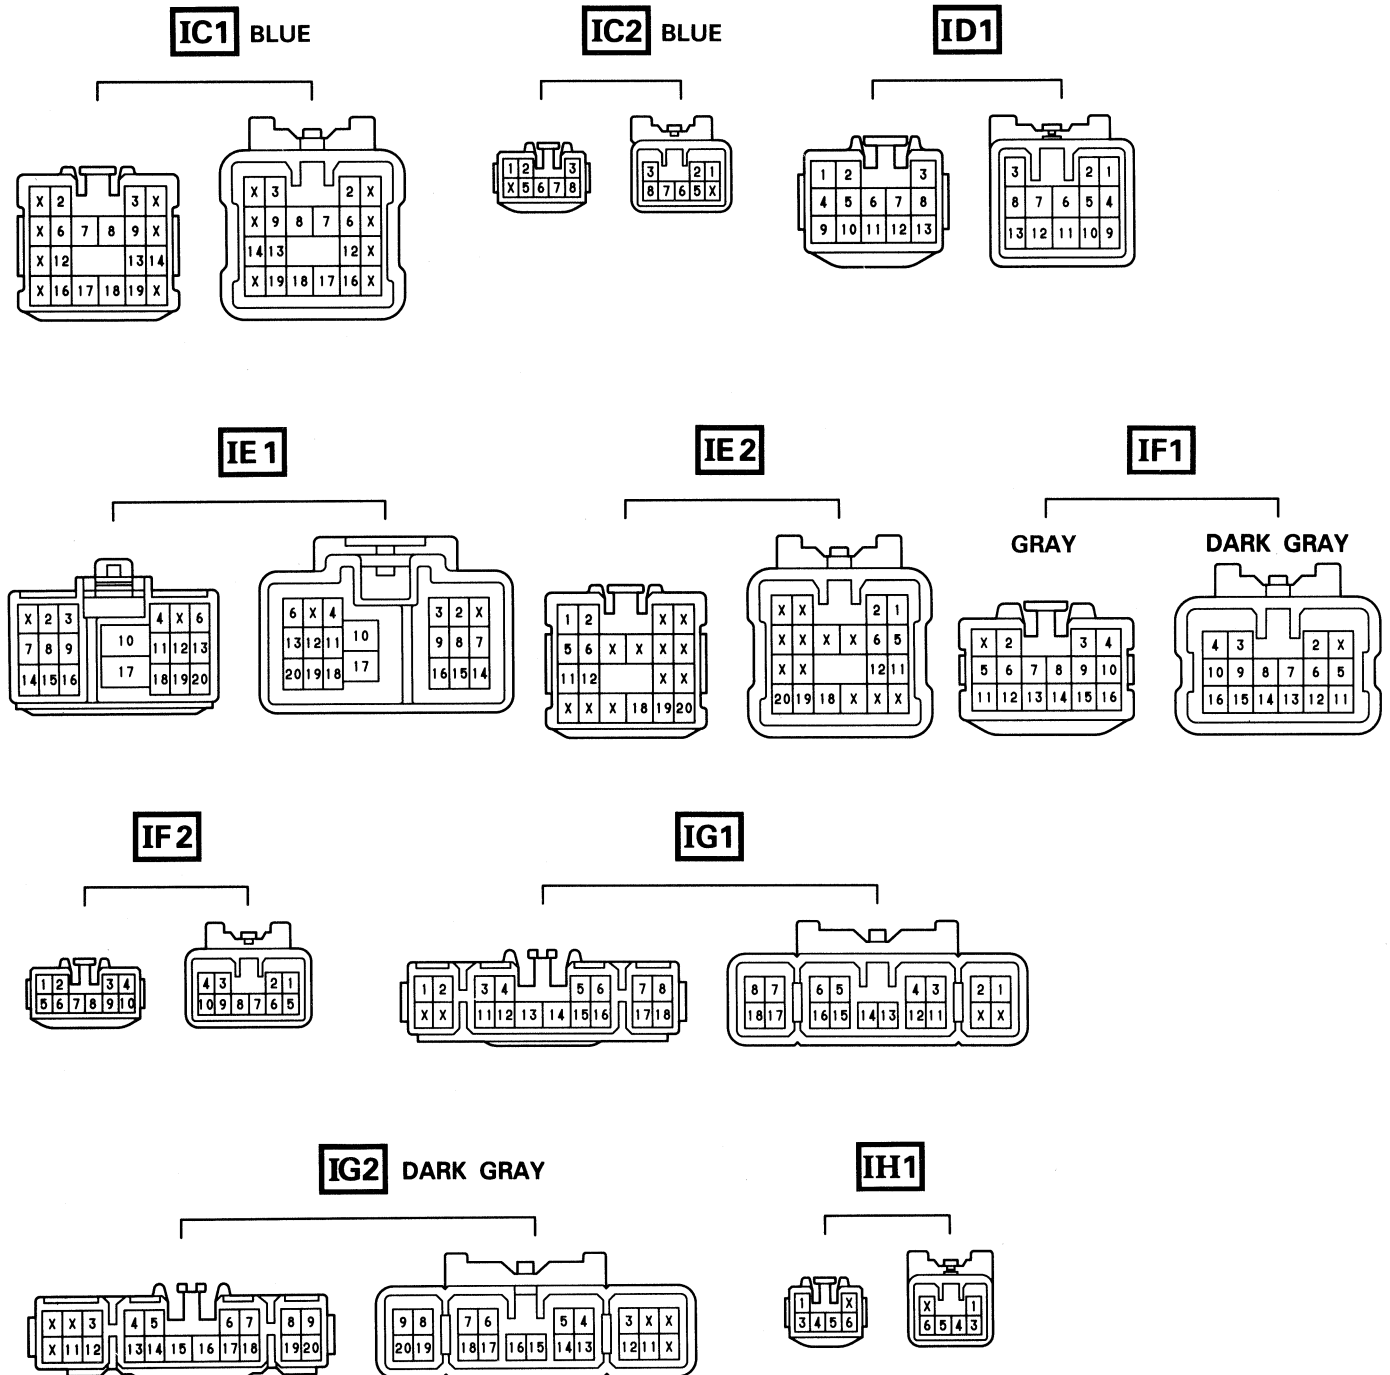


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|------------------------------------------------------------|
| IC1  | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)         |
| IC2  | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)         |
| ID1  | ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)     |
| IE1  | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)      |
| IE2  | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)      |
| IF1  | FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)                 |
| IF2  | FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)                 |
| IG1  | ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)           |
| IG2  | ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)           |
| IH1  | ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)      |




# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

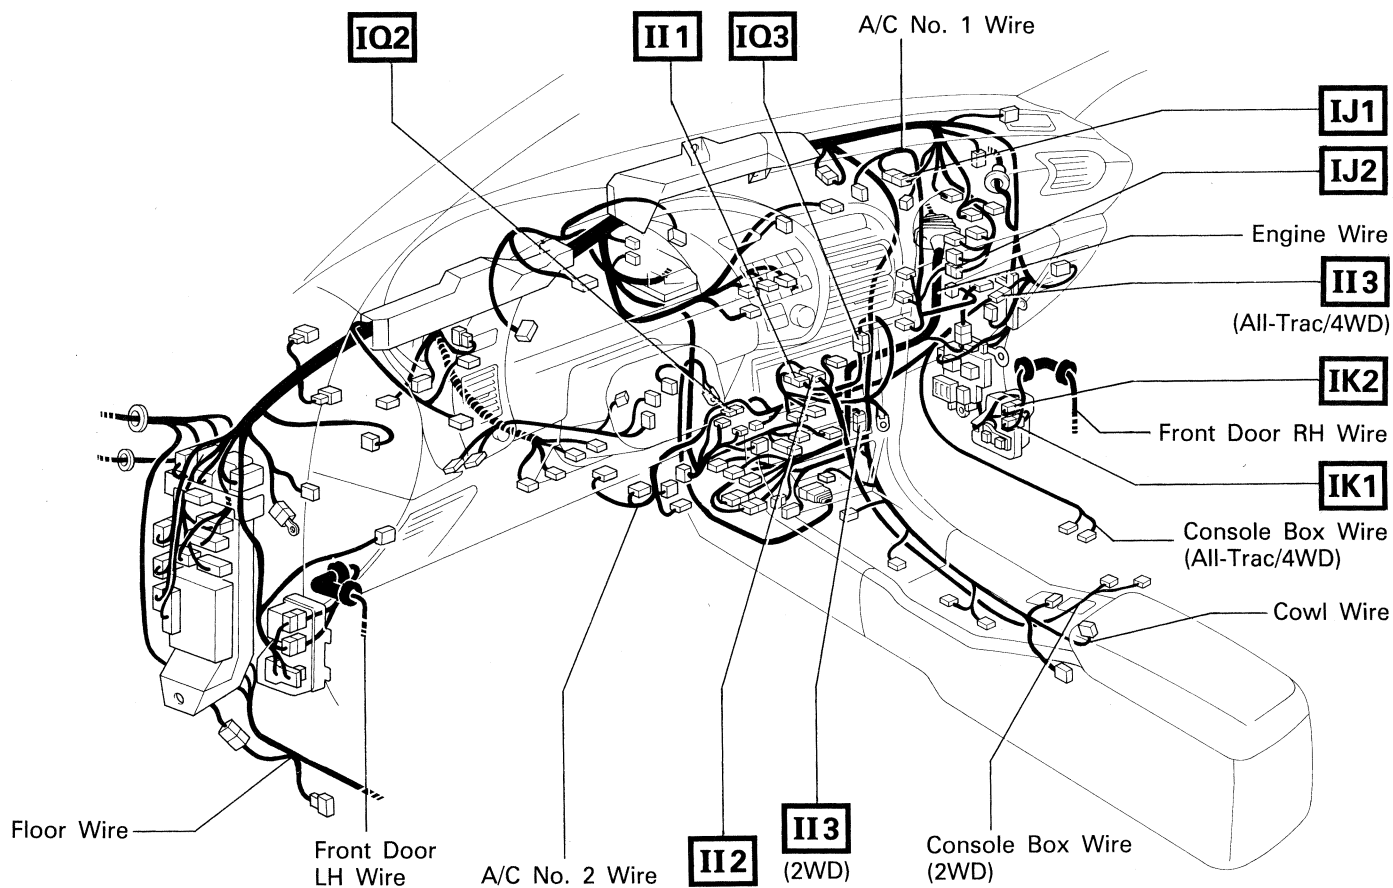

○ : Location of Splice Points

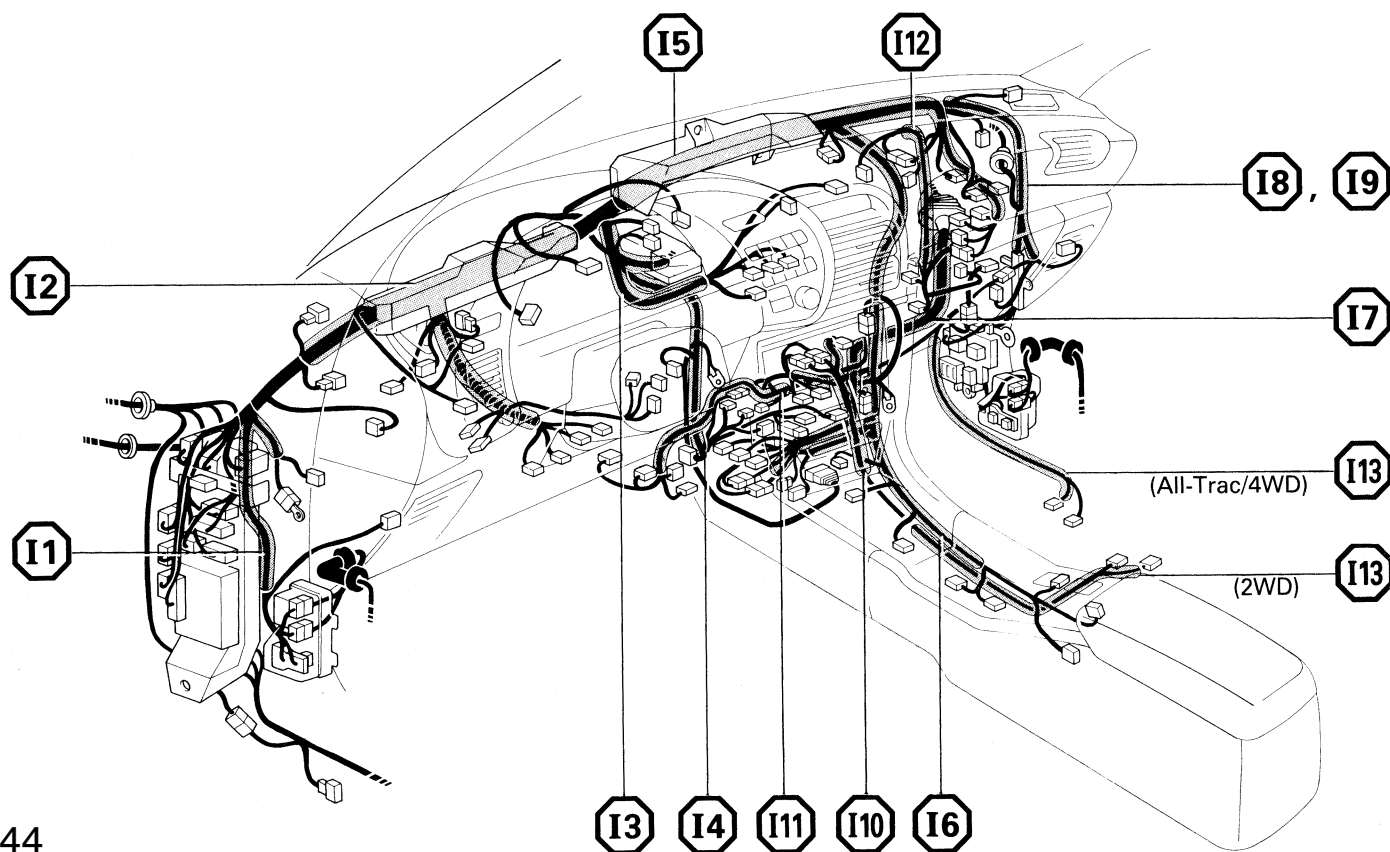

## Connector Joining Wire Harness and Wire Harness

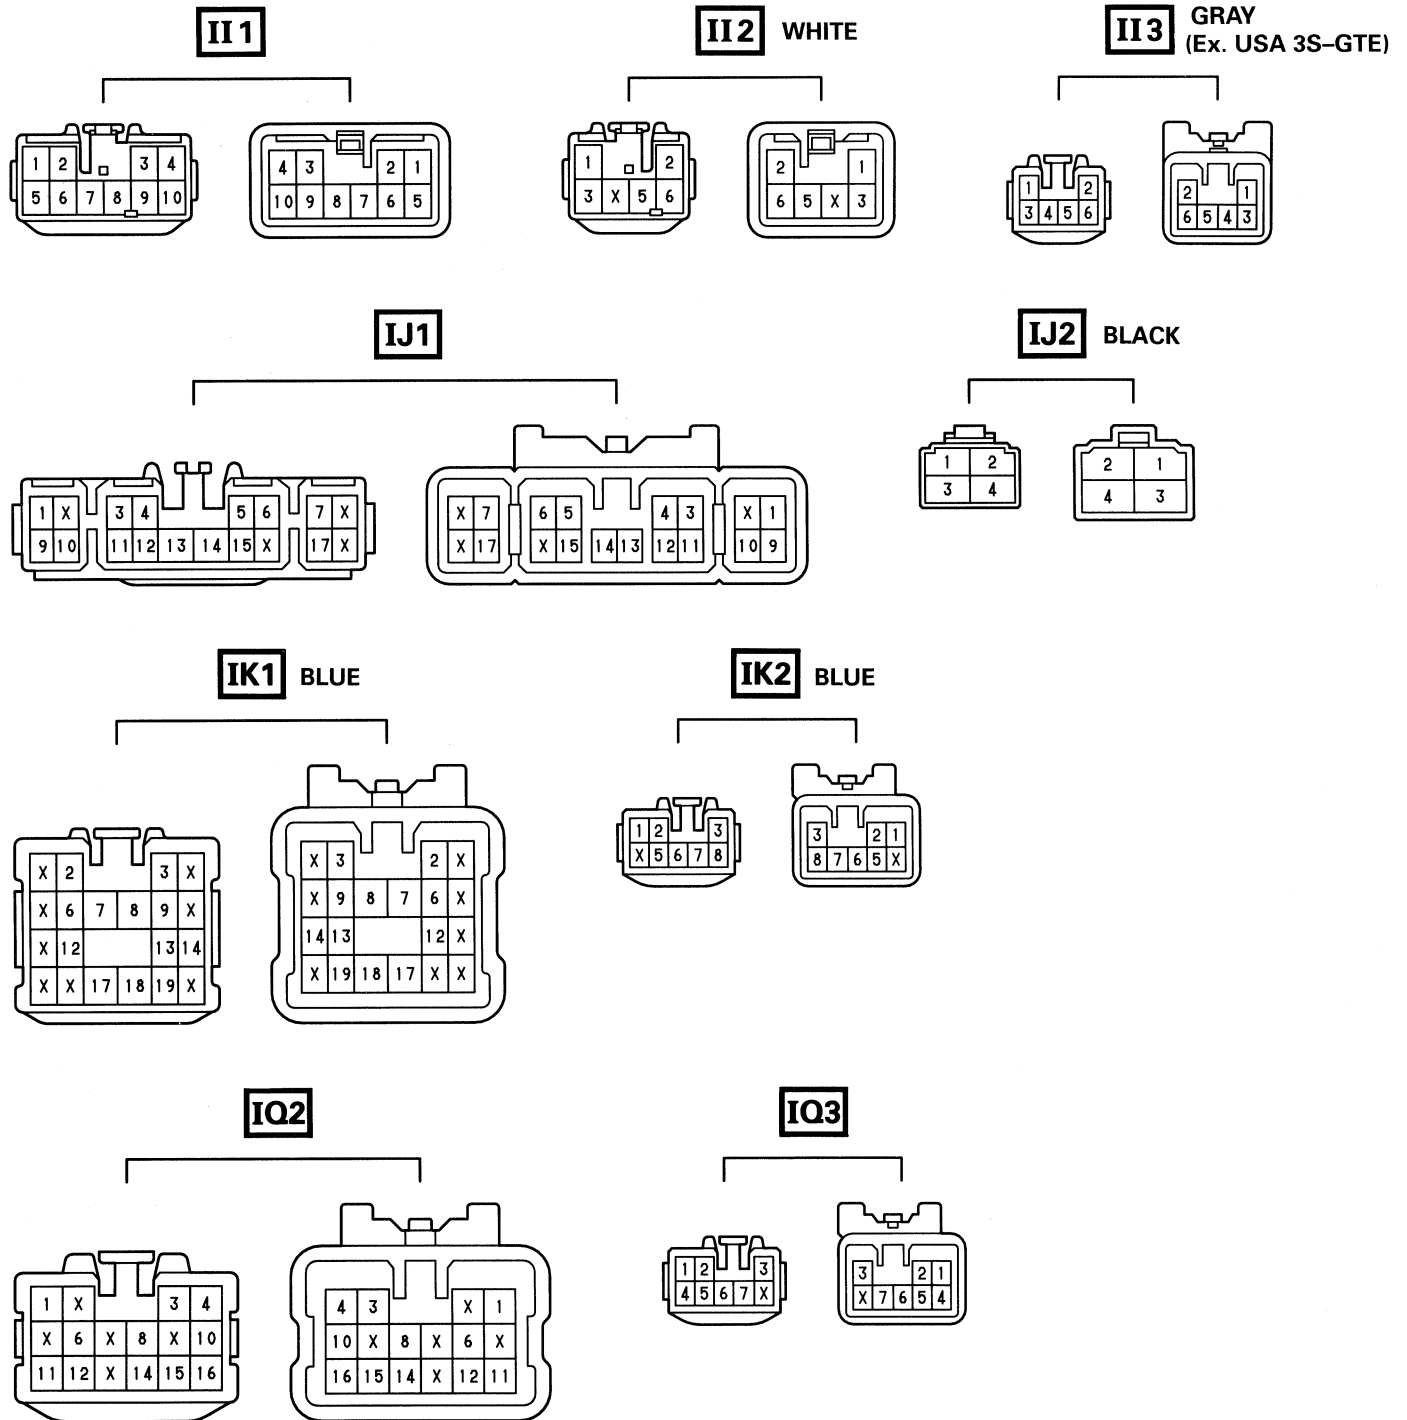


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)         |
|------|--------------------------------------------------------------------|
| II1  | COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)           |
| II2  |                                                                    |
| II3  | COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF ALL-TRACK/4WD) |
| IJ1  | COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL OF 2WD)           |
| IJ2  | COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)                |
| IK1  |                                                                    |
| IK2  | FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)                |
| IQ2  | COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)                  |
| IQ3  |                                                                    |

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[L/B]

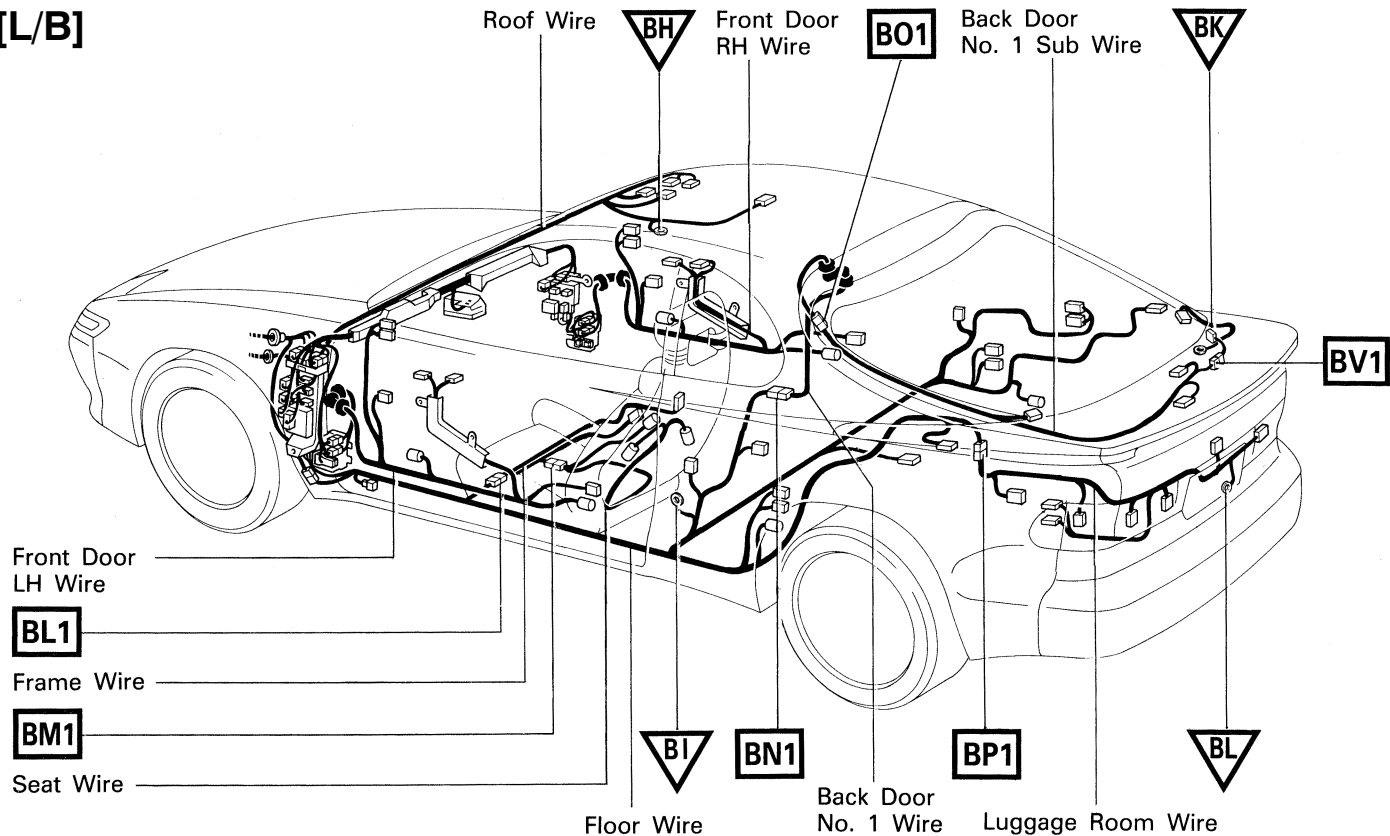

○ : Location of Splice Points

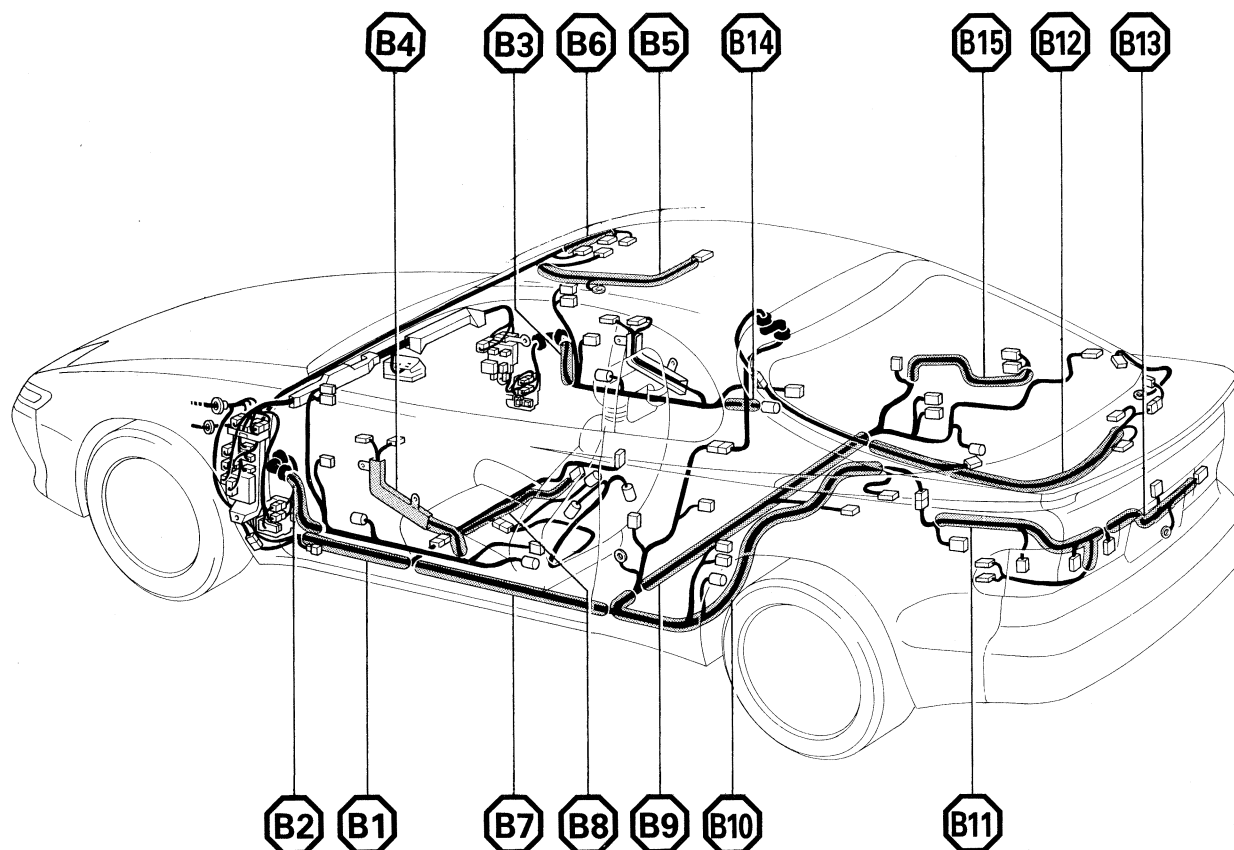

# Connector Joining Wire Harness and Wire Harness

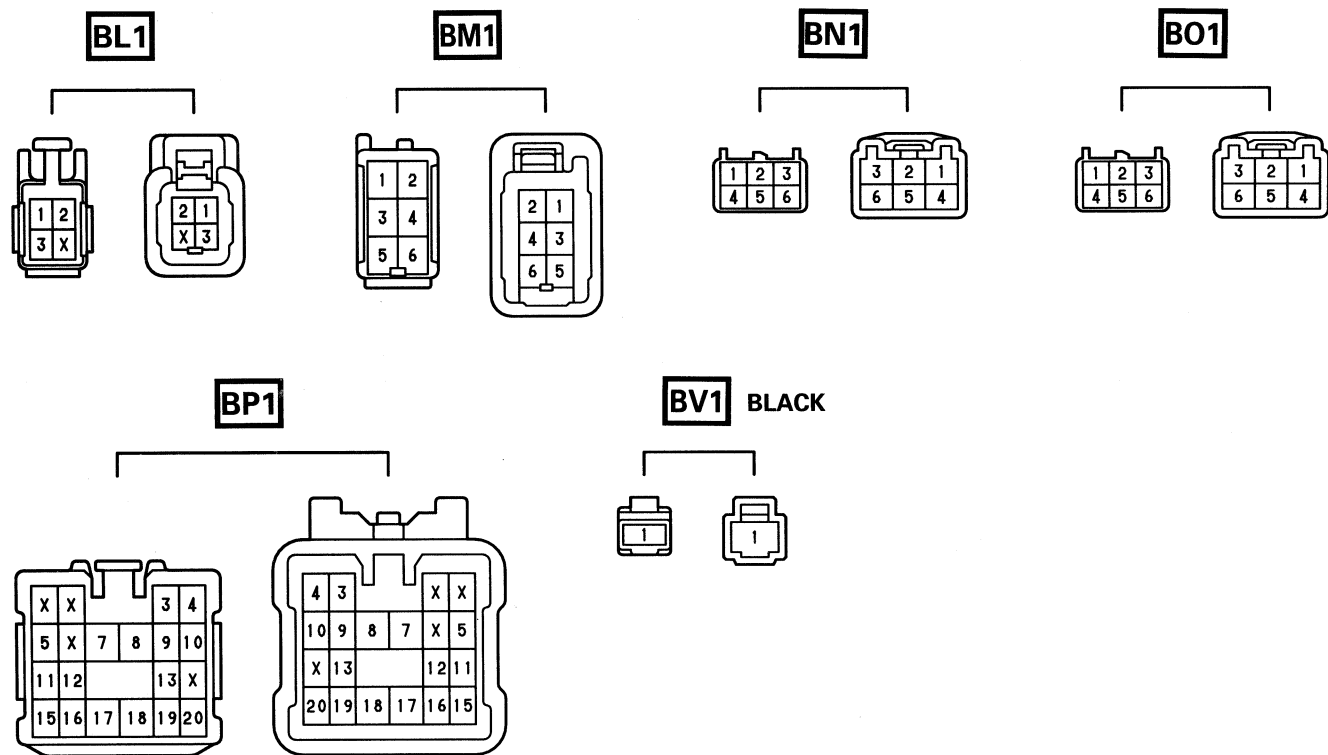


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)               |
|------|--------------------------------------------------------------------------|
| BL1  | FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)               |
| BM1  | FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)                       |
| BN1  | BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)     |
| BO1  | BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT) |
| BP1  | FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)             |
| BV1  | BACK DOOR NO. 1 SUB WIRE AND REAR WINDOW DEFOGGER WIRE (BACK DOOR RIGHT) |

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[C/P]

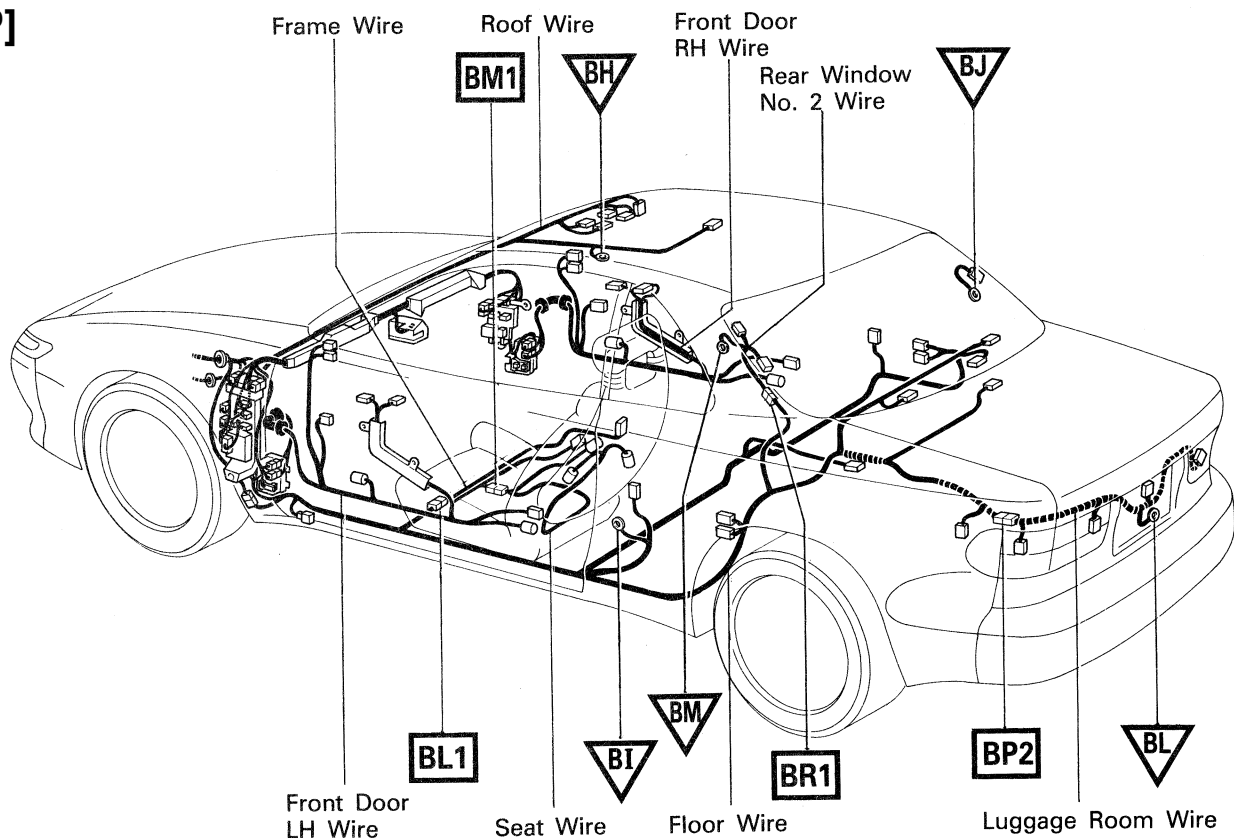

○ : Location of Splice Points

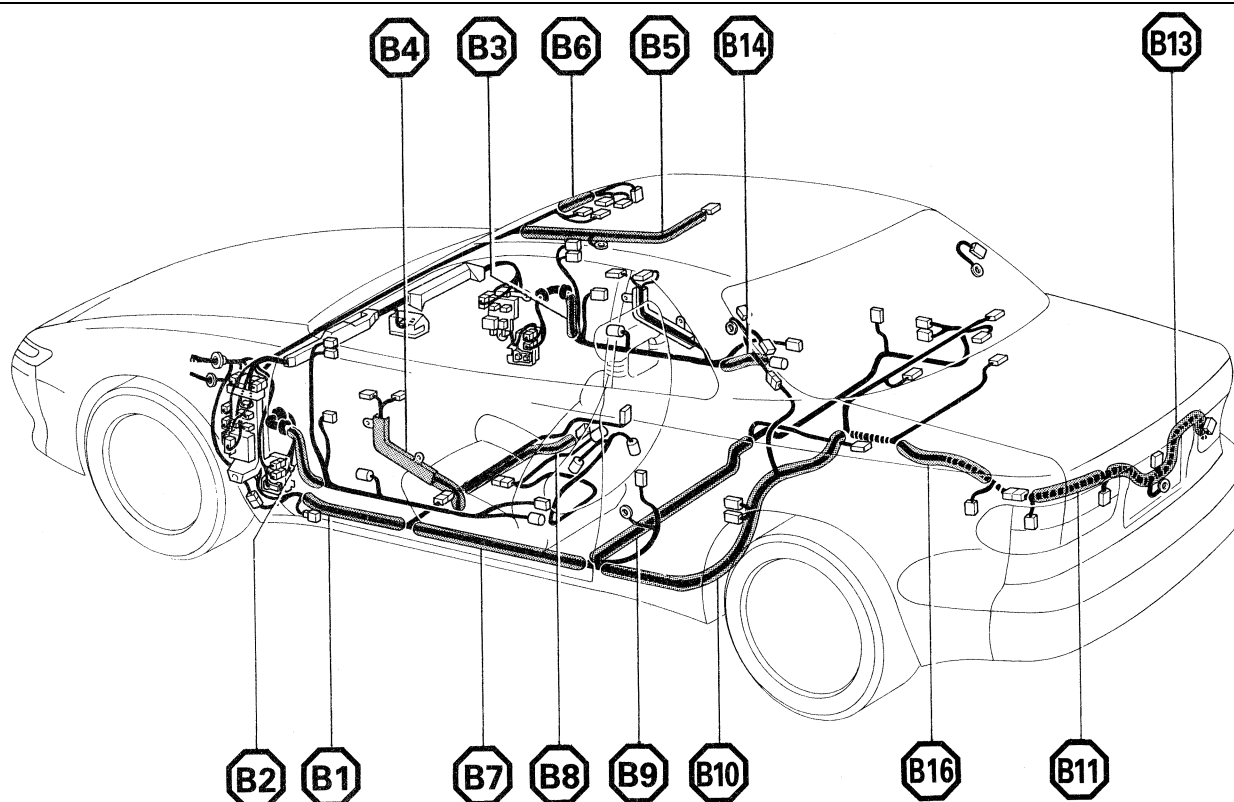

# Connector Joining Wire Harness and Wire Harness

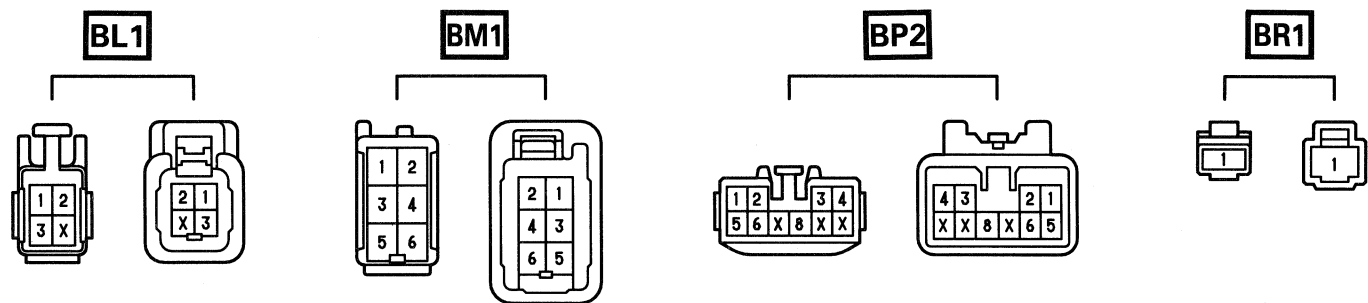

| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)  |
|------|-------------------------------------------------------------|
| BL1  | FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)  |
| BM1  | FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)          |
| BP2  | FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT) |
| BR1  | FLOOR WIRE AND REAR WINDOW NO. 2 WIRE (LEFT REAR PILLAR)    |