


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

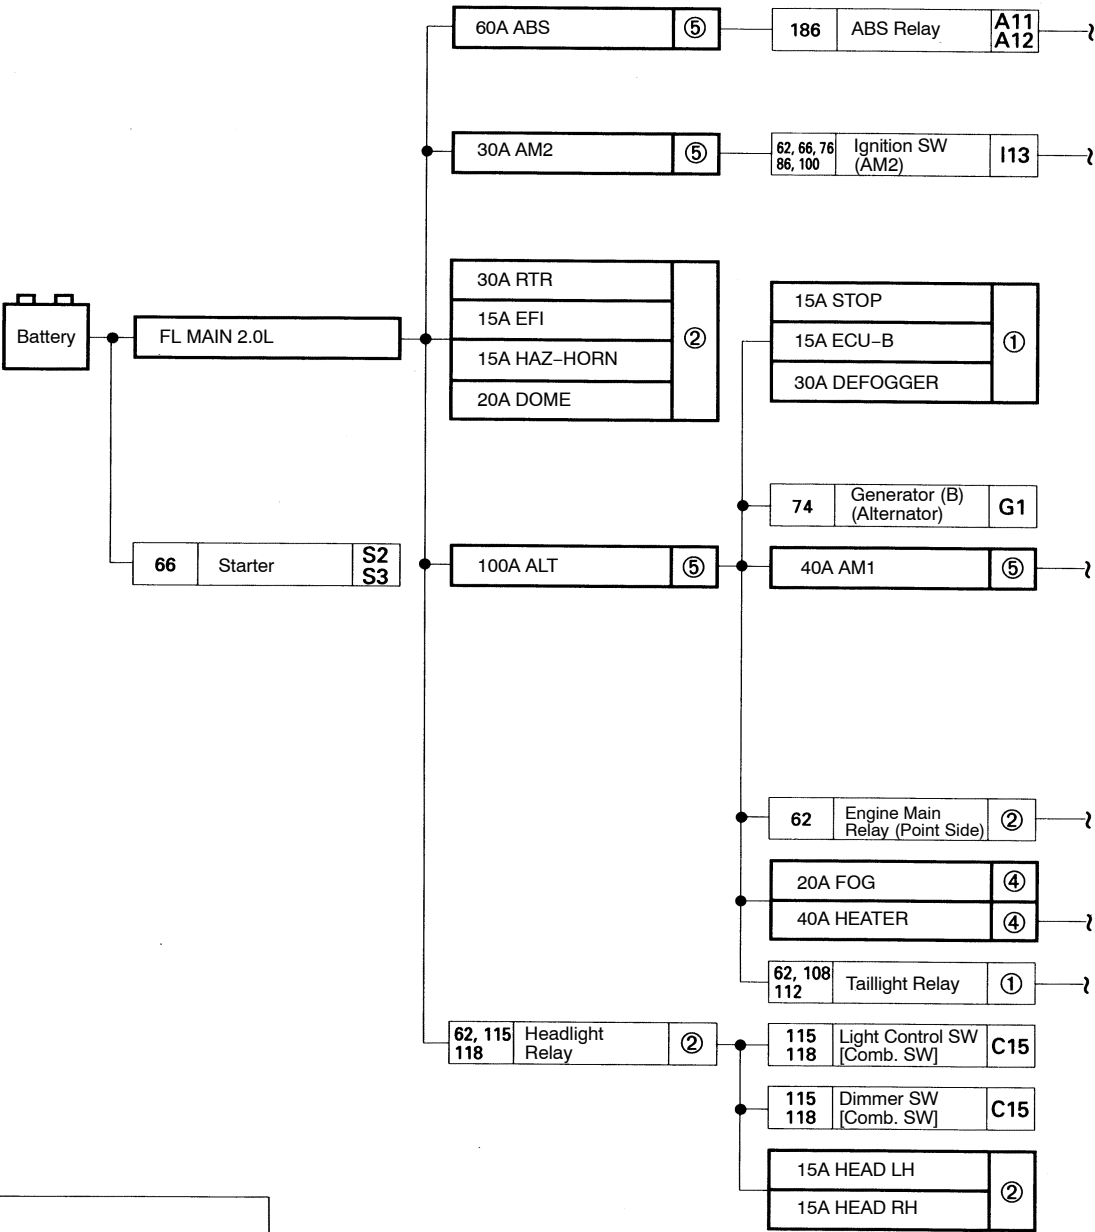

Example

2

Starter

S3

2

15A DOME

2

Code or Location

Parts


* Page Nos. of Related Systems

Location

Electrical Source

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

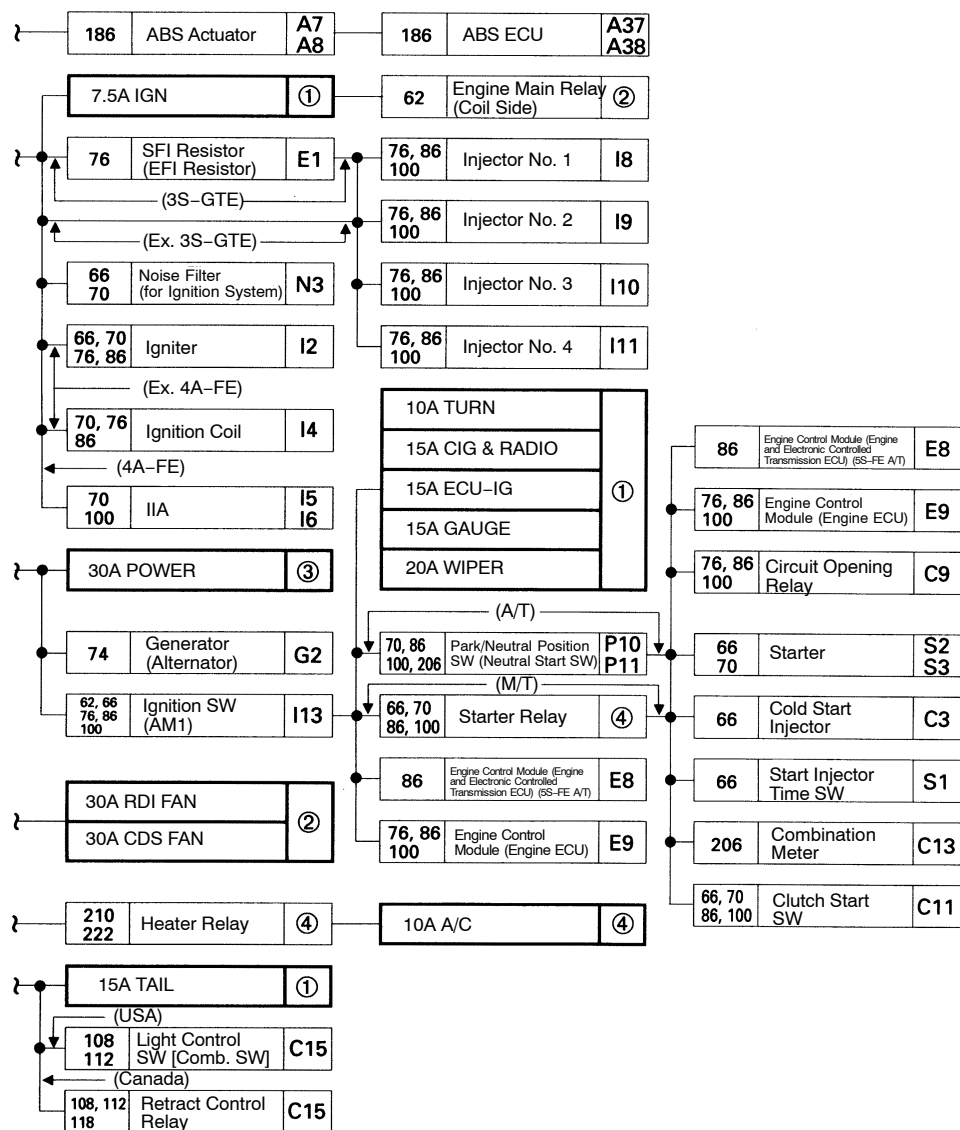

(1) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		210 222	222	210 222	186			108 210 222	210 222	210	210 222	210	210 222	210 222	108	210	170	186	186	198	
					Parts		Code or Location																	
			CB or Fuse		A/C Condenser Fan Motor	A/C Idle-Up VSV	A/C Magnetic Clutch	A/C Pressure SW	ABS Actuator	ABS Relay	A/C Amplifier	A/C Control Assembly			A/C Power Transistor	A/C System Amplifier	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Ashtray Illumination	Auto A/C Amplifier	Auto Tilt Away ECU	ABS Deceleration Sensor (All-Trac/4WD)	ABS ECU	Auto Antenna Control Relay and Motor
			A2	A3	A4	A5	A7	A11	A15	A16	A17	A18	A20	A23	A26	A28	A30	A31	A32	A35	A36	A37	A38	A41
①	30A	DEFOGGER																						
	20A	WIPER																						
	15A	GAUGE		●	●	●	●	●	●		●	●			●	●	●			●	●			
	7.5A	IGN				●																		
	15A	ECU-B																			●			
	10A	TURN																						
	15A	CIG & RADIO														●	●						●	
	15A	TAIL									●	●												
	15A	ECU-IG																		●		●	●	
	15A	STOP																				●		
②	15A	HEAD LH																						
	15A	HEAD RH																						
	30A	RTR																						
	15A	EFI																						
	20A	DOME															●							●
	15A	HAZ-HORN																						
	30A	RDI FAN																						
	30A	CDS FAN	●																					
③	30A	POWER																	●					
④	20A	FOG																						
	10A	A/C		●		●			●		●													
	40A	HEATER										●	●					●	●					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

(1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems																					
			132	112	132	132	132	154	168	206	163 168	108	156	136	128	128 163	210 222	115 118	115 118					
Parts			Code or Location																					
			CB or Fuse																					
			Interior Light	License Plate Light	Luggage Compartment Door Courtesy SW (C/P)	Luggage Compartment Light (C/P)	Luggage Compartment Light (L/B)	Noise Filter (for Defogger System)	O/D Solenoid	Oil Pressure SW	O/D Main SW	Panel Relay (for Daytime Running Light System)	Power Seat Motor (for Lumber Support)	Power Seat Motor (for Side Support)	Power Seat SW	Power Window Master SW	Power Window Motor LH	Power Window Motor LH	Power Window SW RH	Back-Up Light SW (A/T w/o Electronic Controlled Transmission)	Park/Neutral Position SW (Neutral Start SW, Back-Up Light SW (A/T w/ Electronic Controlled Transmission)	Radiator Fan Motor	Retract Motor LH	Retract Motor RH
			I14	L1	L2	L3	L4	N4	O1	O2	O7	P1	P3	P4	P5	P6	P7	P8	P9	P10	P11	R1	R2	R3
①	30A	DEFOGGER						●																
	20A	WIPER																						
	15A	GAUGE							●	●	●									●	●			
	7.5A	IGN																						
	15A	ECU-B																						
	10A	TURN																						
	15A	CIG & RADIO																						
	15A	TAIL		●								●	●											
	15A	ECU-IG																						
	15A	STOP																						
②	15A	HEAD LH																						
	15A	HEAD RH																						
	30A	RTR																					●	●
	15A	EFI																						
	20A	DOME	●		●	●	●																	
	15A	HAZ-HORN																						
	30A	RDI FAN																				●		
	30A	CDS FAN																				●		
③	30A	POWER											●	●	●	●	●	●	●					
④	20A	FOG																						
	10A	A/C																						
	40A	HEATER																			●			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (6) R/B No. 2 (See page 26)

	R4	R5	R6	R7	R8	R9	R10	R11	R12	R19	R22	R23	R24	R25	S4	S7	S8	S9	S10	S11	S13	T2
Radio and Player (w/ CD Player)	●									●	●											
Radio and Player (w/o CD Player)	●	●	●										●									
Remote Control Mirror SW				●								●										
Retract Control Relay													●	●								
Retract Control Relay (for Canada)						●									●	●						
Rheostat							●															
Back-Up Light LH [Rear Comb. Light LH]								●														
Rear Turn Signal Light LH [Rear Comb. Light LH]								●														
Stop Light LH [Rear Comb. Light LH]									●													
Tail and Rear Side Marker Light LH [Rear Comb. Light LH]																						
Back-Up Light RH [Rear Comb. Light RH]									●													
Rear Turn Signal Light RH [Rear Comb. Light RH]									●													
Stop Light RH [Rear Comb. Light RH]										●												
Tail and Rear Side Marker Light RH [Rear Comb. Light RH]																						
Rear Window Defogger										●	●											
Rear Wiper Motor and Relay												●										
Remote Control Mirror LH													●									
Remote Control Mirror RH														●								
Shift Lock ECU															●	●						
Stereo Component Amplifier (w/ CD Player)																●	●					
Stop Light SW																		●				
Sun Roof Control Relay																						
Personal Light [Sun Roof SW]																				●		
Sun Roof Motor																					●	
Turbo Charging Pressure Sensor																			●			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

▼ **QUESTION** Which of the following is the best description of the relationship between the two variables?

