


CHARGING

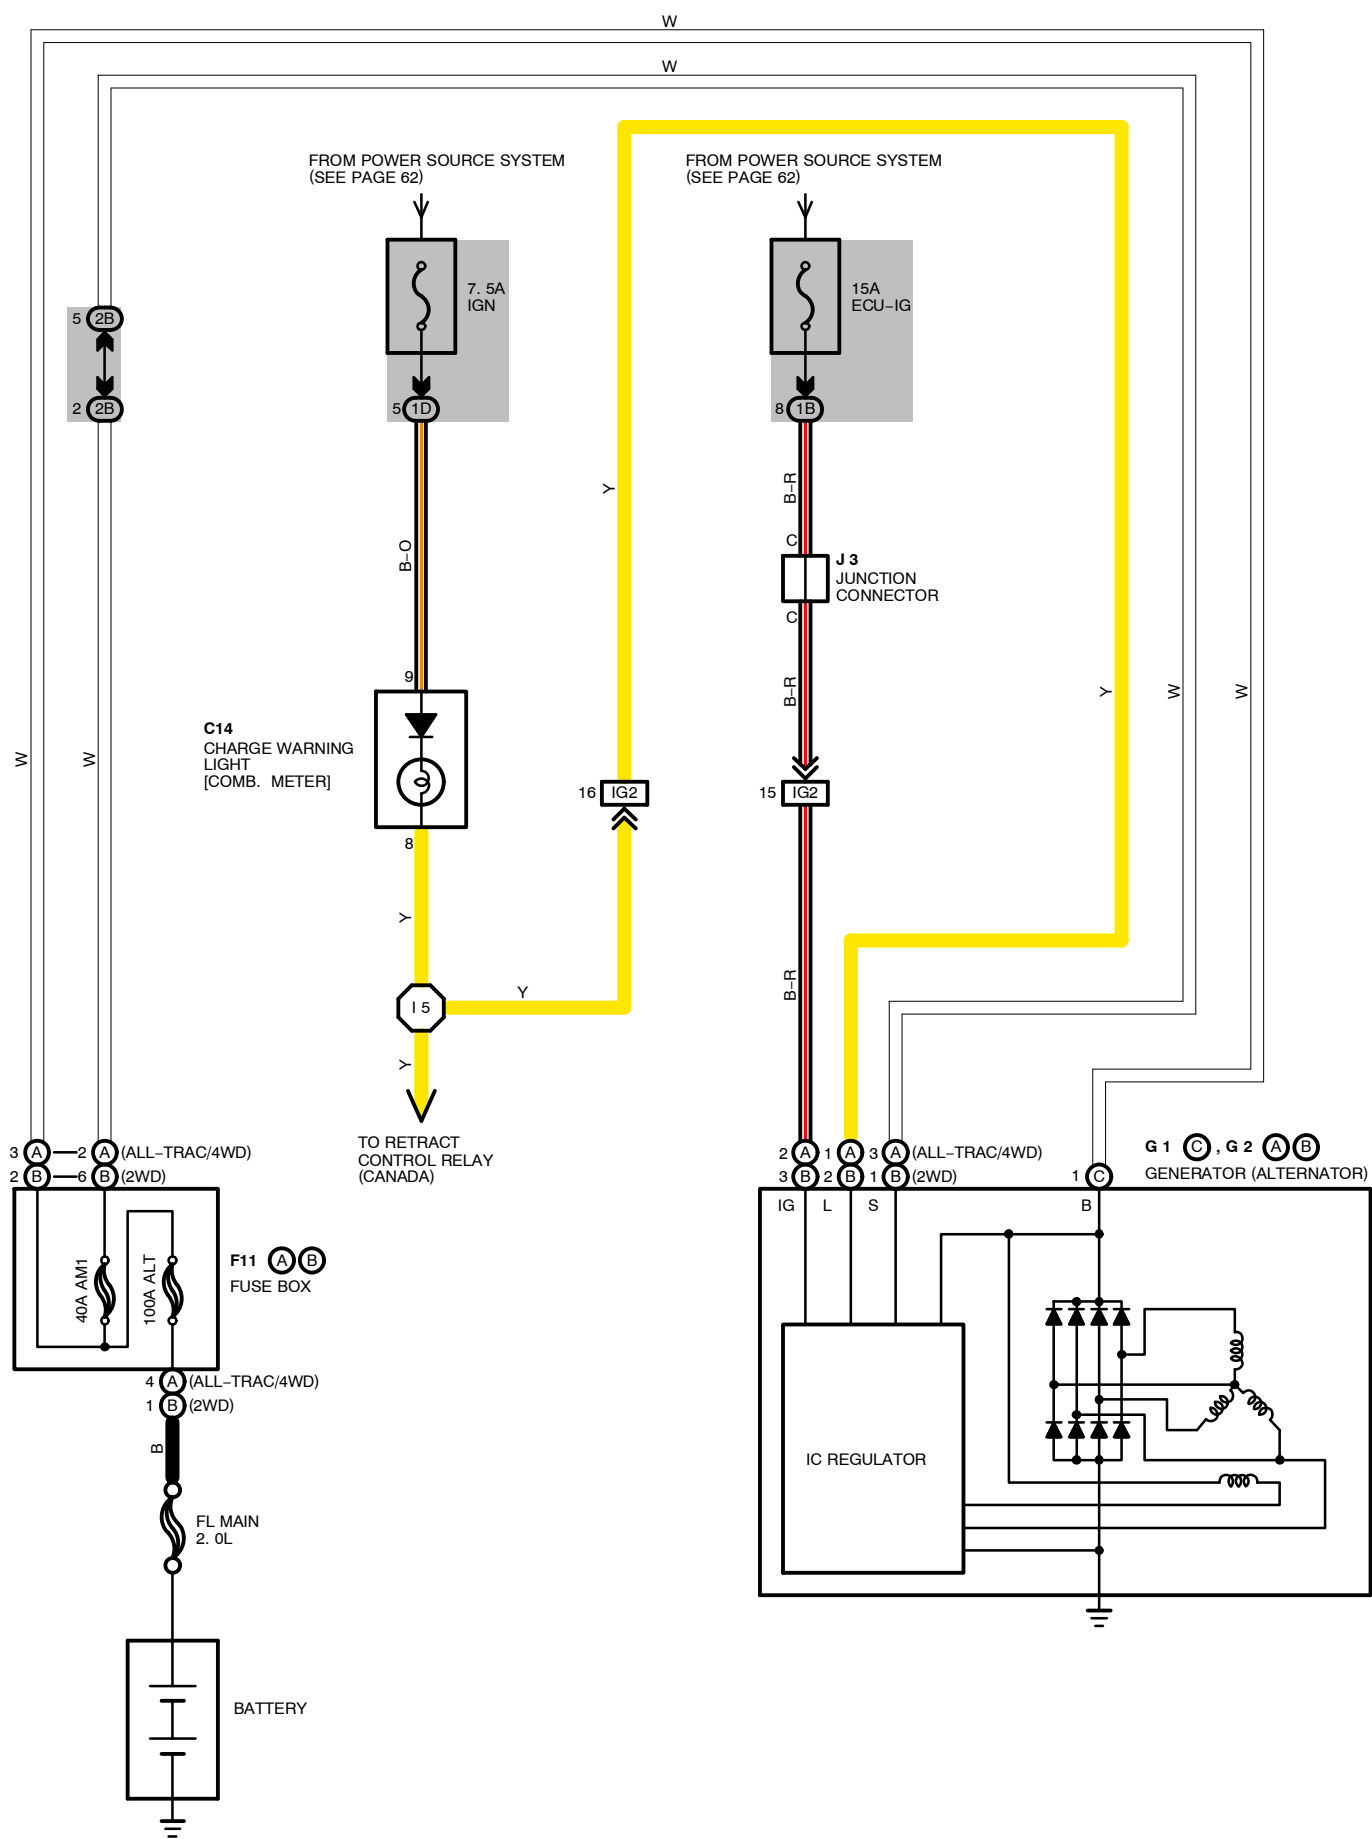

SERVICE HINTS

G 1(C), G 2(A) (B) GENERATOR (ALTERNATOR)

(C) 1-GROUND: 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
13.5–14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)

(A) 1, (B) 2 -GROUND : 0–4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	32	G 1	C	G 2	B
F11	A			J 3	
	B	G 2	A		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		
2B	22 (2WD) 23 (ALL-TRAC/4WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	42	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE CONTROL MODULE) (ENGINE ECU))

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	44	COWL WIRE			

