
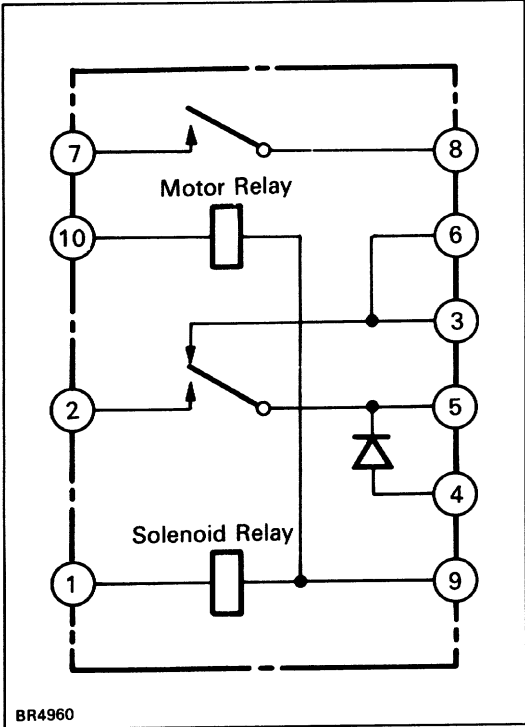


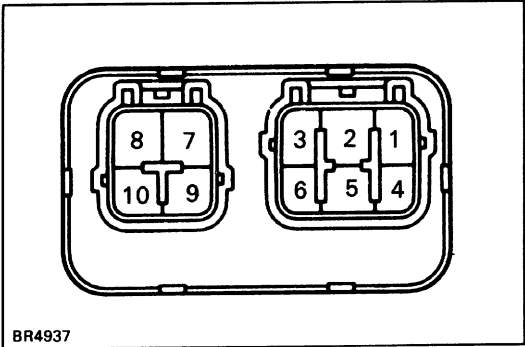

Control Relay

INSPECTION OF CONTROL RELAY

INSPECT CONTROL RELAY OPERATION

Inspect the relay continuity between terminals.

Terminal	1	2	3	4	5	6	7	8	9	10
Condition										
Constant			○	✕	○					
			○		○					
			○			○				
				○	✕	○				
				○		○				
						○				
Apply battery positive voltage between terminals 9 and 10.							○	○		
Apply battery positive voltage between terminals 1 and 9.		○			○					
			○	✕	○					

If operation is not as specified, replace the relay.