


DISTRIBUTOR

REMOVAL OF DISTRIBUTOR

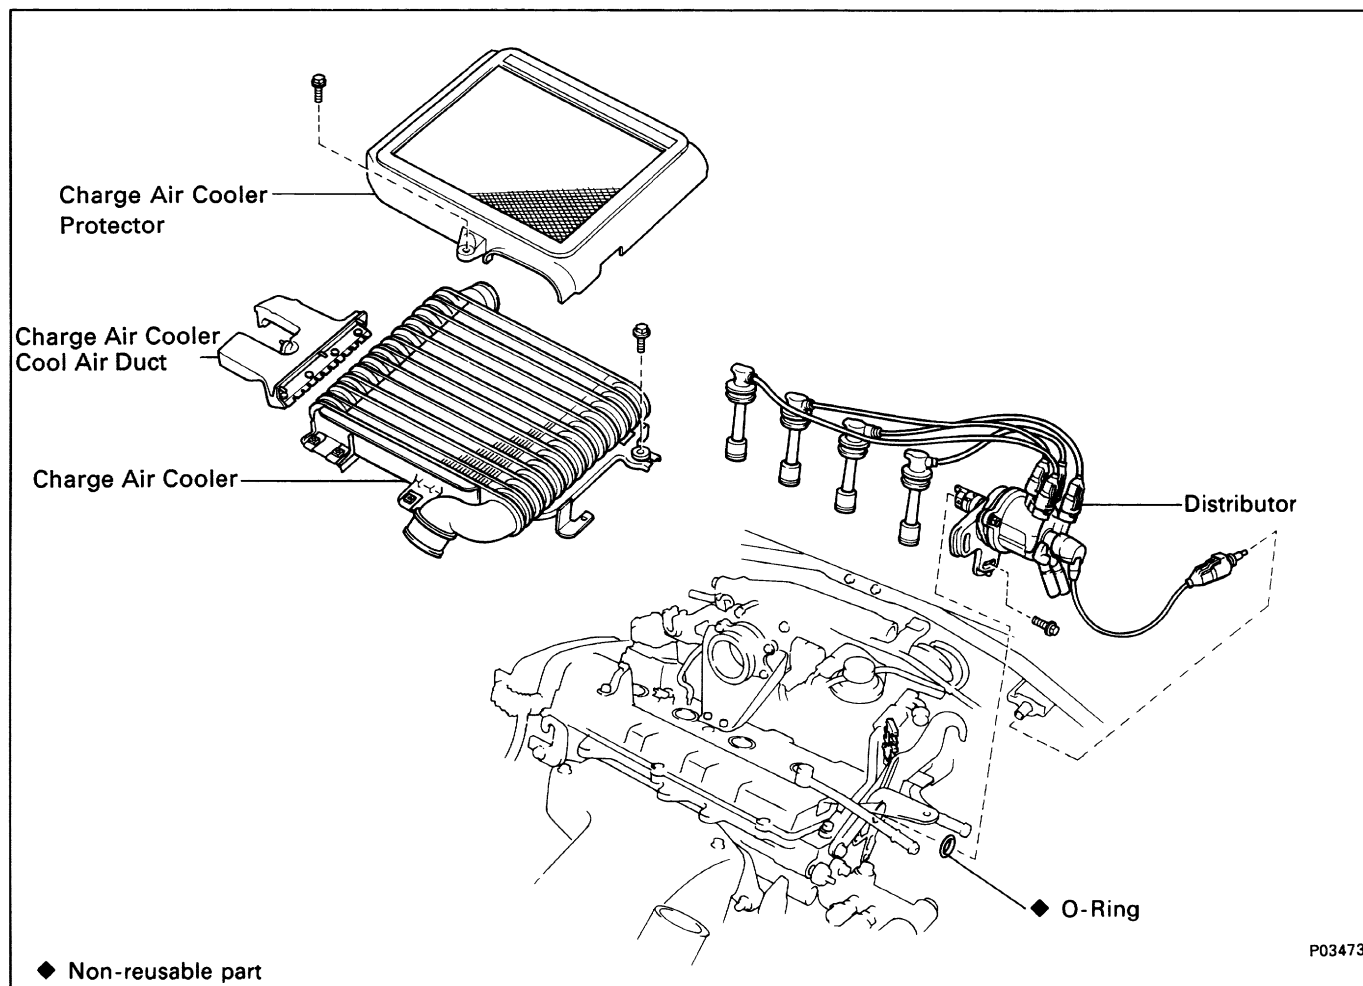

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

CAUTION: Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

2. REMOVE CHARGE AIR COOLER


(See steps 13 to 15 on pages [TC-9](#) and 10)

3. DISCONNECT DISTRIBUTOR CONNECTOR

4. DISCONNECT HIGH-TENSION CORD FROM IGNITION COIL

5. DISCONNECT HIGH-TENSION CORDS FROM SPARK PLUGS


- (a) Disconnect the four high-tension cords from the cord clamp.
- (b) Disconnect the four high-tension cords from the spark plugs. (See page [IG-11](#))

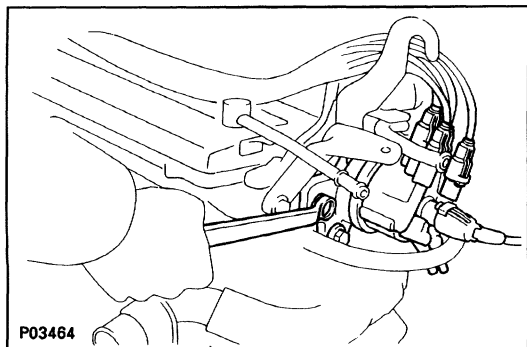


6. REMOVE DISTRIBUTOR

- (a) Remove the two hold-down bolts, and pull out the distributor.
- (b) Remove the O-ring from the distributor housing.

COMPONENTS

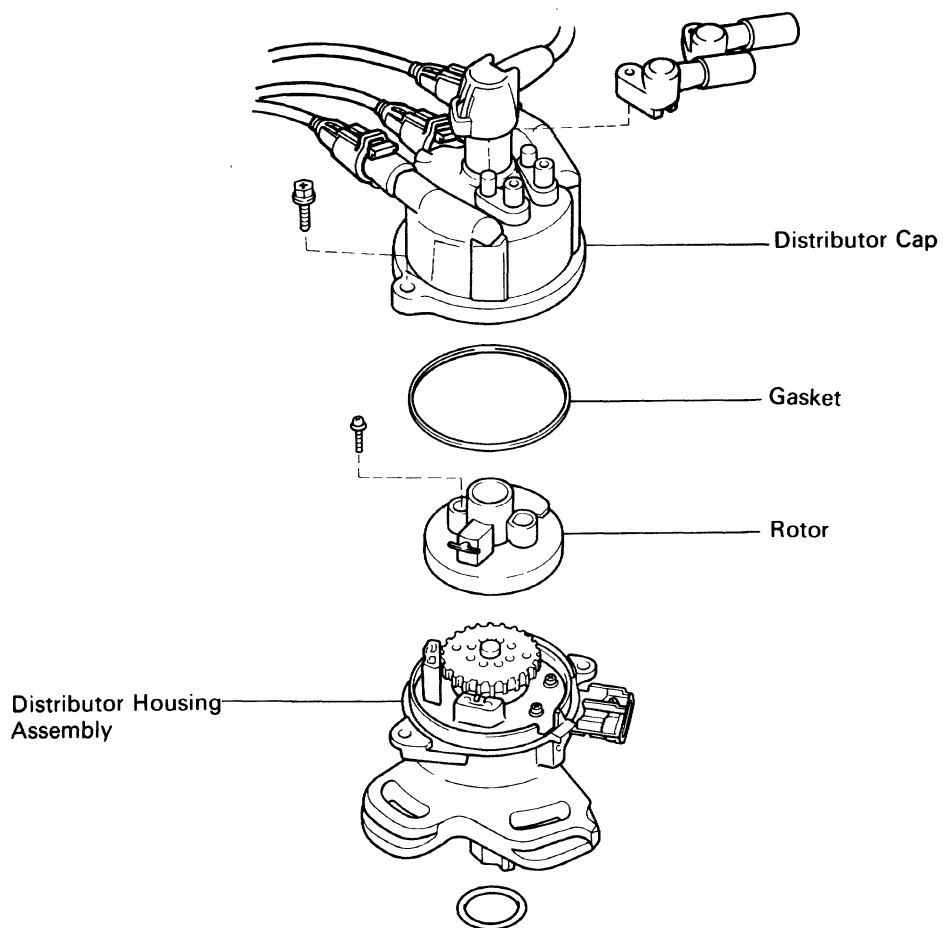

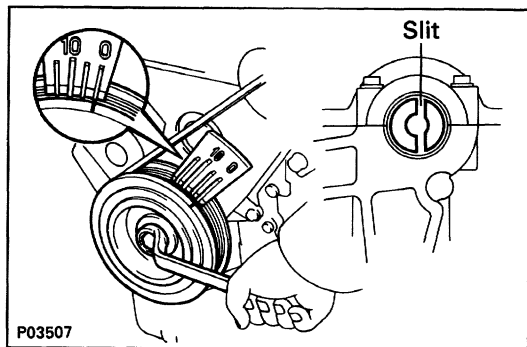


INSTALLATION OF DISTRIBUTOR

(See page [IG-26](#))


1. SET NO.1 CYLINDER TO TDC/COMPRESSION

Turn the crankshaft clockwise, and position the slit of the intake camshaft as shown.

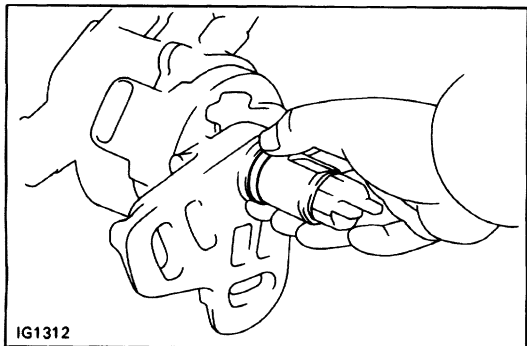

2. INSTALL DISTRIBUTOR

- (a) Install a new O-ring to the housing.
- (b) Apply a light coat of engine oil on the O-ring.

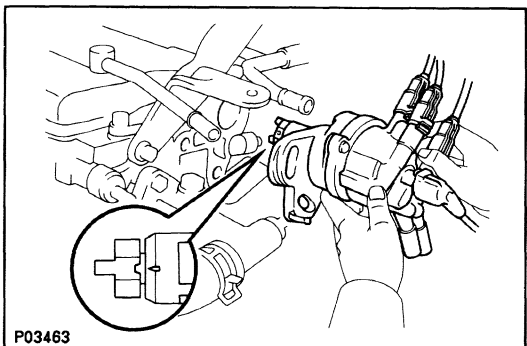

- (c) Align the cutout portion of the coupling with the groove of the housing.
- (d) Insert the distributor, aligning the center of the flange with that of the bolt hole on the cylinder head.
- (e) Lightly tighten the two hold-down bolts.

3. CONNECT HIGH-TENSION CORD TO IGNITION COIL

4. CONNECT HIGH-TENSION CORDS TO SPARK PLUGS

- (a) Connect the four high-tension cords to the spark plugs.

Firing order: 1 - 3 - 4 - 2

- (b) Install the four high-tension cords to the cord clamp.

5. CONNECT DISTRIBUTOR CONNECTOR


6. INSTALL CHARGE AIR COOLER

(See steps 11 to 15 on page [TC-17](#))

7. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

8. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

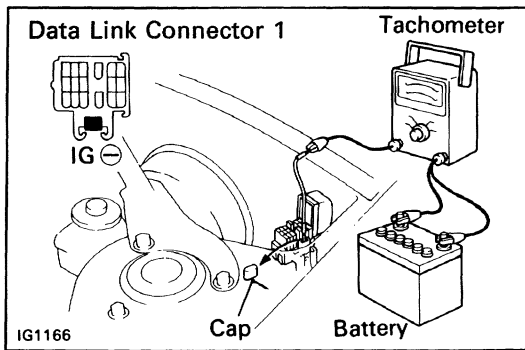


9. CONNECT TACHOMETER

Connect the test probe of a tachometer to terminal IGO of the data link connector 1.

NOTICE:


- **NEVER** allow the tachometer terminal to touch ground as it could result in damage to the igniter and/or ignition coil.
- As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.

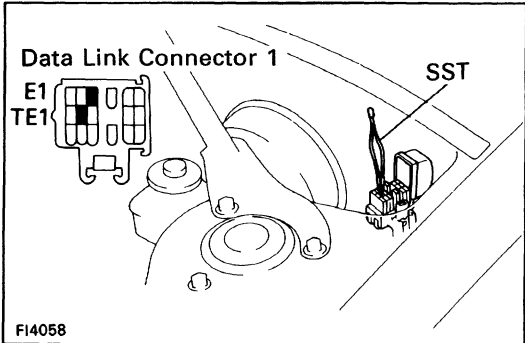

10. ADJUST IGNITION TIMING

- (a) Using SST, connect terminals TE1 and E1 of the data link connector 1.

SST 09843-18020

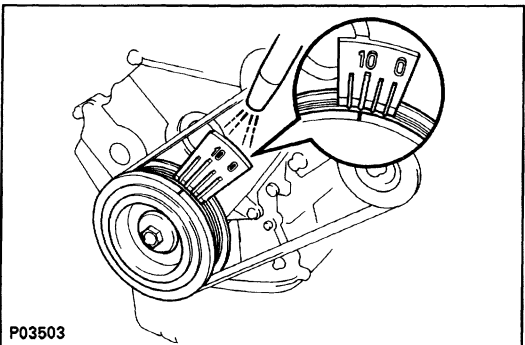


- (b) Using a timing light, check the ignition timing.

Ignition timing: 10° BTDC @ idle

(Transmission in neutral position)


- (c) Loosen the two hold-down bolts, and adjust by turning the distributor.
- (d) Tighten the two hold-down bolts, and recheck the ignition timing.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

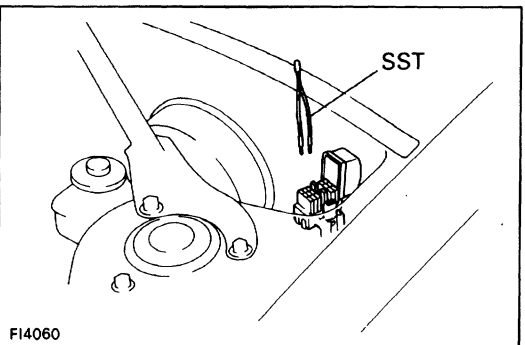

- (e) Remove the SST.

SST 09843-18020

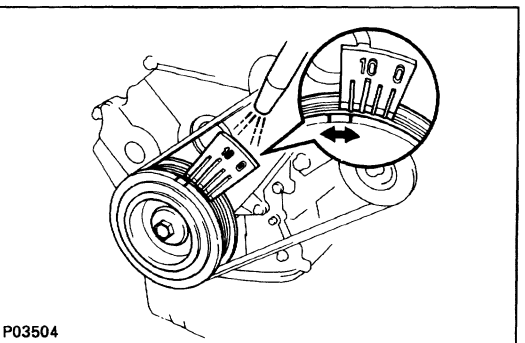

11. FURTHER CHECK IGNITION TIMING

Ignition timing: 12 – 21° BTDC @ idle

(Transmission in neutral position)

HINT: The timing mark moves in a range between 12° and 21°.

12. DISCONNECT TACHOMETER AND TIMING LIGHT FROM ENGINE