


# EXHAUST SYSTEM

# EXHAUST PIPES AND HEAT INSULATORS COMPONENTS

## 4A-FE (CALIF.)

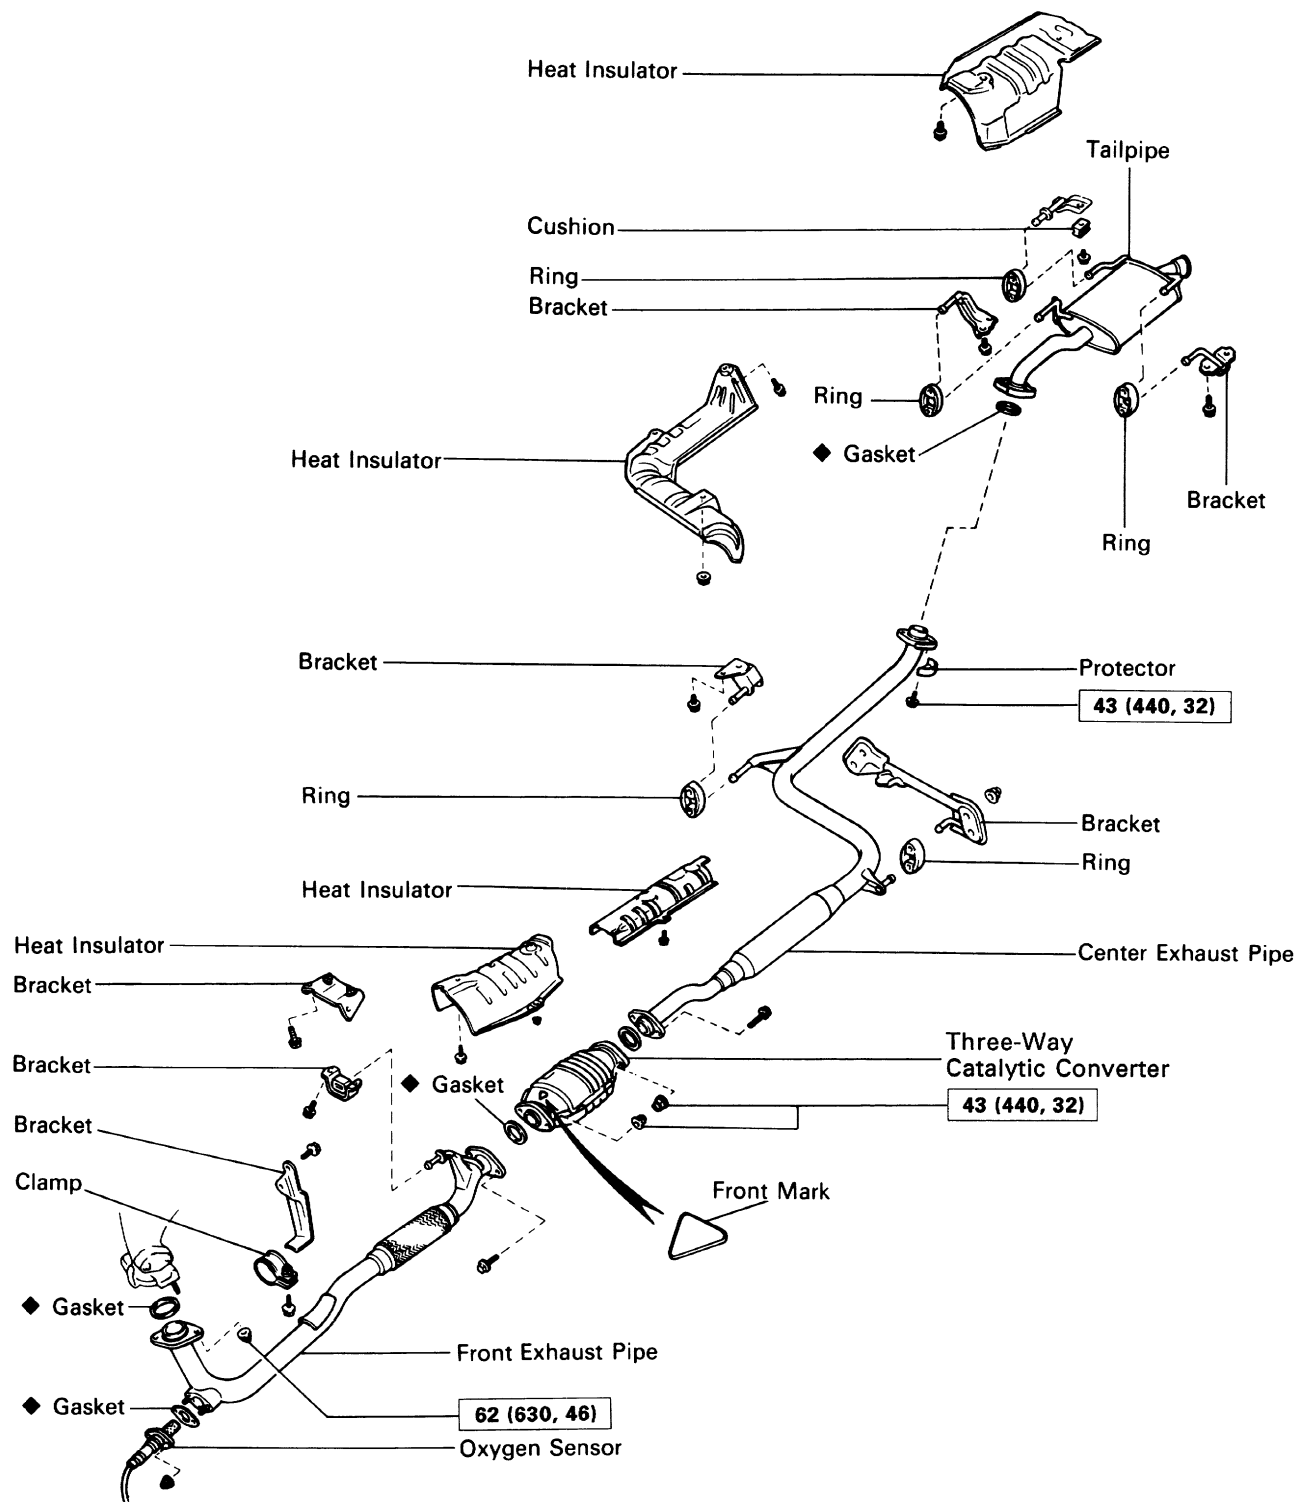


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

# COMPONENTS

## 4A-FE (Ex. CALIF.)

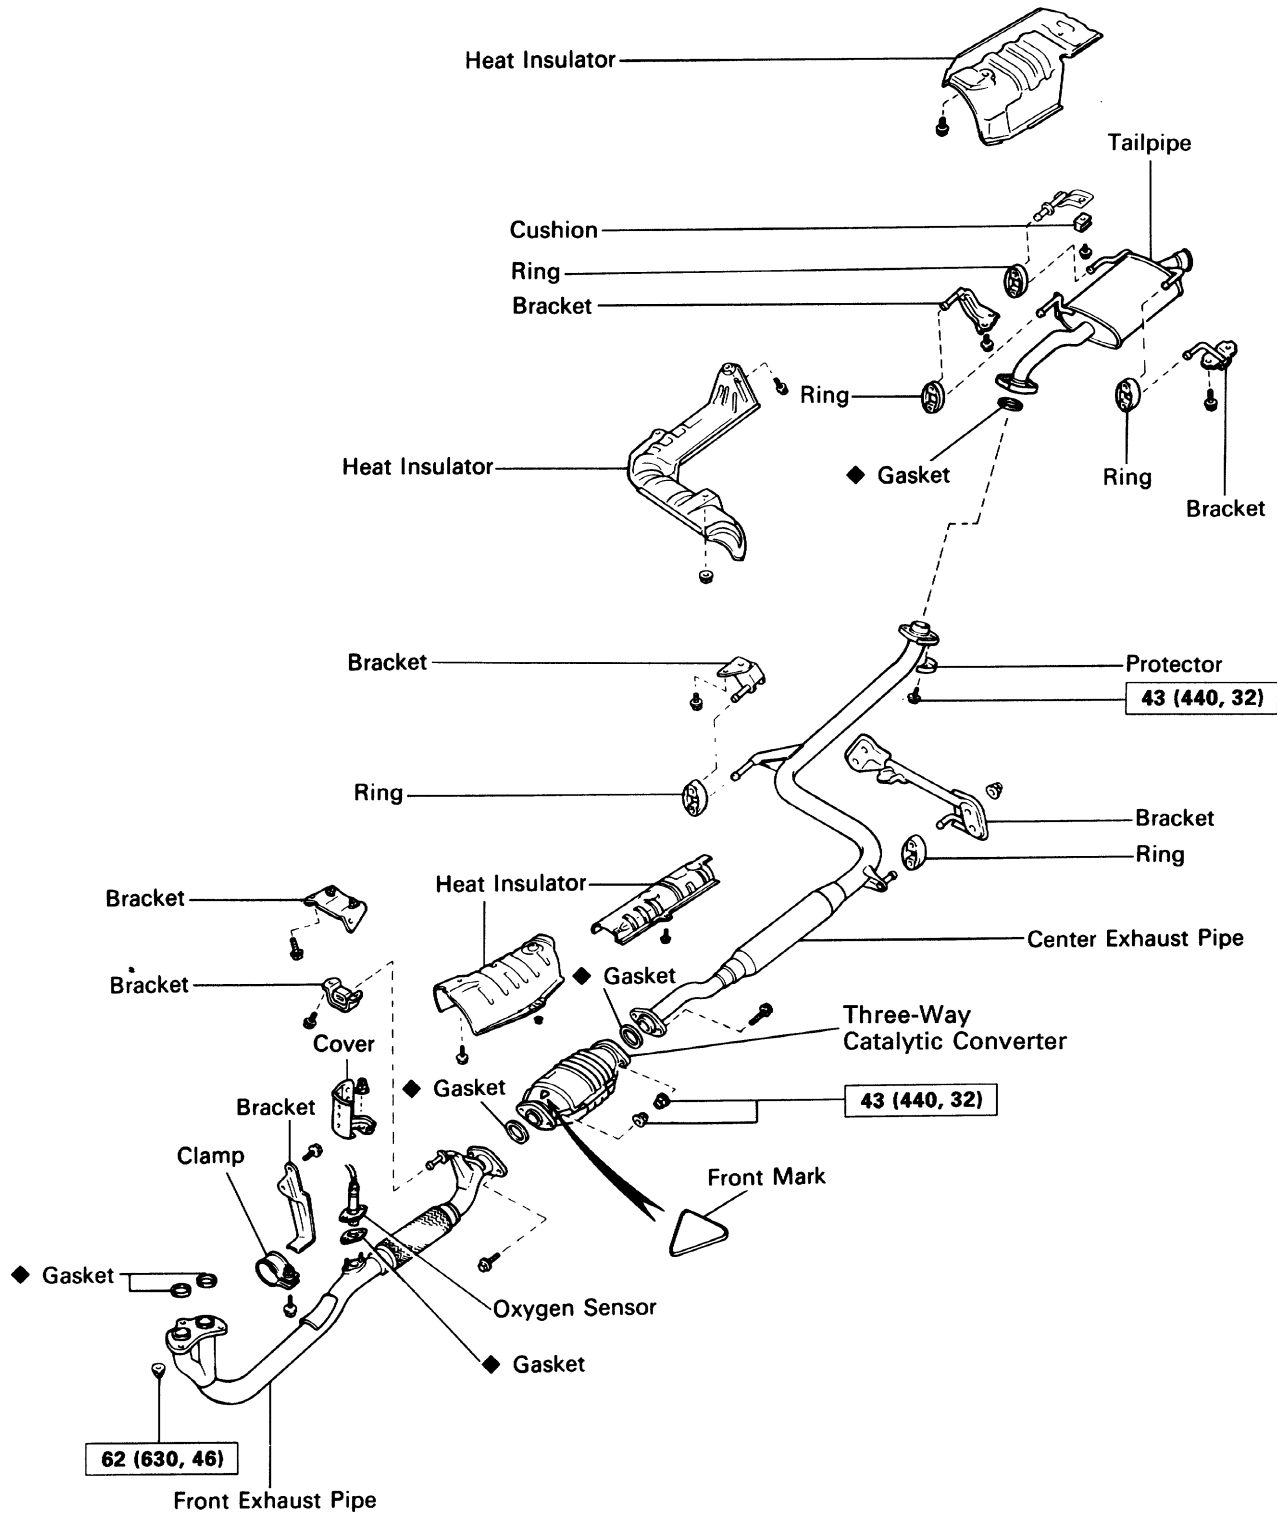


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

# EXHAUST PIPES AND HEAT INSULATORS COMPONENTS

3S-GTE

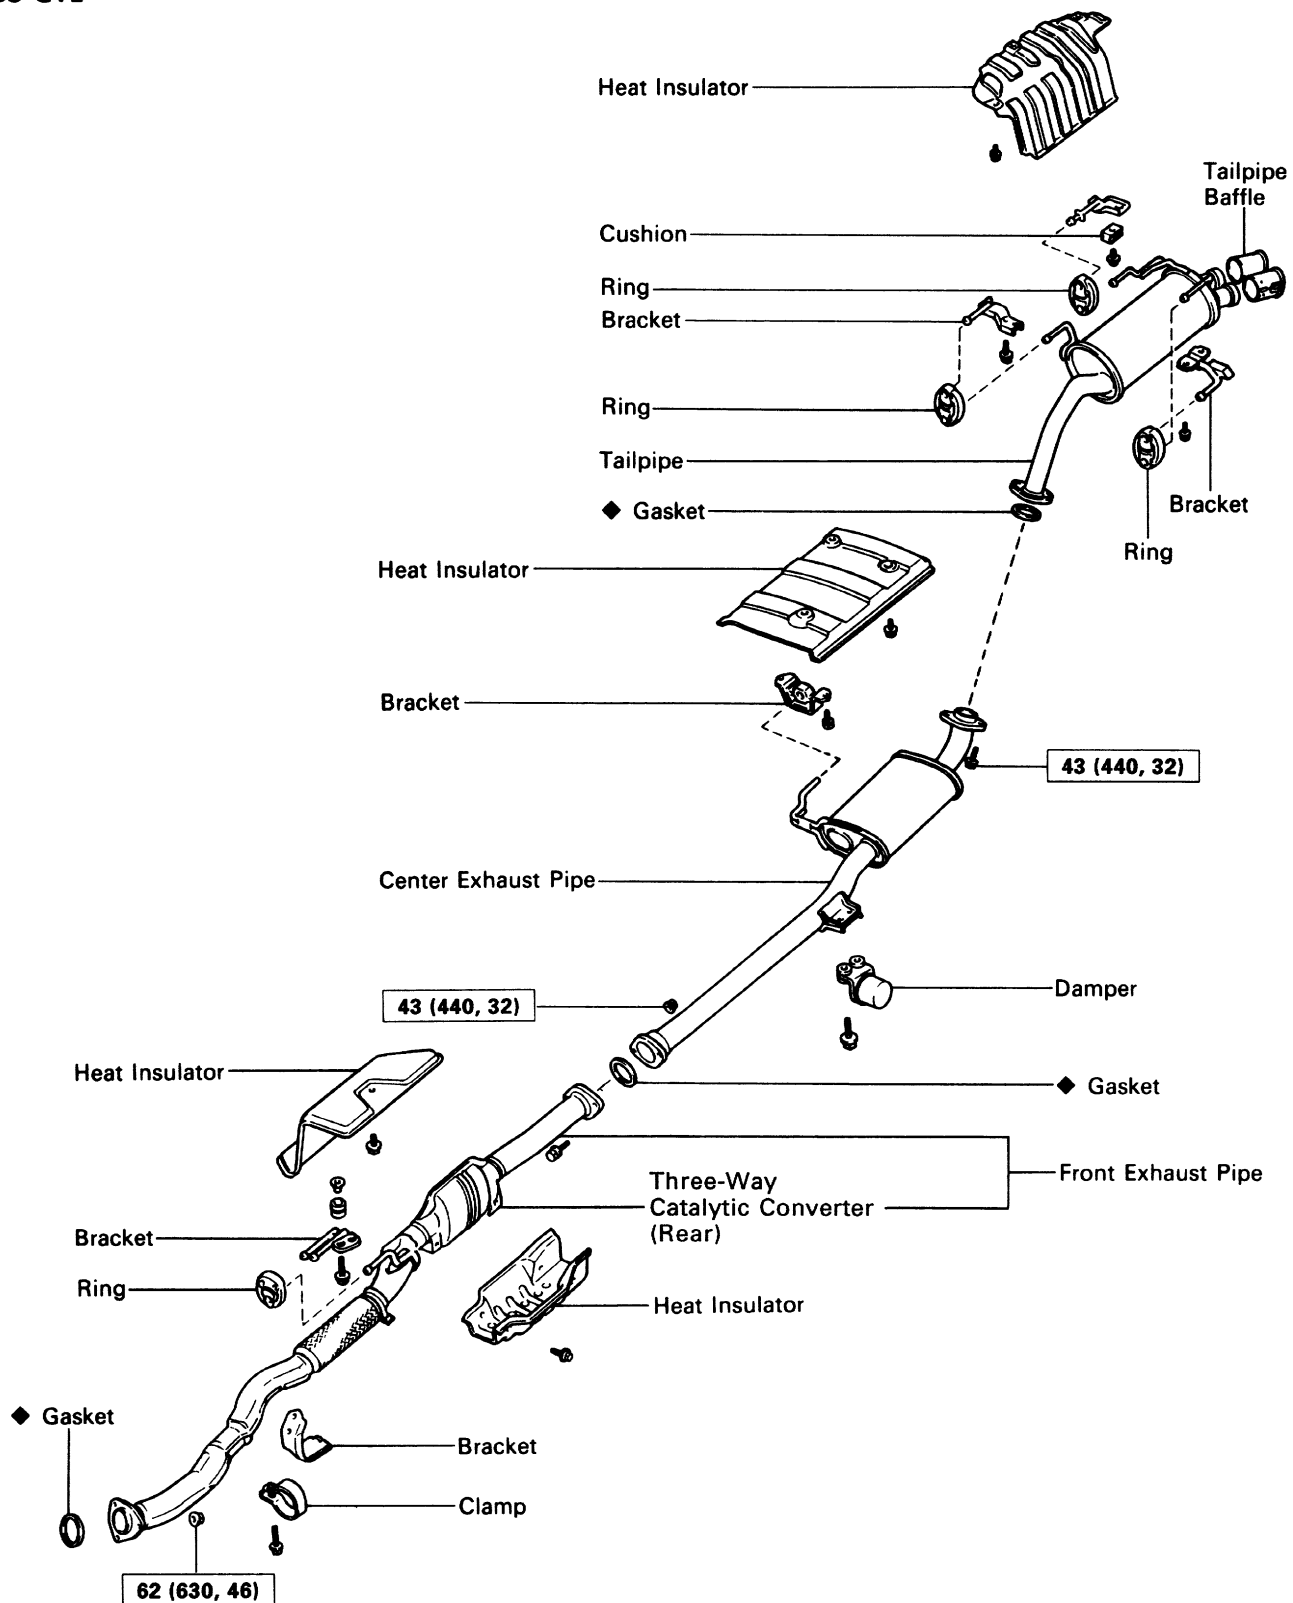


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

EX0026

## COMPONENTS


5S-FE (CALIF.)

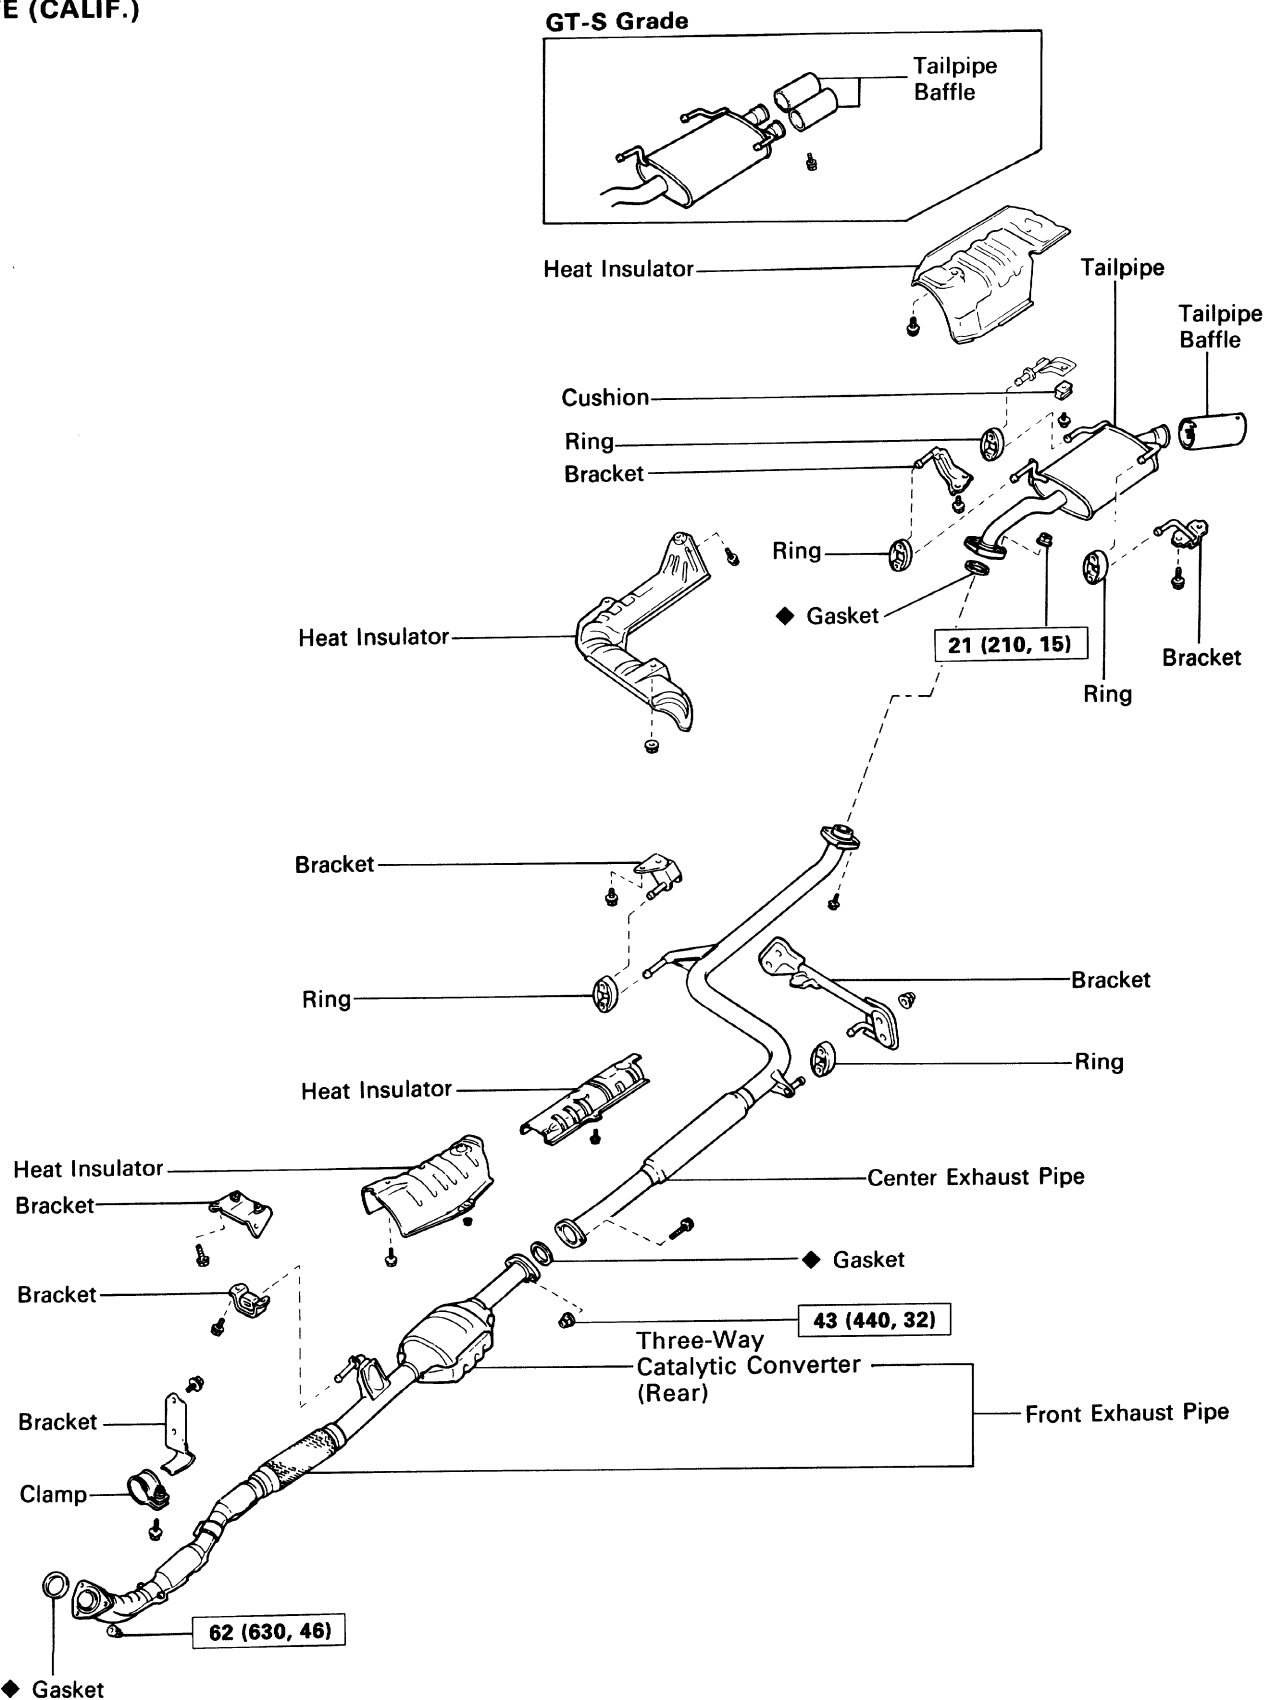

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

EX0023

**5S-FE (Ex. CALIF.)**

EX0022