
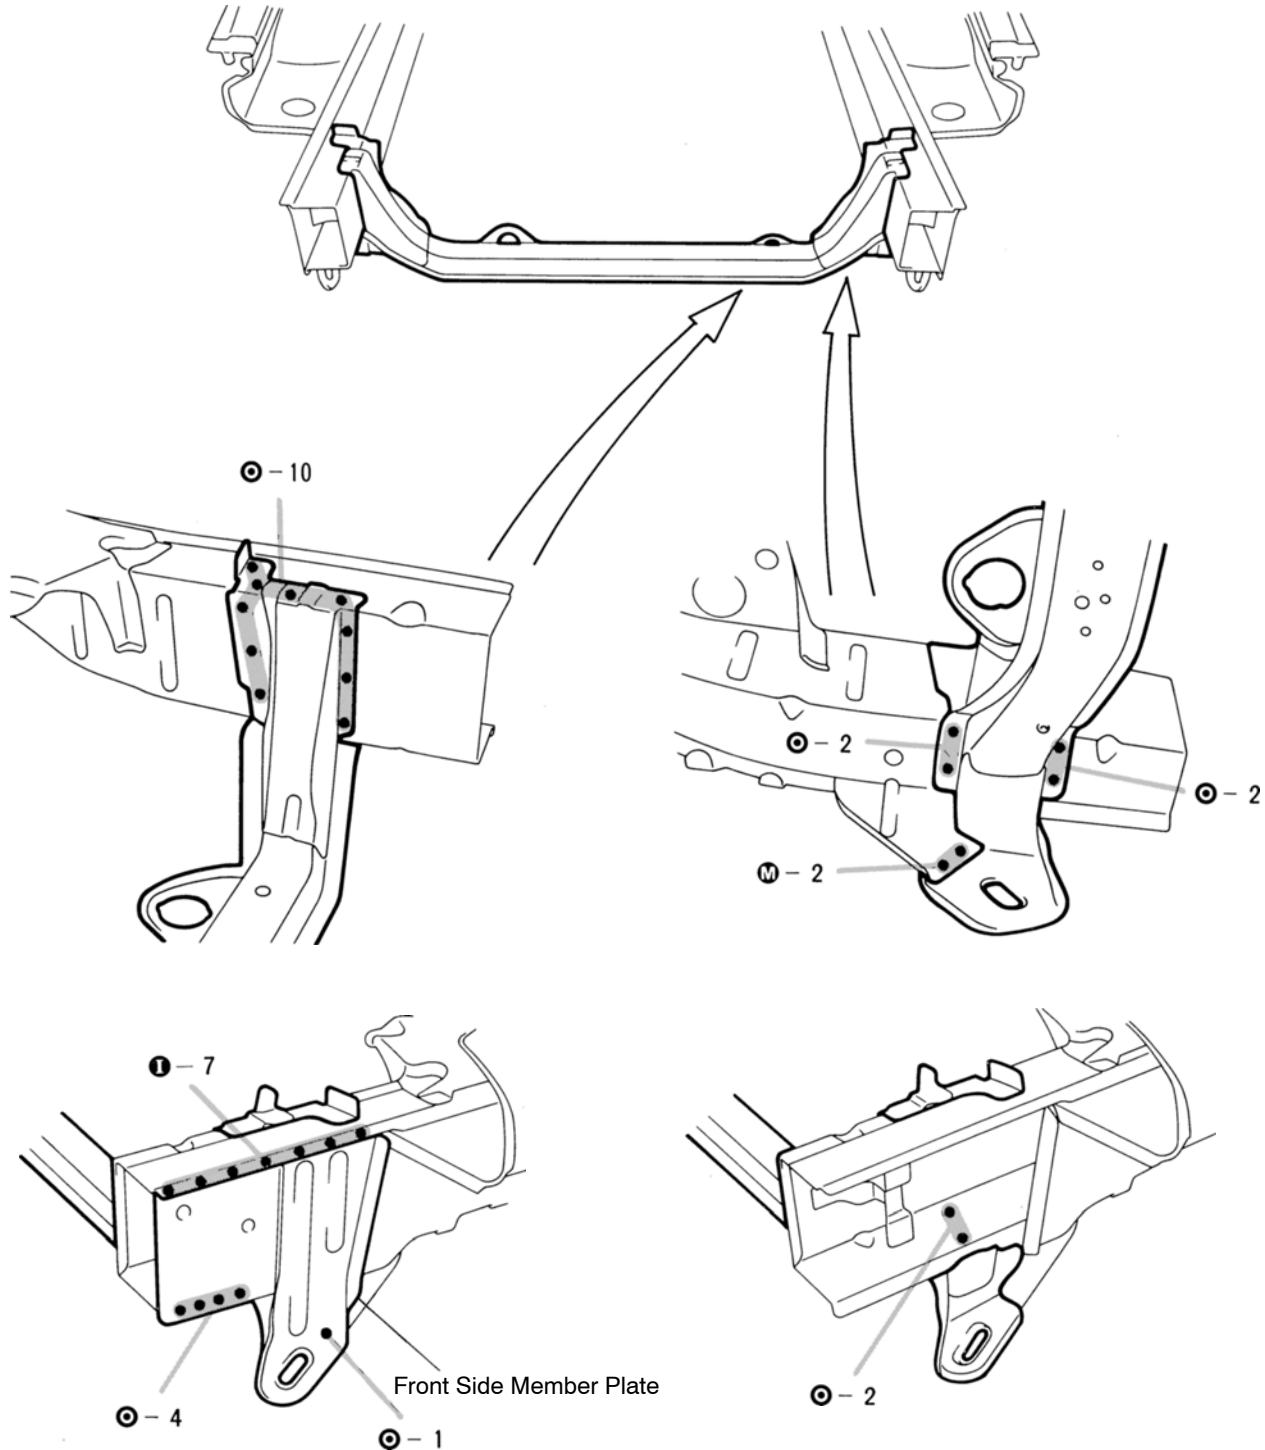
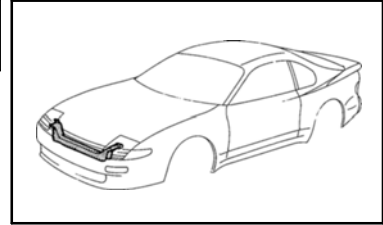


FRONT CROSSMEMBER (ASSY)**REMOVAL (With the radiator support removed.)**

1. After removing the front side member plate, remove the front crossmember.

INSTALLATION

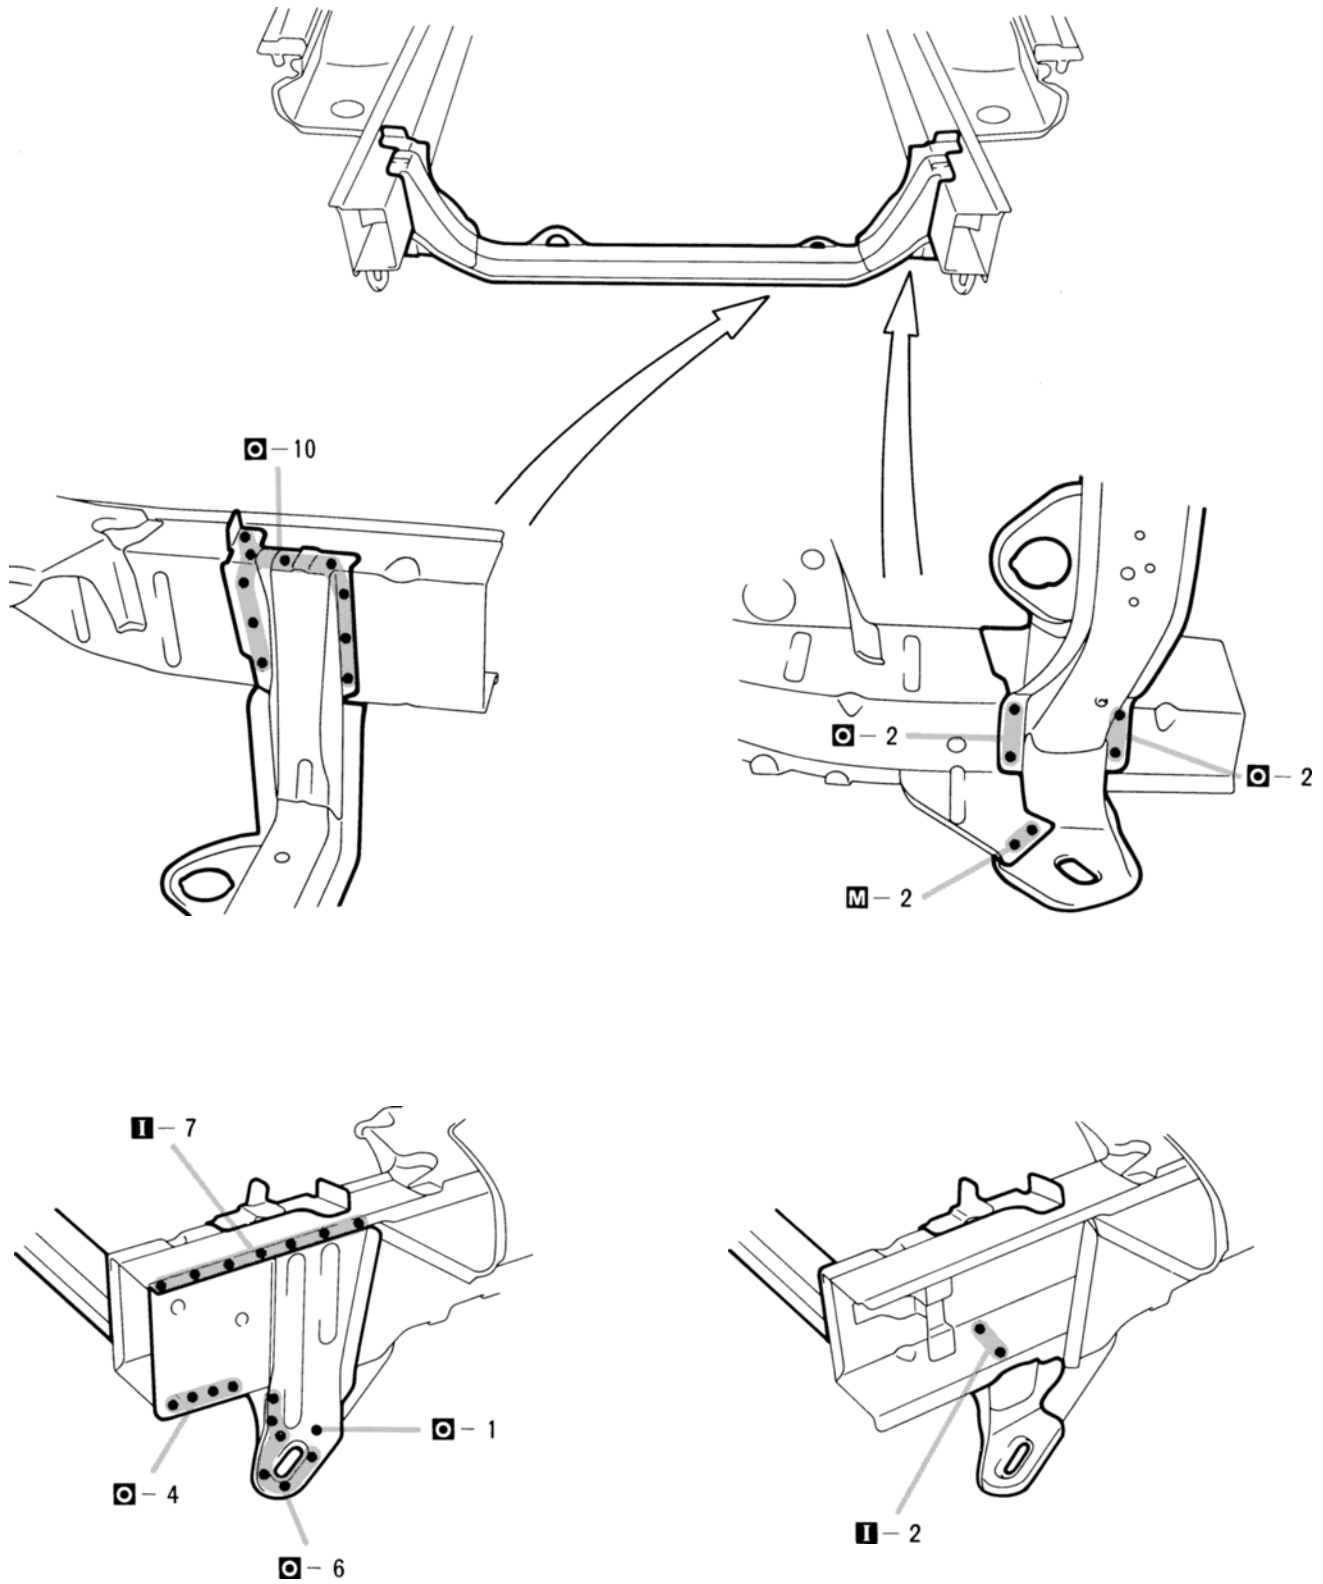

1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.