
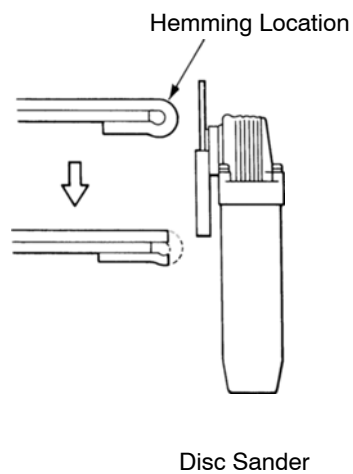
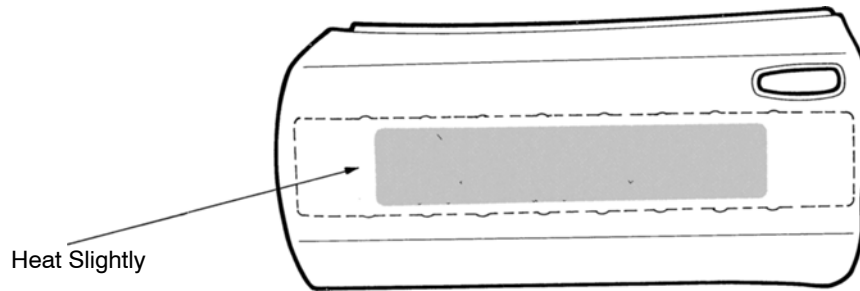
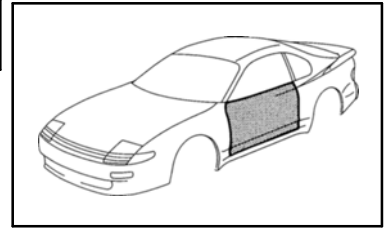


FRONT DOOR OUTER PANEL (ASSY)**REMOVAL**

1. After grinding off the hemming location, remove the outer panel.




HINT: Slightly heating the outer panel will soften the sealer and make removal easier.

INSTALLATION

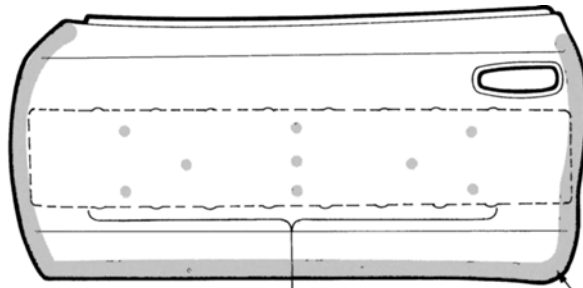

Body Sealer (9 points)

Body Sealer

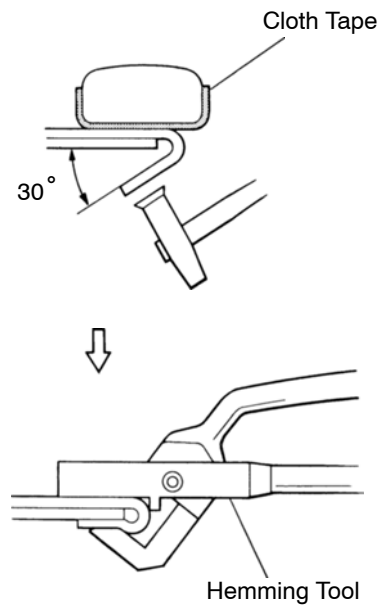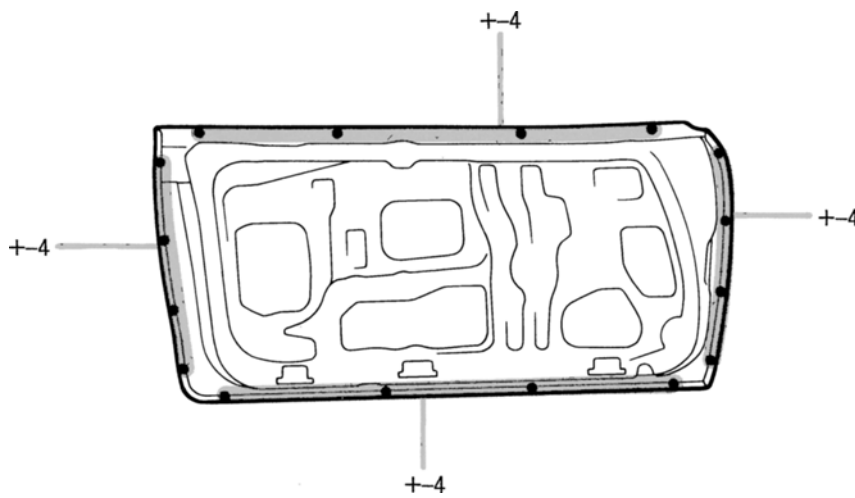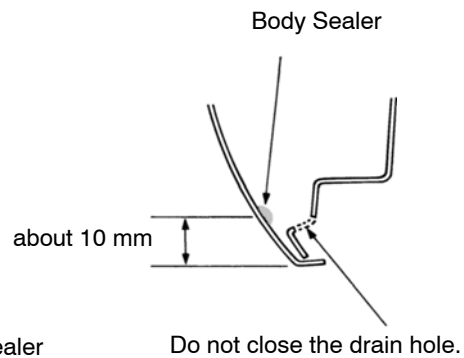

mm	in.
10	0.39

1. Before temporarily installing the new parts, apply body sealer to the back side of the new parts.

HINT:

- 1) Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter.
- 2) For other sealing points, refer to section AR.

2. Bend the flange hem about 30° with a hammer and dolly, then fasten tightly with a hemming tool.

HINT:

- 1) Perform hemming in three steps, being careful not to warp the panel.
- 2) If a hemming tool cannot be used, hem with a hammer and dolly.