


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

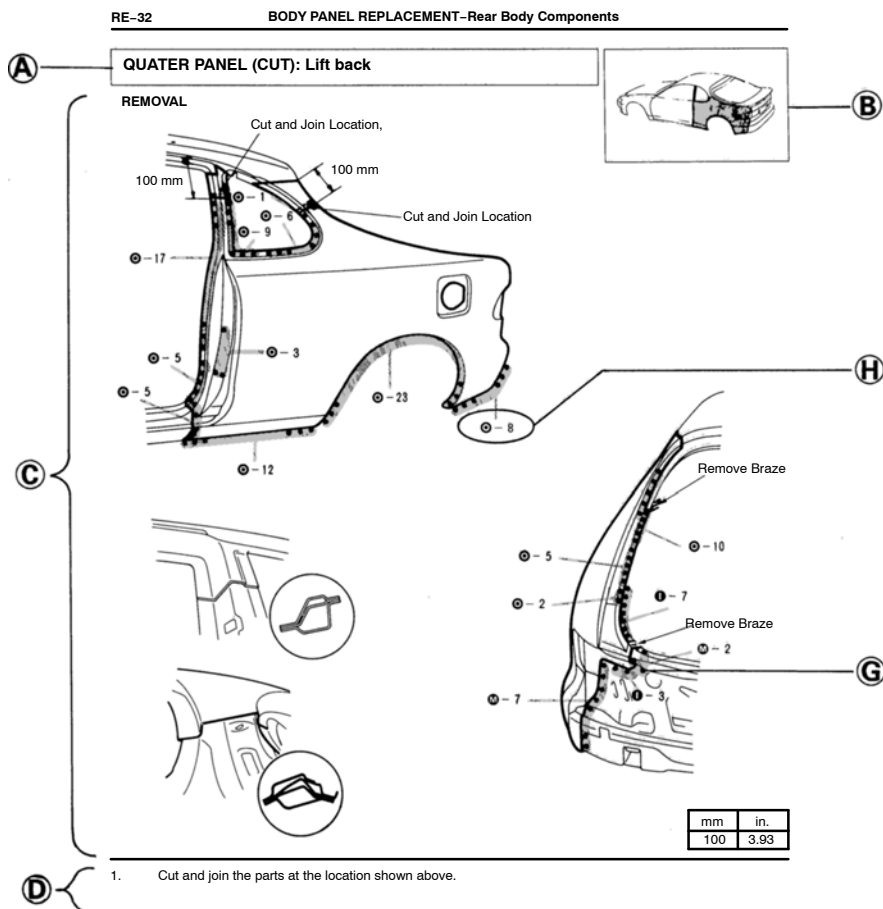

Ⓐ : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

Replacement method

(ASSY) Assembly replacement

(CUT) Major cutting (less than 1/2 of parts used)

(CUT-H) Half cutting (about 1/2 of parts used)

(CUT-P) Partial cutting (most of parts used)

Replacement parts

Ⓑ : PARTS LOCATION

Ⓒ : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.


Ⓓ : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

BODY PANEL REPLACEMENT-Rear Body Components

RE-33

INSTALLATION

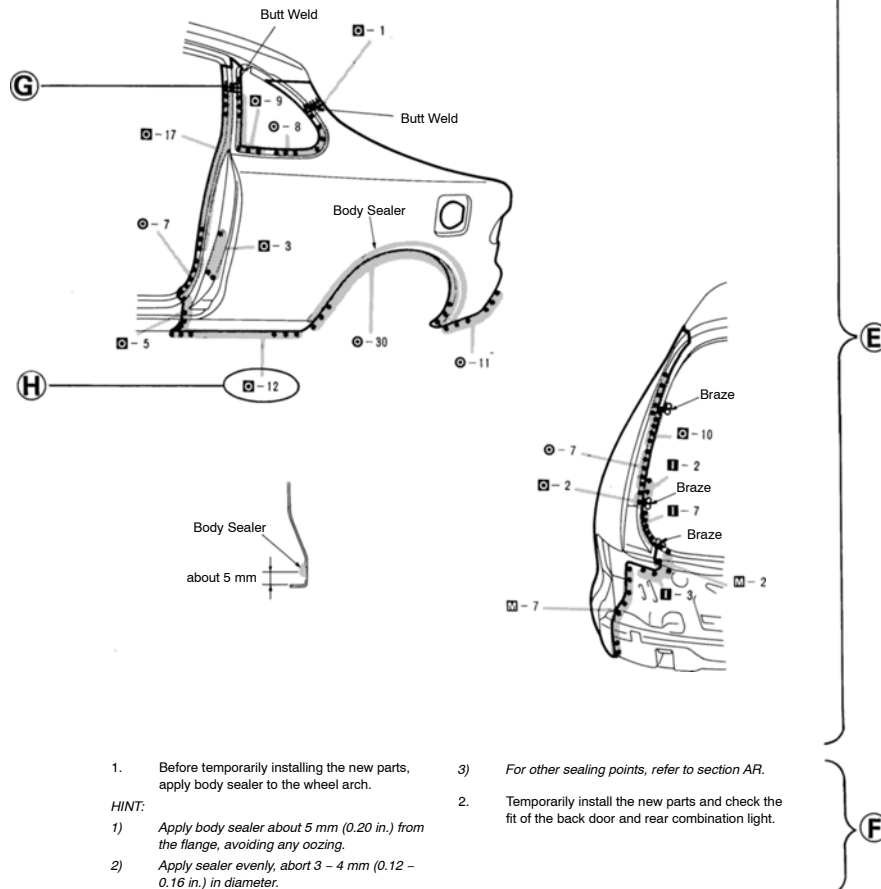**E : INSTALLATION DIAGRAM**

Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

F : INSTALLATION GUIDE

Provides additional information to more efficiently help you perform the installation.

G : SYMBOLS

See page [IN-4](#).

H : ILLUSTRATION OF WELD POINTS

Weld method and panel position symbols.

See page [IN-5](#).