


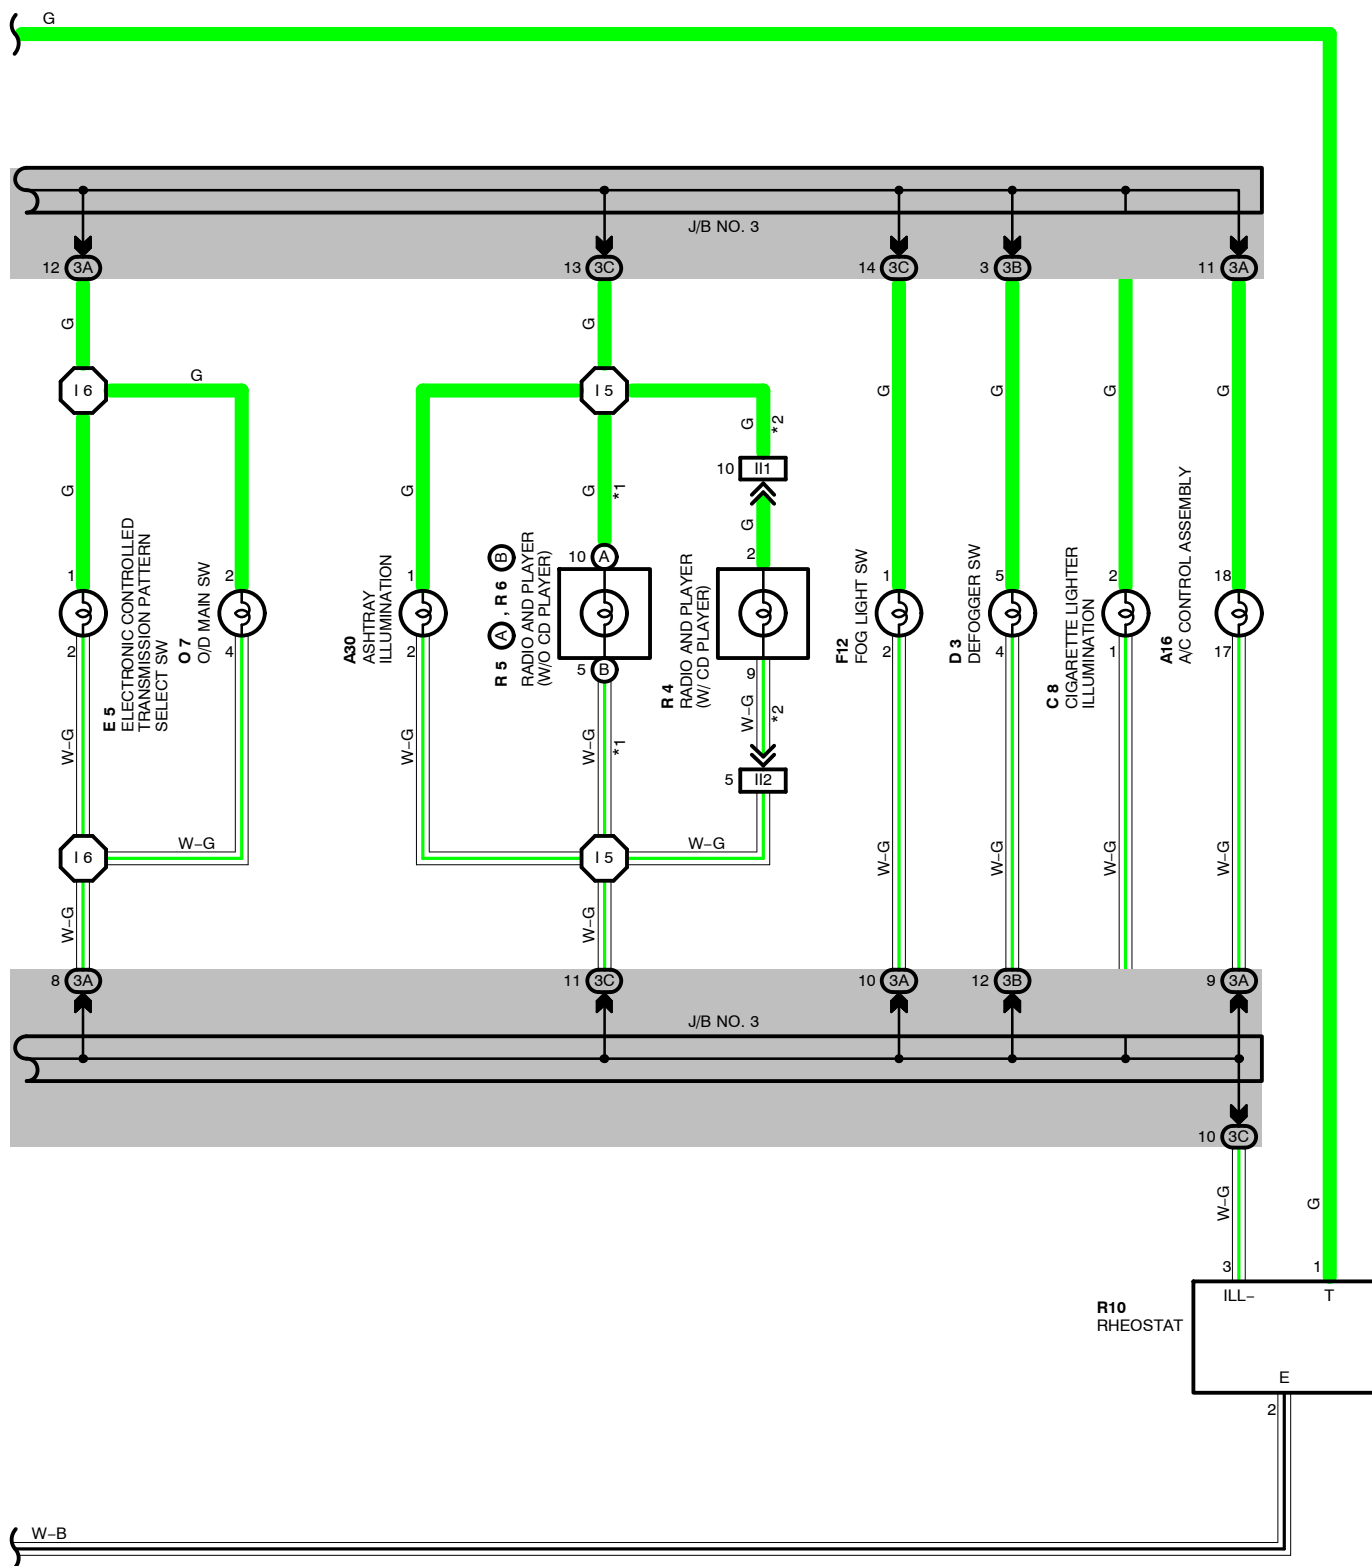



ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)
CLOSED WITH ENGINE RUNNING AND PARKING LEVER RELEASED (CANADA)

R10 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

⊙ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
A16		32	F11	A	28 (3S-GTE)	R 4		33
A30		32		B	30 (5S-FE), 31 (4A-FE)	R 5	A	33
C 8		32	F12		33	R 6	B	33
C12	B	32	G 3		33	R 9		33
C14	A	32	G 4		33	R10		33
C15		32	H 5		33	S 5	A	33
D 3		32	J 6		33	S 6	B	33
D 5		33	O 7		33			
E 5		33	P 1		33			

⊞ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1I	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

⊞ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS







CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	36 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	38 (5S-FE)	
	40 (4A-FE)	
II1	44	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	42	LEFT KICK PANEL

⊞ : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	44	COWL WIRE	I 6	44	COWL WIRE
I 5					

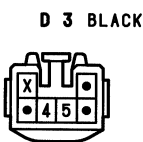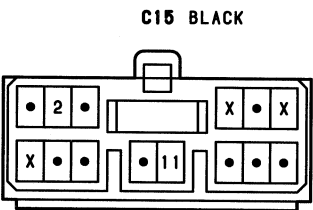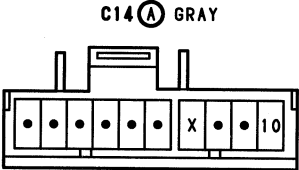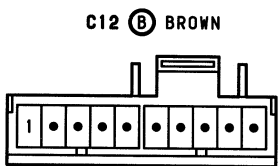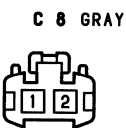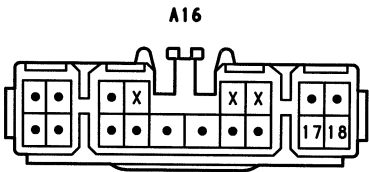


D 5




E 5



(ALL-TRAC/4WD) F11 (A) BLACK

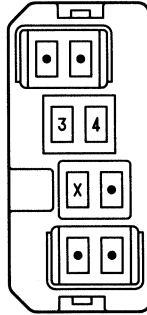

(2WD) F11 (B) BLACK

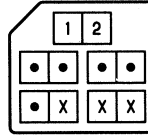

F12 BLACK




G 3 GRAY




G 4



H 5 BLACK



J 6




(HINT:SEE PAGE 7)


O 7




P 1




R 4

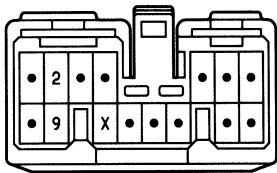


R 5 (A)




R 6 (B)



R 9



R10



S 5 (A) GRAY



S 6 (B) GRAY

