


# INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

\*1 : W/ DOOR LOCK  
\*2 : W/O DOOR LOCK

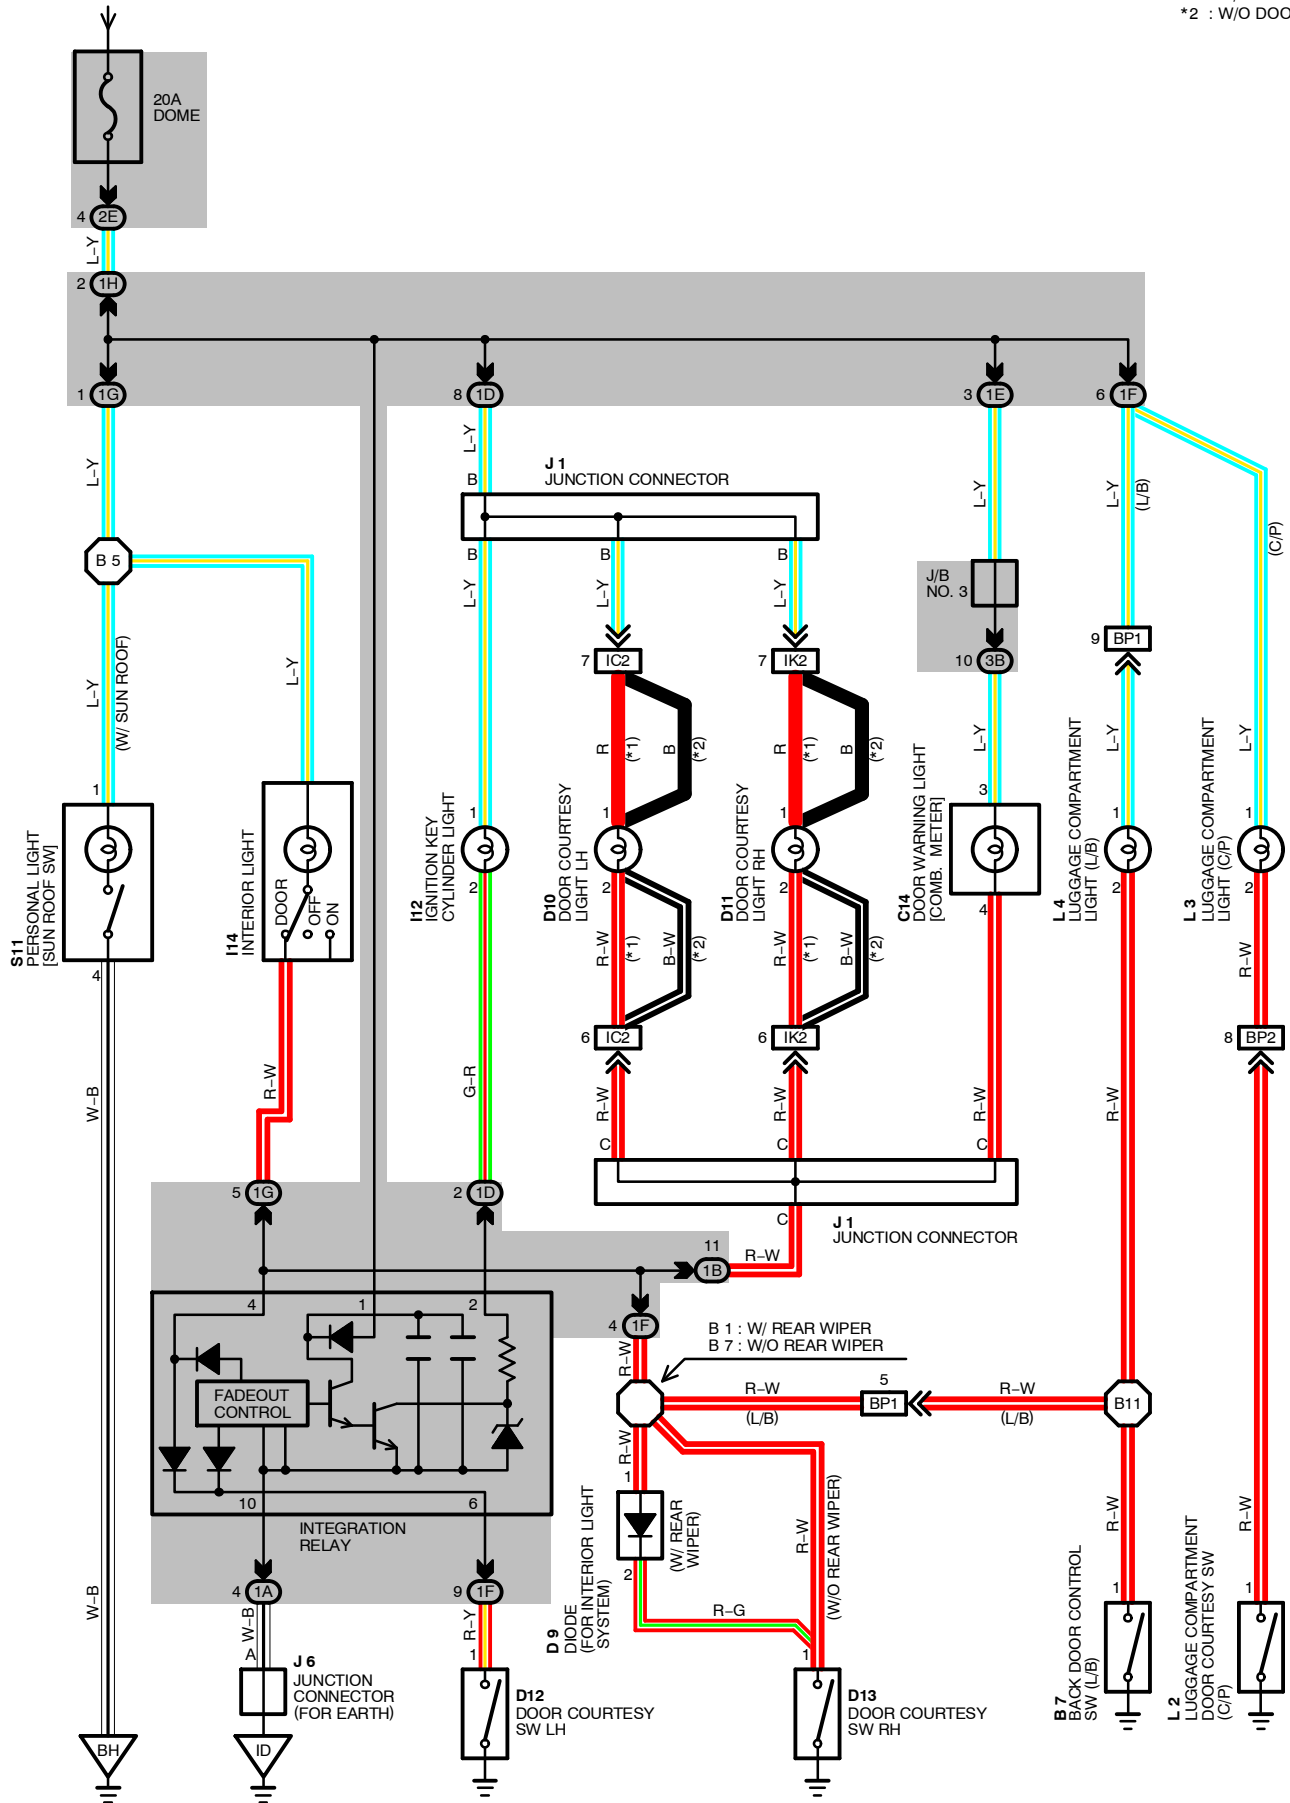

## SERVICE HINTS

### INTEGRATION RELAY

(18) 11-GROUND : APPROX. 12 VOLTS WITH DOOR CLOSED  
0 VOLTS WITH EACH DOOR OPEN

### D12, D13 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

### L 2 LUGGAGE COMPARTMENT LIGHT SW

1-GROUND : CLOSED WITH LUGGAGE COMPARTMENT DOOR OPEN

### B 7 BACK DOOR COURTESY SW

1-GROUND : CLOSED WITH BACK DOOR OPEN

## ○ : PARTS LOCATION

| CODE | SEE PAGE           | CODE | SEE PAGE           | CODE | SEE PAGE           |
|------|--------------------|------|--------------------|------|--------------------|
| B 7  | 34 (L/B)           | D12  | 34 (L/B), 35 (C/P) | J 6  | 33                 |
| C14  | 32                 | D13  | 34 (L/B), 35 (C/P) | L 2  | 35 (C/P)           |
| D 9  | 34 (L/B), 35 (C/P) | I12  | 33                 | L 3  | 35 (C/P)           |
| D10  | 34 (L/B), 35 (C/P) | I14  | 34 (L/B), 35 (C/P) | L 4  | 34 (L/B)           |
| D11  | 34 (L/B), 35 (C/P) | J 1  | 33                 | S11  | 34 (L/B), 35 (C/P) |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE                      | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)   |
|------|-------------------------------|--------------------------------------------------------|
| 1A   | 20                            | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)              |
| 1B   |                               |                                                        |
| 1D   |                               |                                                        |
| 1E   |                               |                                                        |
| 1F   | 20                            | FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)             |
| 1G   | 20                            | ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)              |
| 1H   | 20                            | ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)  |
| 2E   | 22 (2WD)<br>23 (ALL-TRAC/4WD) | ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY) |
| 3B   | 25                            | COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)     |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)   |
|------|----------|--------------------------------------------------------------|
| IC2  | 42       | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)           |
| IK2  | 44       | FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)          |
| BP1  | 46 (L/B) | FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER) |
| BP2  | 48 (C/P) | FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)  |

## ▽ : GROUND POINTS

| CODE | SEE PAGE           | GROUND POINTS LOCATION |
|------|--------------------|------------------------|
| ID   | 42                 | LEFT KICK PANEL        |
| BH   | 46 (L/B), 48 (C/P) | ROOF LEFT              |


## ○ : SPLICE POINTS

| CODE | SEE PAGE           | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE           | WIRE HARNESS WITH SPLICE POINTS |
|------|--------------------|---------------------------------|------|--------------------|---------------------------------|
| B 1  | 46 (L/B)           | FLOOR WIRE                      | B 7  | 46 (L/B), 48 (C/P) | FLOOR WIRE                      |
| B 5  | 46 (L/B), 48 (C/P) | ROOF WIRE                       | B11  | 46 (L/B)           | LUGGAGE ROOM WIRE               |

B 7, L 2 GRAY



C14 GRAY

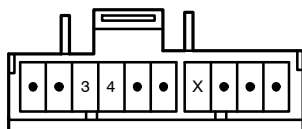

D 9




D10, D11




D12, D13




I12



I14




J 1



(HINT : SEE PAGE 7)

J 6

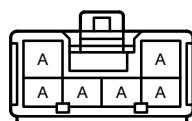

(HINT : SEE PAGE 7)

L 3 GRAY



L 4



S11

