
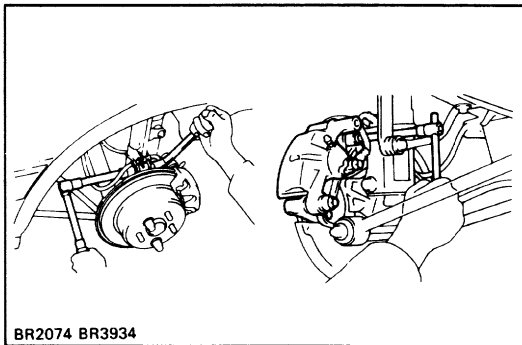



Parking Brake (For Rear Disc Brake) COMPONENTS

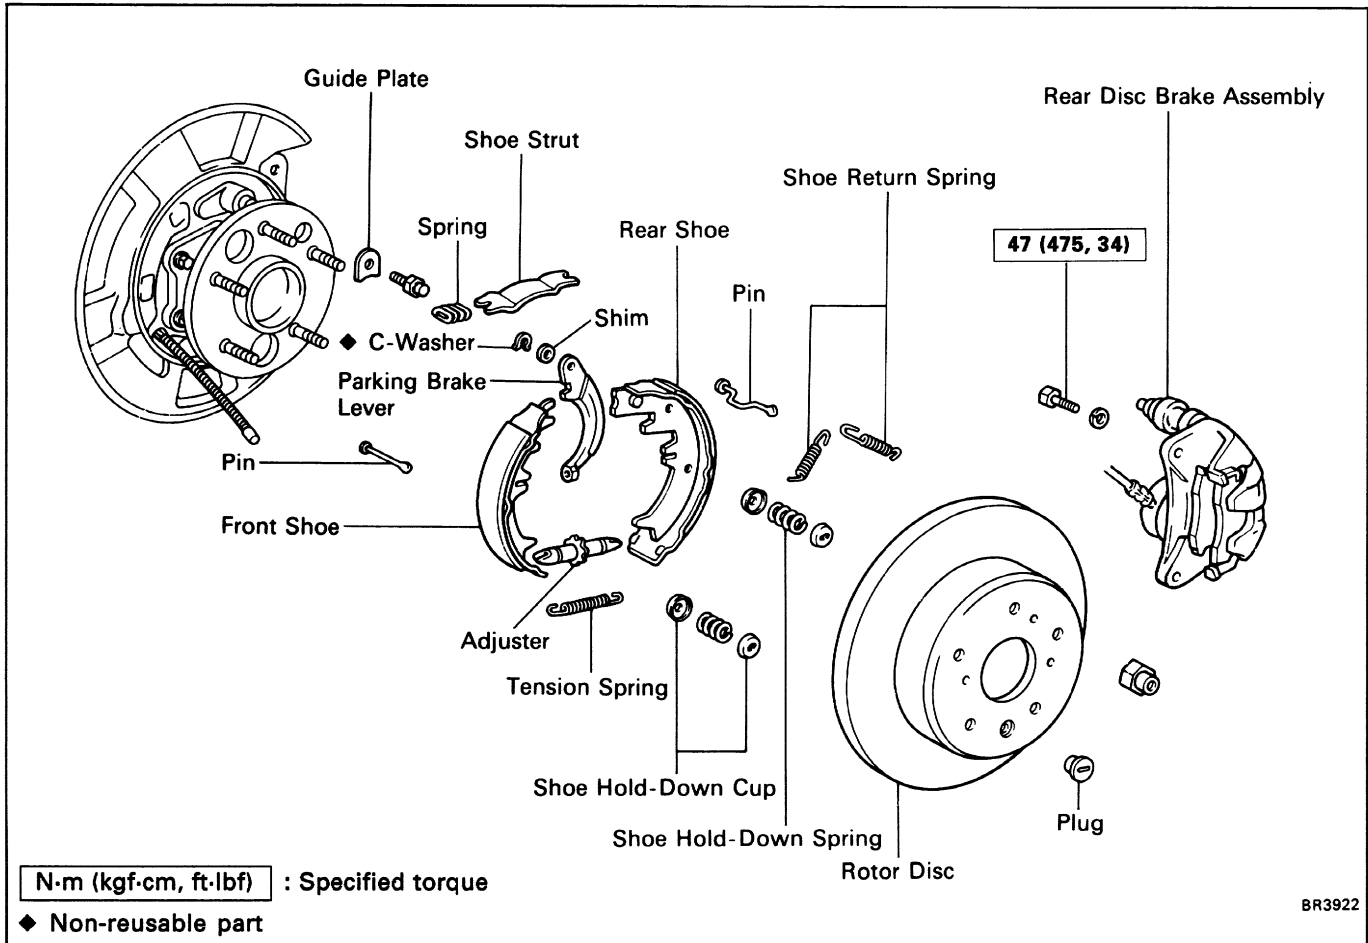

DISASSEMBLY OF PARKING BRAKE


1. REMOVE REAR DISC BRAKE ASSEMBLY

- Remove the axle carrier mounting bolt and nut of upper side.
- Remove the two mounting bolts and remove the disc brake assembly.
- Suspend the disc brake so the hose is not stretched.

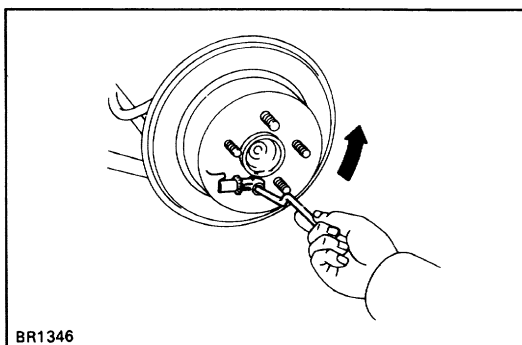


2. REMOVE ROTOR DISC

HINT: If the rotor disc cannot be removed easily, return the shoe adjuster until the wheel turns freely.

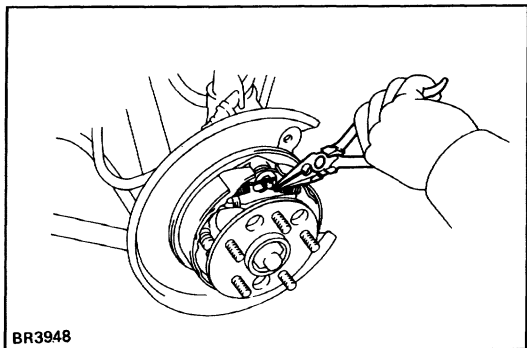


3. REMOVE SHOE RETURN SPRINGS

Using needle-nose pliers, remove the shoe return springs.

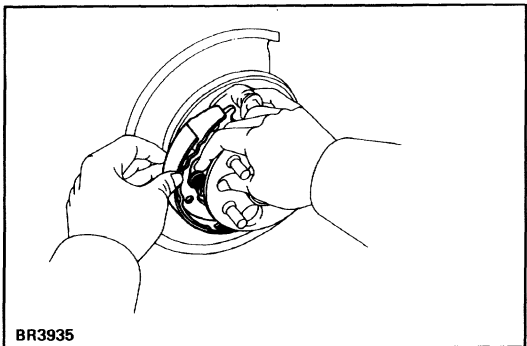

4. REMOVE FRONT SHOE, ADJUSTER AND TENSION SPRING

- (a) Slide out the front shoe and remove the shoe adjuster.
- (b) Remove the shoe strut with spring.
- (c) Disconnect the tension spring and remove the front shoe.

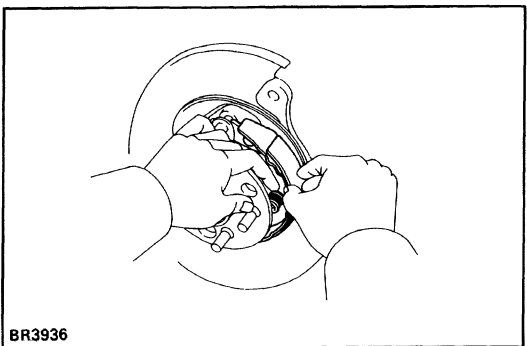


5. REMOVE REAR SHOE

- (a) Slide out the rear shoe.
- (b) Remove the tension spring from the rear shoe.
- (c) Disconnect the parking brake cable from the parking brake shoe lever.
- (d) Remove the shoe hold-down spring cups, springs and pins.

INSPECTION AND REPAIR OF PARKING BRAKE COMPONENTS

1. INSPECT DISASSEMBLED PARTS

Inspect the disassembled parts for wear, rust or damage.

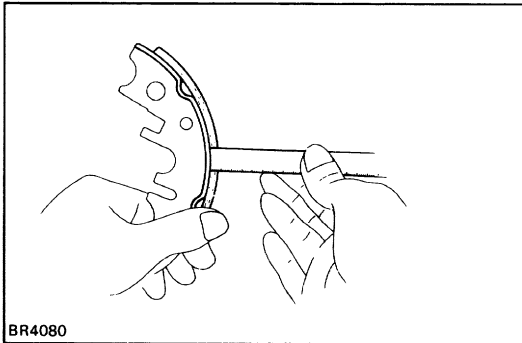


2. MEASURE BRAKE SHOE LINING THICKNESS

Standard thickness: 2.0 mm (0.079 in.)

Minimum thickness: 1.0 mm (0.039 in.)

If the shoe lining is less than minimum or shows signs of uneven wear, replace the parking brake shoes.

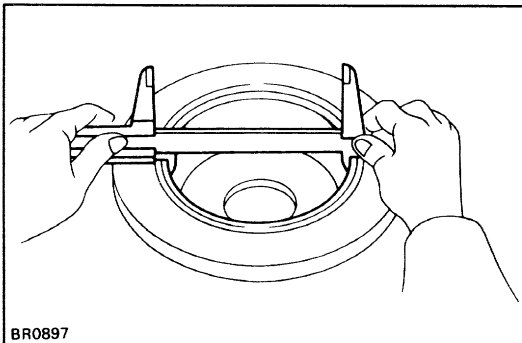


3. MEASURE BRAKE DISC INSIDE DIAMETER

Standard inside diameter: 170 mm (6.69 in.)


Maximum inside diameter: 171 mm (6.73 in.)

If the disc is scored or worn, the brake disc may be lathed to the maximum inside diameter.

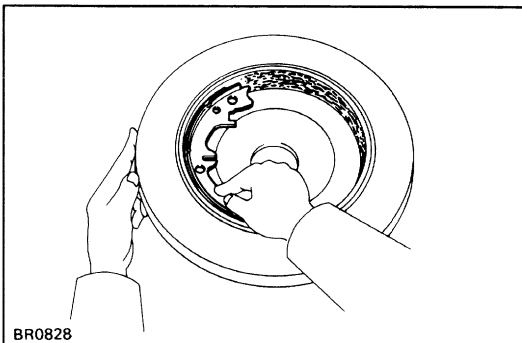

4. INSPECT PARKING BRAKE LINING AND DISC FOR PROPER CONTACT

If the contact between the brake lining and disc is improper, repair the lining with a brake shoe grinder, or replace the brake shoe assembly.

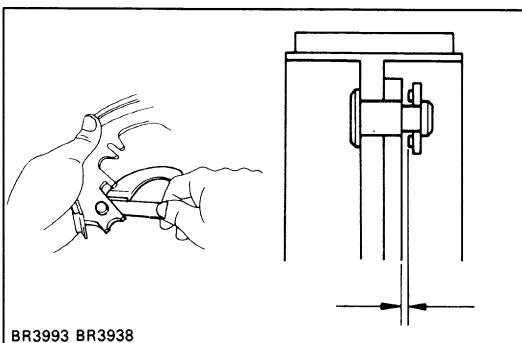


5. MEASURE CLEARANCE BETWEEN PARKING BRAKE SHOE AND LEVER

Using a feeler gauge, measure the clearance.


Standard clearance: Less than 0.35 mm

(0.0138 in.)

If the clearance is not within specification, replace the shim with one of the correct size.

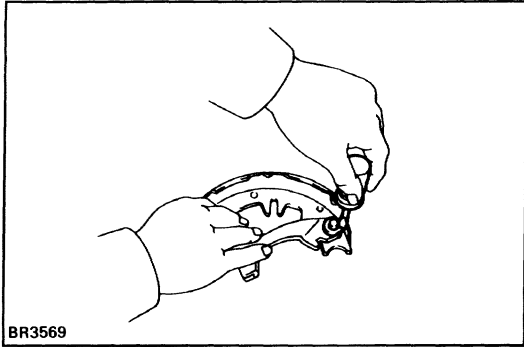**6. IF NECESSARY, REPLACE SHIM**

(a) Remove the parking brake lever, and install the correct size shim.

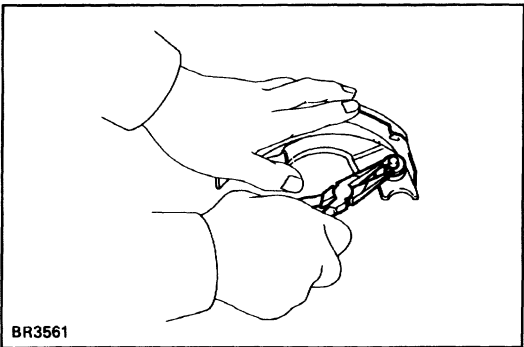



(b) Install the parking brake lever with a new C-washer.

(c) Remeasure the clearance.

ASSEMBLY OF PARKING BRAKE


(See page [BR-44](#))

HINT: Assemble the parts in the correct direction as shown.

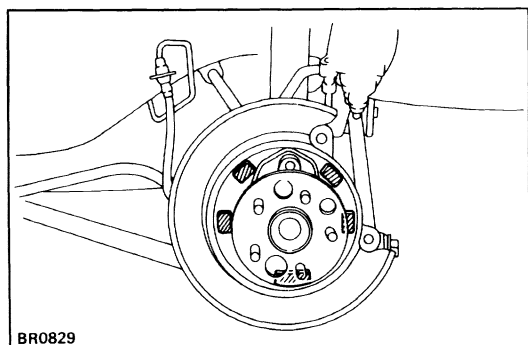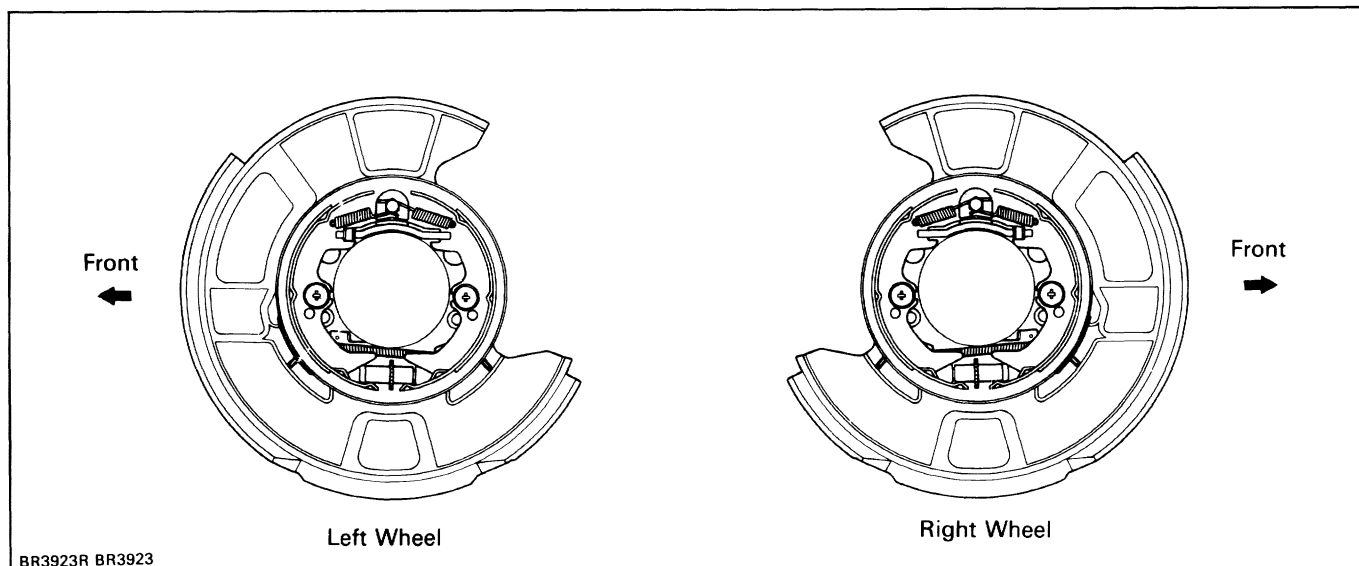


1. APPLY HIGH TEMPERATURE GREASE ON BACKING PLATE AS SHOWN

Apply high temperature grease to the sliding surfaces of the shoe.

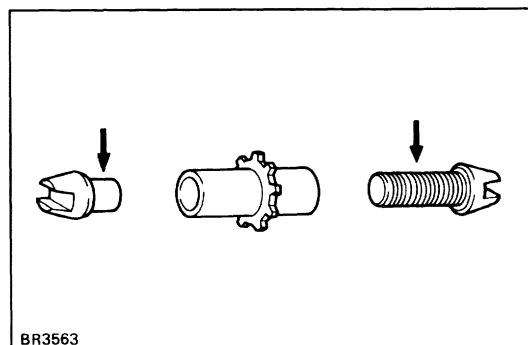


2. APPLY HIGH TEMPERATURE GREASE TO ADJUSTER AS SHOWN

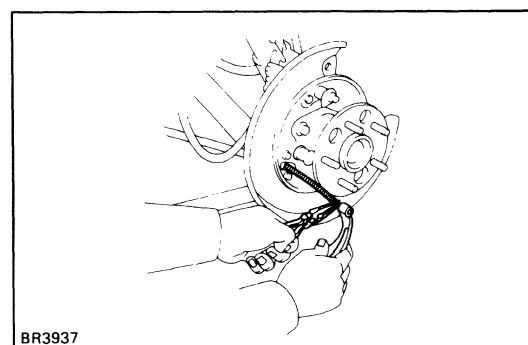

3. CONNECT PARKING BRAKE CABLE TO PARKING BRAKE LEVER


- (a) Install the shoe hold-down springs, cups and pins.
- (b) Connect the parking brake cable to the parking brake lever of the rear shoe.

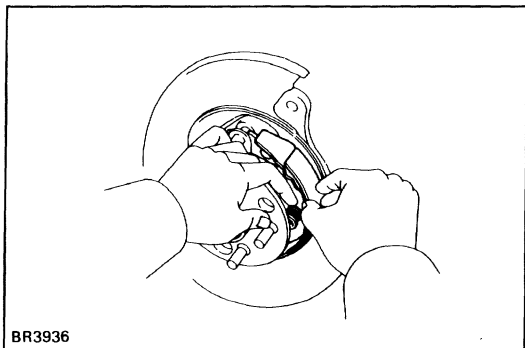

4. INSTALL REAR SHOE


Slide in the rear shoe between the shoe hold-down spring cup and the backing plate.

CAUTION: Do not allow oil or grease to get on the rubbing face.

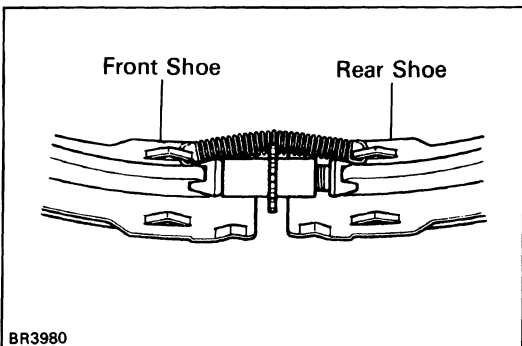


5. INSTALL TENSION SPRING, FRONT SHOE AND ADJUSTER

- Install the tension spring to the rear shoe.
- Install the front shoe to the tension spring.
- Install the adjuster between the front and rear shoes.
- Install the shoe strut with spring.

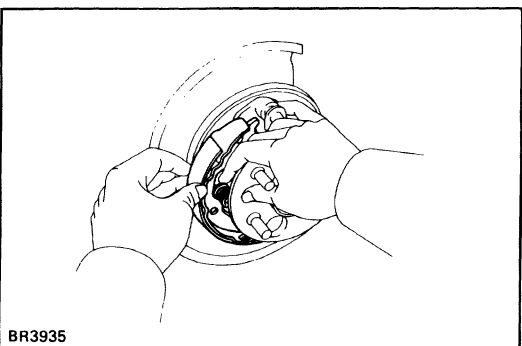


- Slide in the front shoe between the shoe hold-down spring cup and the backing plate.

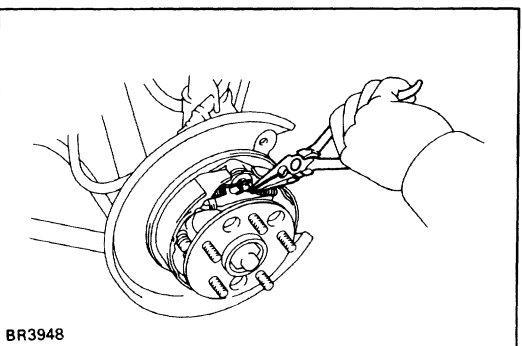


6. INSTALL SHOE RETURN SPRINGS

Using needle-nose pliers, install the shoe return springs.

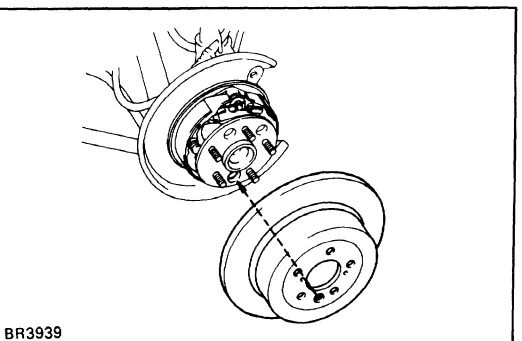


7. INSTALL ROTOR DISC

- Before installing, polish the disc and shoe surfaces with sandpaper.
- Align the hole on the rear axle shaft flange and service hole on the disc.

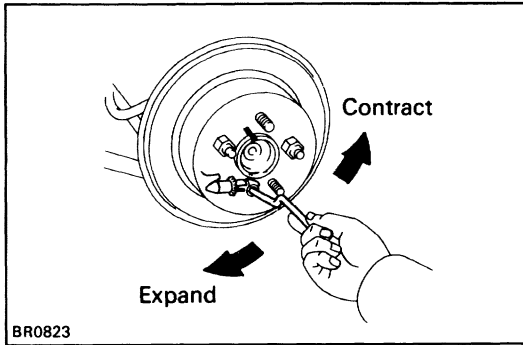**8. ADJUST PARKING BRAKE SHOE CLEARANCE**

- (a) Temporarily install the hub nuts.
- (b) Remove the hole plug.
- (c) Turn the adjuster and expand the shoes until the rotor disc locks.
- (d) Return the adjuster eight notches.
- (e) Install the hole plug.

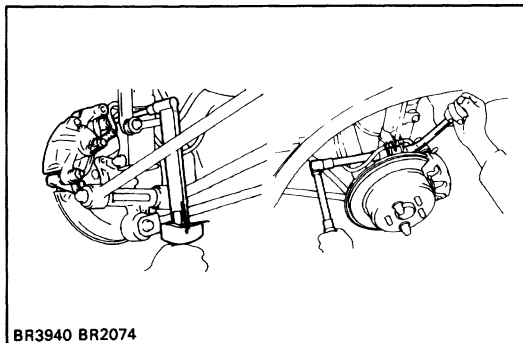**9. INSTALL REAR DISC BRAKE ASSEMBLY**

- (a) Install the disc brake assembly and torque the two mounting bolts.

Torque: 47 N-m (475 kgf-cm, 34 ft-lbf)

- (b) Install the axle carrier bolt and nut of upper side.

Torque: 226 N-m (2,300 kgf-cm, 166 ft-lbf)

10. INSTALL REAR WHEEL**11. SETTLING PARKING BRAKE SHOES AND DISC**

- (a) Drive the vehicle at about 50 km/h (31 mph) on a safe, level and dry road.
- (b) With the parking brake release button pushed in, pull on the lever with 88 N (9 kgf, 19.8 lbf) of force.
- (c) Drive the vehicle for about 400 meters (0.25 mile) in this condition.
- (d) Repeat this procedure two or three times.

12. RECHECK AND ADJUST PARKING BRAKE LEVER TRAVEL