


PROPORTIONING VALVE (P VALVE) CHECK OF FLUID PRESSURE

1. CONNECT FLUID PRESSURE GAUGE TO P VALVE

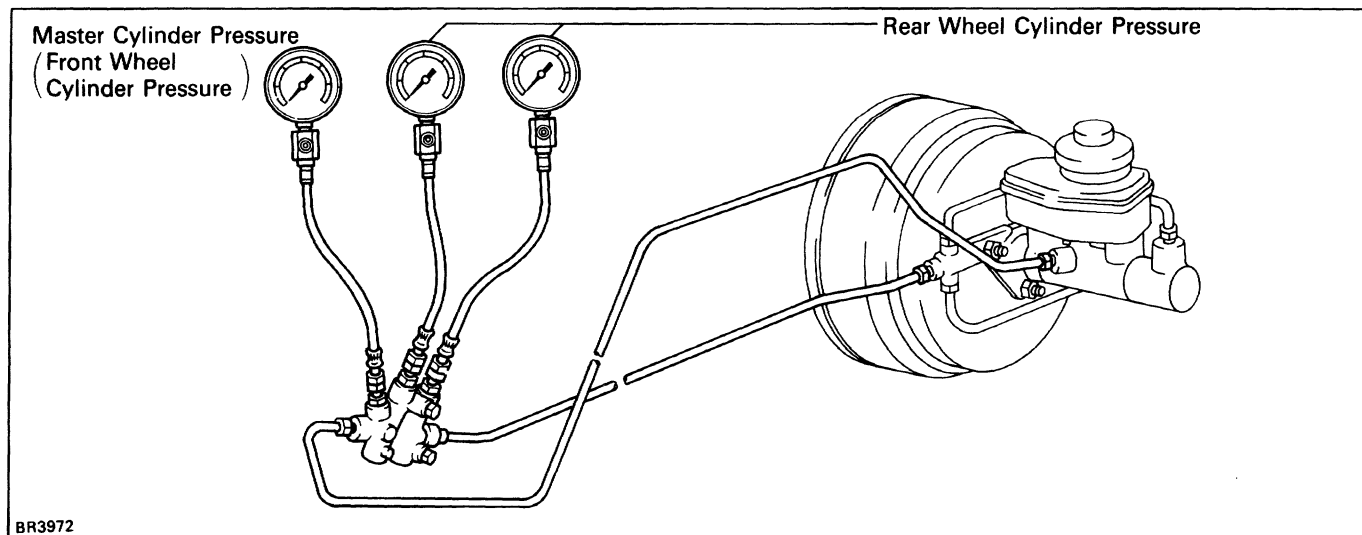

2. BLEED AIR FROM FLUID PRESSURE GAUGE

3. RAISE MASTER CYLINDER PRESSURE AND CHECK REAR WHEEL CYLINDER PRESSURE

Specifications

			Master cylinder pressure	Rear Wheel cylinder pressure
2WD	4A-FE		2,942 kPa (30 kgf-cm ²) , 427 psi)	2,942 kPa (30 kgf-cm ²) , 427 psi)
			7,845 kPa (80 kgf-cm ²) , 1,138 psi)	4,167.8 kPa (42.5 kgf-cm ²) , 604.5 psi)
	5S-FE	Coupe and Liftback	2,942 kPa (30 kgf-cm ²) , 427 psi)	2,942 kPa 130 kgf-cm ²) , 427 psi)
			7,845 kPa (80 kgf-cm ²) , 1,138 psi)	4,756 kPa (48.5 kgf-cm ²) , 690 psi)
		Con- vertible	2,452 kPa (25 kgf-cm ²) , 356 psi)	2,452 kPa 125 kgf-cm ²) , 356 psi)
			7,845 kPa (80 kgf-cm ²) , 1,138 psi)	4,452 kPa (45.4 kgf-cm ²) , 646 psi)
4WD			3,923 kPa (40 kgf-cm ²) , 569 psi)	3,923 kPa (40 kgf-cm ²) , 569 psi)
			8,826 kPa (90kgf-cm ²) , 1,280 psi)	5,737 kPa (58.5 kgf-cm ²) , 832 psi)

If the rear wheel cylinder pressure is incorrect, replace the P valve assembly.

4. BLEED BRAKE SYSTEM

5. CHECK FLUID LEAKAGE