



TECHNICAL
TRAINING


QT621A

Wire Harness Repair Quick Training Guide

WIRE HARNESS REPAIR INFORMATION

To find Wire Harness Repair information:

- Select a Component, Harness to Harness connector or Junction connector
- The selected component will begin to flash
- Select the orange Component Detail button on the lower right side of the screen

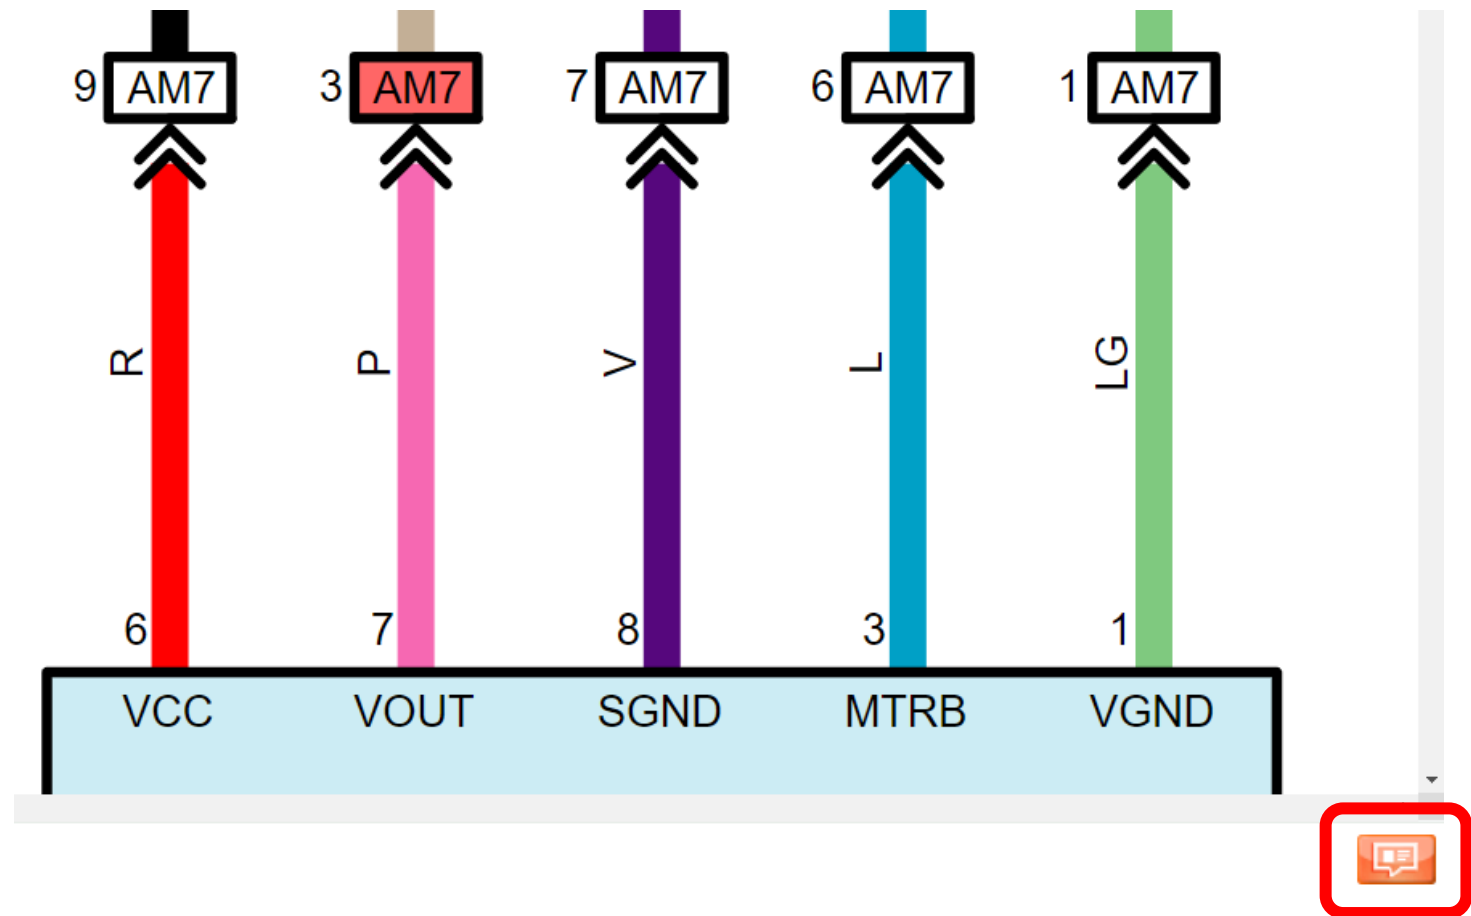

COMPONENT DETAIL

The Component Detail screen includes:

1. Code: The connector Identification number
2. Connector View: The two sides of this Harness to Harness connector are shown as if the connector is disconnected, looking in at the terminals, with the locking tab at the top
3. Connector Body Part Numbers: **90980-12737** is the part number for the connector on the left. **90980-12736** is the part number for the connector body on the right.
4. Color: The body of the connector is white
5. Terminal Number and Wire Color: Selecting an individual terminal. As shown by the pink dot on 3 will display the wire color and remarks. In this case, there are different colors possible due to model variation, and the wiring diagram show the true colors

Selecting Instrument Panel Wire and Wire will open Location screen

Component Detail

Name	Engine Room Main Wire and No. 2 Floor		
Code	1	Part Number	3
Spec	AM7	Color	4

[+] Wire Harness Repair

Terminal No. Wire color Remarks

3	P	Colors differ due to the specifications. (Refer to the circuit diagram link)
3	BE	Colors differ due to the specifications. (Refer to the circuit diagram link)
3	SB	Colors differ due to the specifications. (Refer to the circuit diagram link)


Location System

Instrument Panel Wire and Wire

LOCATION

Location:

- The selected component or connector will be highlighted in orange and flashing.
- Selecting the Component Detail button on the lower right will return to Component Detail screen

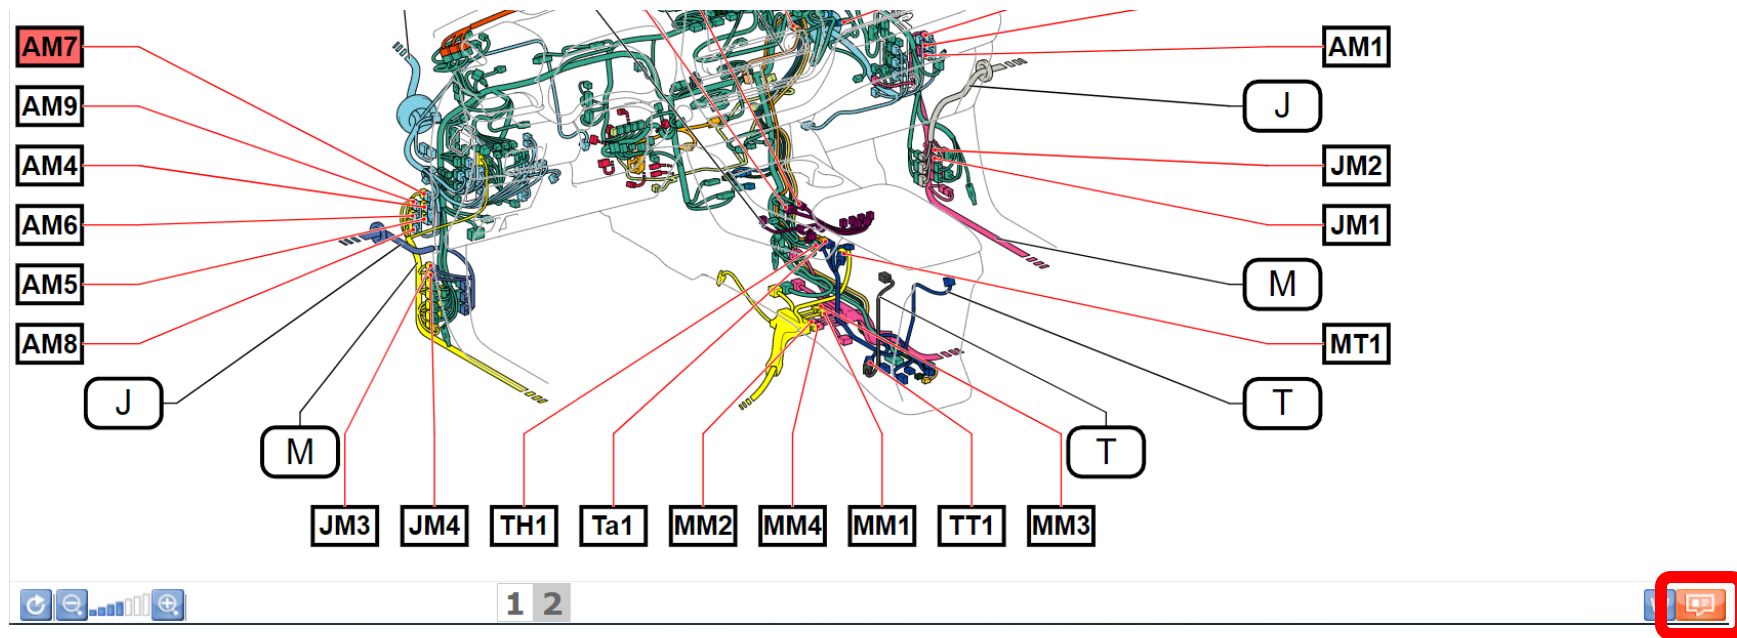

REPAIR INFORMATION


Selecting Wire Harness Repair from the Component Detail screen will go to the Repair Information screen:

1. Wire Type: Either Copper wire or Aluminum wire is called out here
2. Terminal Type: The male terminal in this connector is 1.5 millimeters wide. The terminals are the Non-Waterproof type. This terminal size and type information will be important later
3. Sleeve: The part number for the correct size crimp sleeve to connect this terminal to the existing wire harness
4. SST: The part number for the SST to release the primary lock tab on this connector
5. Primary Lock Animation: This animation shows how to release the primary lock on this connector, using the SST specified above
6. P/N: The Part Number for the Repair Terminal. In this case, **82998-24340** is a 160 mm long repair wire with the appropriate male terminal attached. E = 2.0 specifies the wire size.

WIRE HARNESS REPAIR GUIDELINES
TERMINAL AND CONNECTOR REPAIR PROCEDURES

Caution Items	
Wire Type	1 Copper
Terminal Type	2 1.5 (Non-waterproof Type)
Male / Female	Male
Sleeve	3 size:M (Silver) P/N: 82999-52020
SST	4 P/N: 09991-00570

5

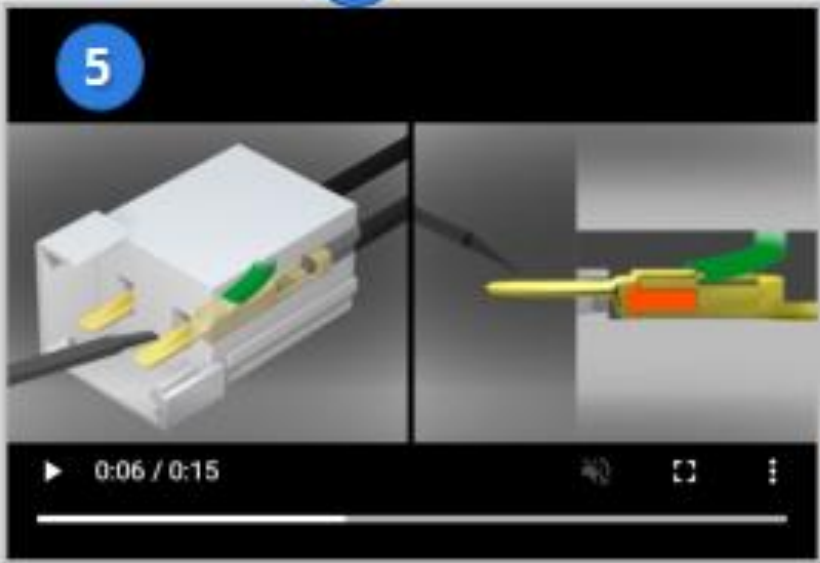

Repair Wire



E=2.0

P/N:	160mm	82998-24340
	500mm	

6

NOMINAL WIRE SIZE

Repair wire size is specified in a unit called Nominal Wire Size (NWS). These tables correlate NWS to actual wire diameter and to approximate American Wire Gauge (AWG) sizes.

Copper (Cu) wire

Wire Diameter in mm	Nominal Size	≈ AWG	Crimp Sleeve PN	Crimp Sleeve Size	Heat Shrink Sleeve
0.41 – 0.8	0.13 – 0.5	26 - 20	82999-50010	SS	82999-30010
0.8 – 1.125	0.5 – 1.0	18 - 16	82999-52010	S	
1.26 – 1.60	1.25 – 2.0	16 - 15	82999-52020	M	
1.95 – 2.5	3.0 – 5.0	14 - 13	82999-30020	L	
3.2	8	8	82999-60020	LL	82999-60030

Aluminum (Al) wire

Wire Diameter in mm	Nominal Size	≈ AWG	Crimp Sleeve PN	Crimp Sleeve Size	Heat Shrink Sleeve
0.8	0.5	20	82999-50010	SS	82999-30010
1.0 – 1.125	0.75 – 1.0	19 - 18	82999-52010	S	
1.26 – 1.8	1.25 – 2.5	16 - 15	82999-52020	M	
1.95	3	14	82999-30020	L	
8.0	8	8	82999-60020	LL	82999-60030


GUIDELINES and REPAIR PROCEDURES

WIRE HARNESS REPAIR GUIDELINES

This document provides detailed guidelines on repairable and non-repairable conditions

TERMINAL AND CONNECTOR REPAIR PROCEDURES

This document provides detailed and comprehensive instructions on performing wire harness repairs

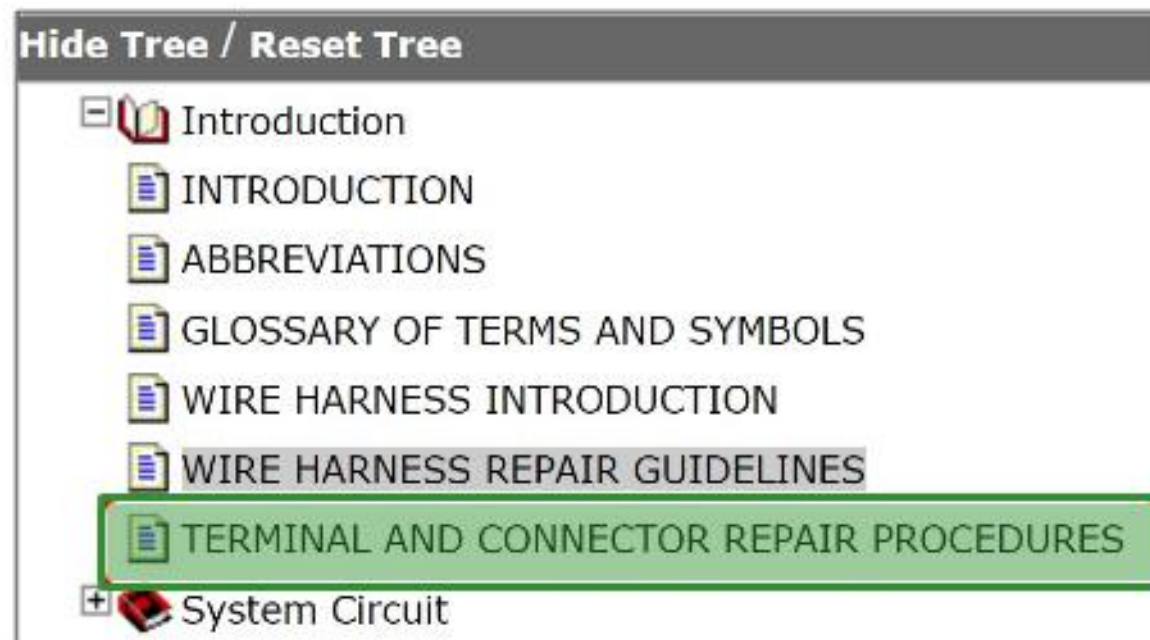

Terminal Release Tools and Tension Gauge

11819-00026



TERMINAL REMOVAL TOOL KIT

Early First
Quarter
2022




Second
Quarter
2022



11021-00027



TERMINAL GAUGE TOOL



COMPONENTS:

09041-1C570-01
DRIVER(-) 20MM

09041-1C580-01
DRIVER(-) 20MM

09991-00500-01
LANCE TOOL F

09991-00510-01
LANCE TOOL M

09991-00520-01
LANCE CANCELLING TOOL NO.1

09991-00530-01
LANCE CANCELLING TOOL NO.2

09991-00550-01
RETAINER REMOVER A

09991-00560-01
LANCE CANCELLING TOOL NO.3

09991-00570-01
LANCE CANCELLING TOOL NO.4

09992-01030-01
TERMINAL TOOL NO.3

Illustration	Part number	Part name	
	09991-00500	Lance canceling tool	For terminal removal/ 0.64 non-waterproof type, female
	09991-00510	Lance canceling tool	For terminal removal/ 0.64 non-waterproof type, male
	09992-01030	Lance canceling tool	For terminal removal/ 0.64II non-waterproof type, male 0.64II non-waterproof type, female
	09991-00520	Lance canceling tool No.1	For terminal removal/ 0.5 non-waterproof type, female 0.5W non-waterproof type, female
	09991-00530	Lance canceling tool No.2	For terminal removal/ 0.5II waterproof type, female 0.64 waterproof type, female 1.0V waterproof type, female
	09991-00560	Lance canceling tool No.3	For terminal removal/ 0.64 waterproof type, male
	09991-00570	Lance canceling tool No.4	For terminal removal/ 1.5 non-waterproof type, male 1.5 non-waterproof type, female
	09041-1C570	Minus screwdriver 1.8mm	For terminal removal (to release retainer)/ 0.64III male Mainly 2.3 - 8.0 etc.
	09041-1C580	Minus screwdriver 0.9mm	For terminal removal (to release retainer)/ Mainly 1.0 - 2.3II etc.
	09991-00550	Retainer remover A	For retainer release/ 0.64 waterproof type, male

COMPONENTS:

01021-00101
0.50MMX 0.50MM

01021-00102
0.64MMX 0.64MM

01021-00103
1.00MMX 0.64MM

01021-00104
1.30MMX 0.64MM

01021-00105
1.50MMX 0.64MM

01021-00106
1.50MMX 0.80MM

01021-00107
1.80MMX 0.64MM

01021-00108
2.30MMX 0.64MM

01021-00109
2.80MMX 0.80MM

01021-00110
4.80MMX 0.80MM

01021-00111
6.30MMX 0.80MM

01021-00112
8.00MMX 0.80MM