


Turbocharging Pressure Sensor (3S-GTE)

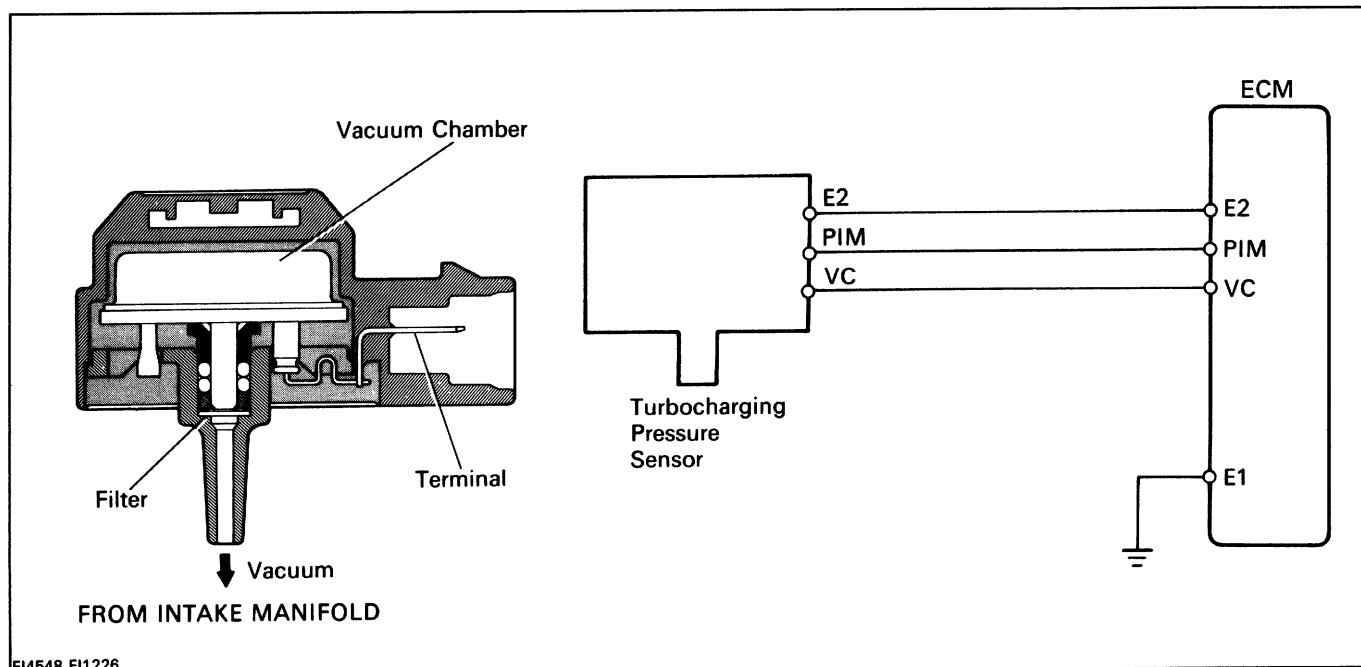

FI4548 FI1226

INSPECTION OF TURBOCHARGING PRESSURE SENSOR

1. INSPECT POWER SOURCE VOLTAGE OF TURBOCHARGING PRESSURE SENSOR

- Disconnect the pressure sensor connector.
- Turn the ignition switch ON.
- Using a voltmeter, measure the voltage between connector terminals VC and E2 of the wiring harness side.

Voltage: 4.5 – 5.5 V


- Reconnect the pressure sensor connector.

2. INSPECT POWER OUTPUT OF TURBOCHARGING PRESSURE SENSOR


- Turn the ignition switch ON.
- Disconnect the vacuum hose of the intake manifold (chamber) side.
- Connect a voltmeter to terminals PIM and E2 of the ECM, and measure and record the output voltage under ambient atmospheric pressure.
- Apply vacuum to the pressure sensor in 13.3 kPa (100 mmHg, 3.94 in.Hg) segments to 66.7 kPa (500 mmHg, 19.69 in.Hg).
- Measure voltage drop from step (c) above for each segment.

Voltage drop:

Applied Vacuum kPa (mmHg in.Hg)	13.3 (100 3.94)	26.7 (200 7.87)	40.0 (300 11.81)	53.5 (400 15.75)	66.7 (500 19.69)
Voltage drop (V)	0.15– 0.35	0.4– 0.6	0.65– 0.85	0.9– 1.1	1.15– 1.35

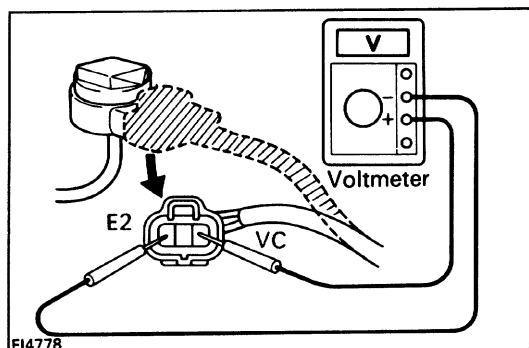

FI4778

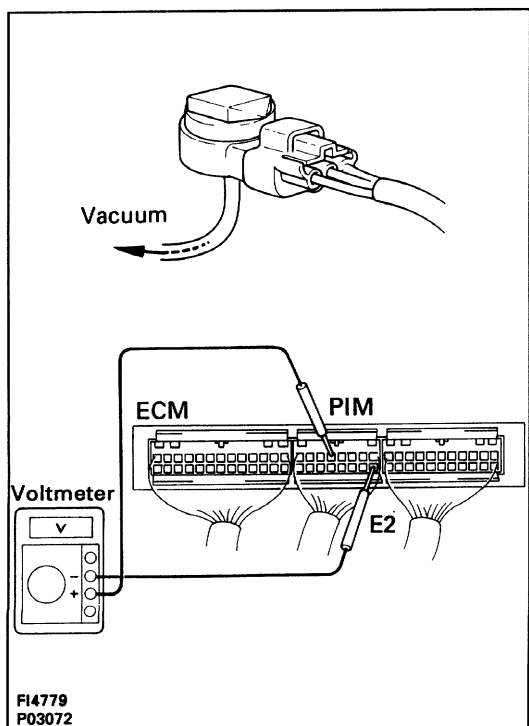FI4779
P03072