


VEHICLE LIFT AND SUPPORT LOCATIONS



FWD

←
Front

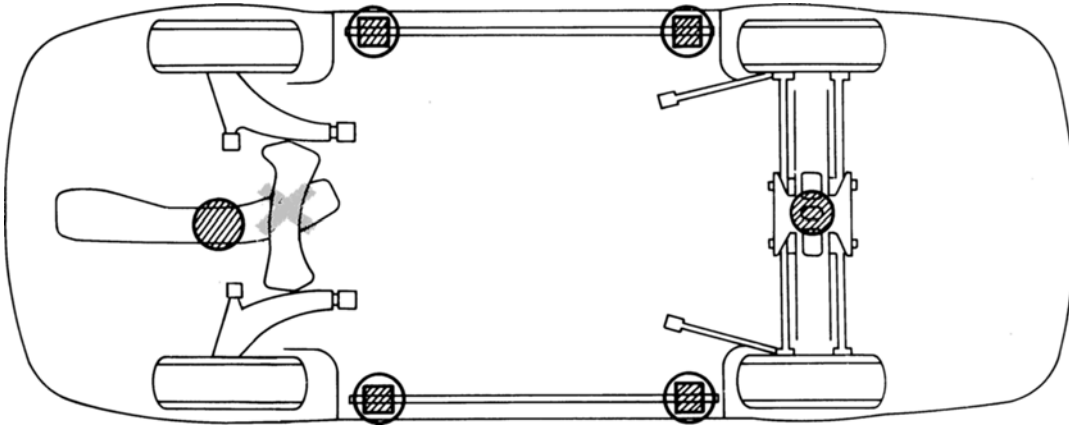

All Trac/4WD

←
Front

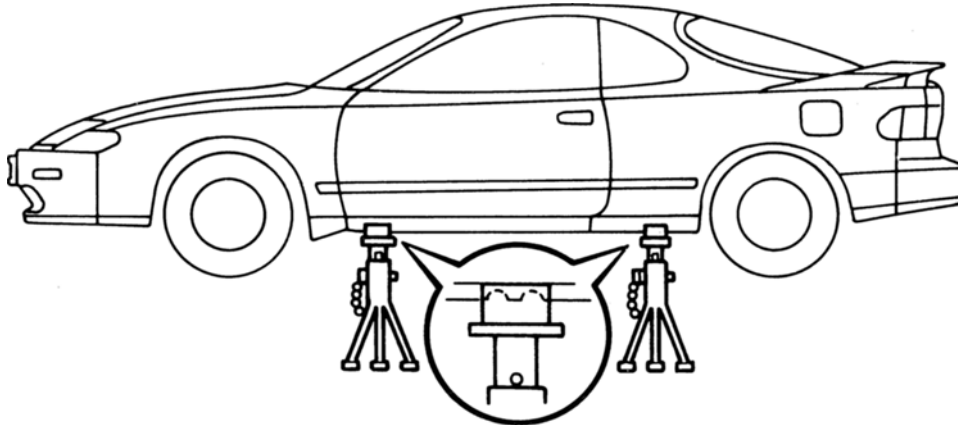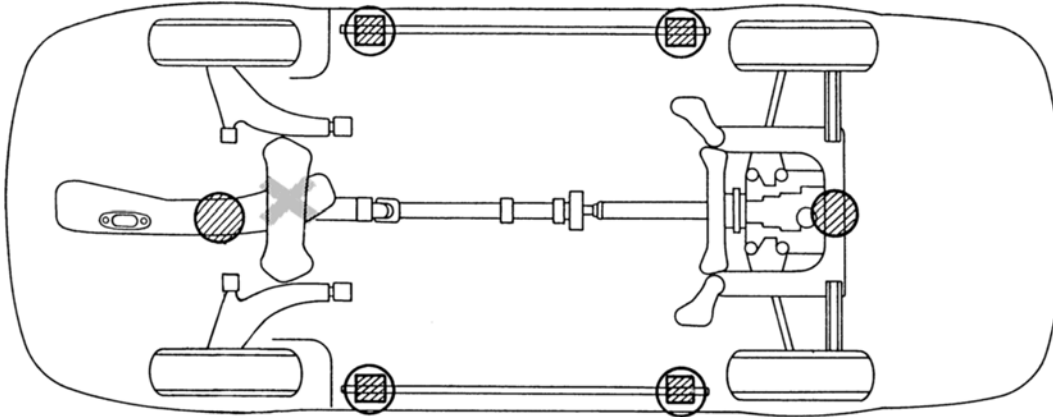

JACK POSITION _____

Front Center of engine mounting center member
Rear Jack up support of rear subframe



NOTICE: Place the jack only in the positions indicated above. Never place the jack in the position marked "X" as this will bend the cross-member and damage the vehicle.

PANTOGRAPH JACK POSITION _____
SUPPORT POSITION



Safety stand

