


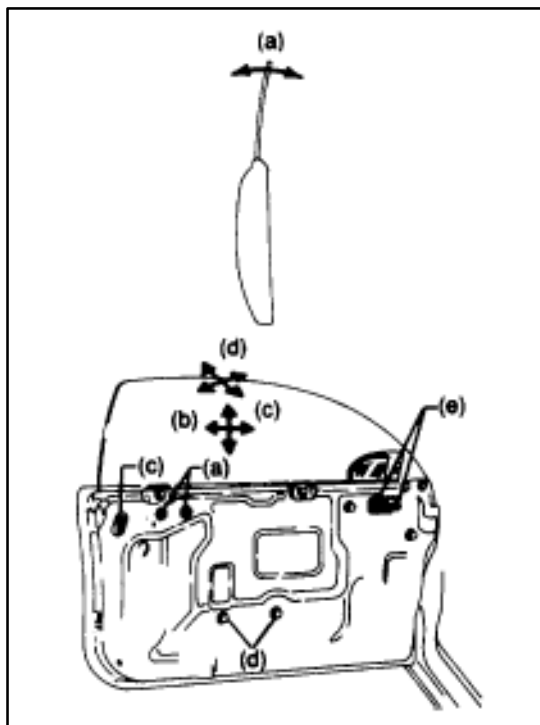

DOOR GLASS ADJUSTMENTS

1. REMOVE DOOR TRIM

(See Front Door in CELICA Repair Manual)

2. DOOR GLASS ADJUSTMENT

[In left/right direction—upper side of glass]

Using a hexagon wrench, adjust the stud bolts (a) of the rear glass guide.

For example, if you turn both stud bolts to the right, the upper side of the glass moves to the outside.

HINT: Turn both stud bolts of the glass guide an equal amount.

[In forward/rearward direction]

Loosen the two nuts and slide the rear glass guide (b) forward or rearward to adjust the glass.

[In vertical direction]


Adjust the door glass stopper (c)

[In lean of forward/rearward direction]

Adjust the equalizer arm bracket mounting bolts (d).

3. TIGHTEN EACH BOLT, NUT OF EACH PART

HINT: When installing the front guide, after adjusting each part, temporarily tighten the two nuts (e) until they touch the inner panel surface. Then install the lock plate and tighten the bolt.

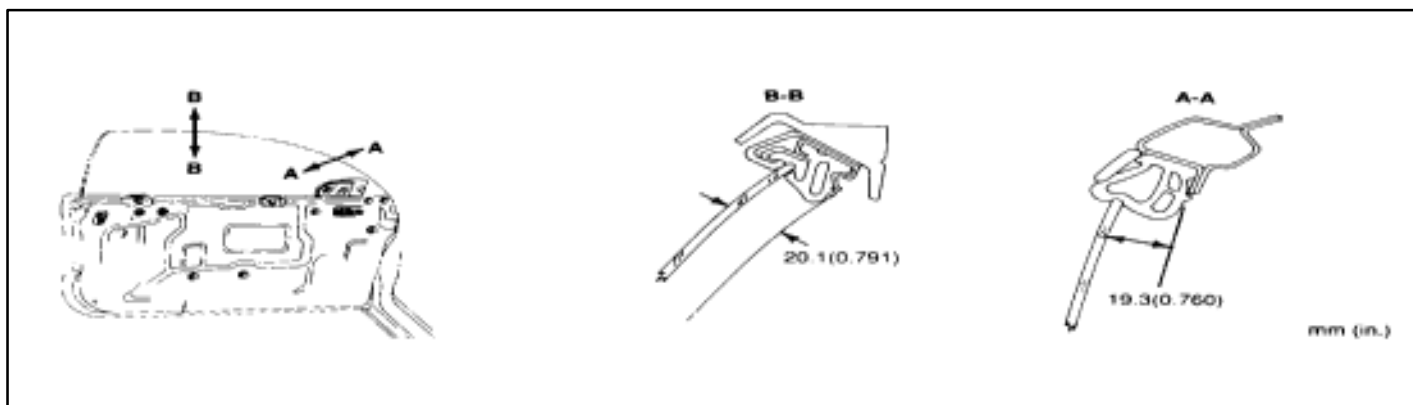

4. CHECK THE DOOR GLASS

(a) When you close the door with the glass fully closed check that the A-A and B-B sections are in the same condition as shown in the illustration.

(b) When you close the door with the glass fully closed, be careful that the glass is not caught in the weatherstrip.

(c) When you raise up the glass, check that the glass and the top weatherstrip retainer are parallel and the front and rear door glass stoppers touch at the same time.

(d) When you raise up the glass to the middle, check that gap of the glass is not big in the door trim support.

(e) Check that the glass moves smoothly.

If the above conditions are not met, readjust the glass.

5. INSTALL DOOR TRIM

(See Front Door in CELICA Repair Manual)