



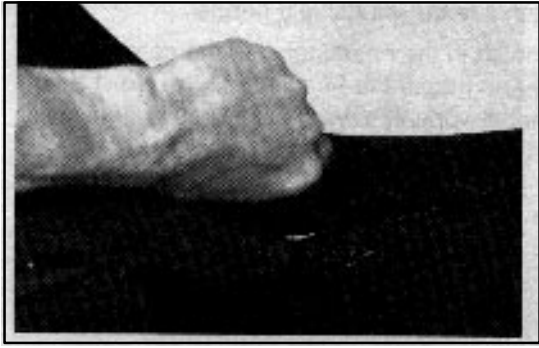

4. INSTALL HEADLINER TO THE BACK BELT FRONT TRIM GARNISH

Position the headliner reinforcement strap to the back belt front trim garnish and install the screw.

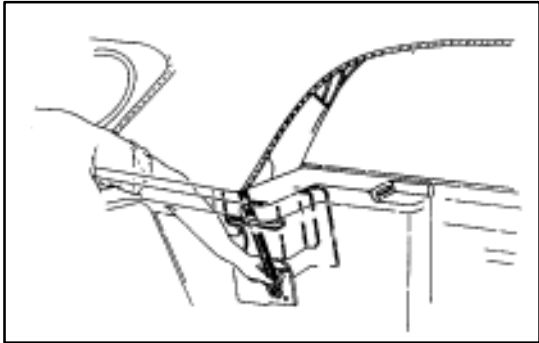

5. HOOK HEADLINER STRAPS TO THE TOP STACK MAIN PIVOT BRACKET



REMOVAL OF REAR RAIL COVER

1. REMOVE REAR RAIL COVER

- (a) Pull headliner back to expose the rear rail cover attaching screws.
- (b) Remove the two screws and remove the rear rail cover.



INSTALLATION OF REAR RAIL COVER

1. INSTALL REAR RAIL COVER

Position the rear rail cover to the rear rail and install the two screws.