


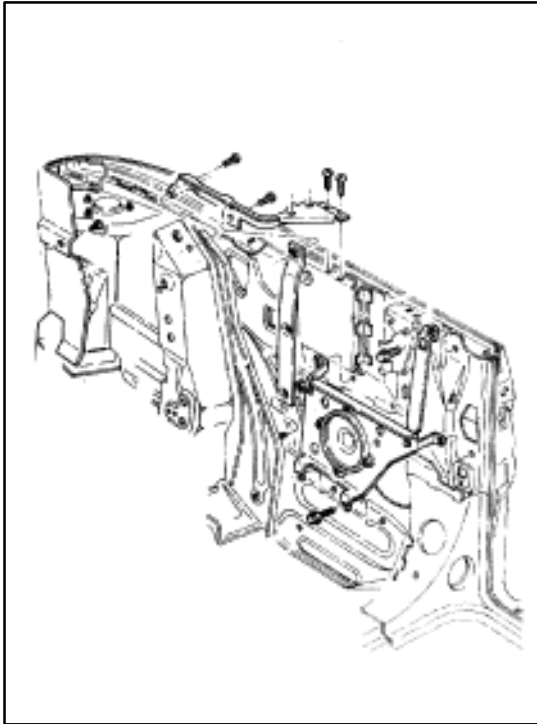


REMOVAL OF QUARTER TRIM UPPER AND CENTER SUPPORT BRACKETS

1. **REMOVE QUARTER TRIM PANEL**
(See page 6-3)
2. **REMOVE THE QUARTER TRIM UPPER SUPPORT BRACKET**
Remove the three screws and bolt and remove the quarter trim upper support bracket.
HINT: Mark the position of the screw attachments on the upper bracket before removal.
3. **REMOVE THE QUARTER TRIM CENTER SUPPORT BRACKET**
Remove the nut and bolt and remove the quarter trim center support bracket.
HINT: Mark the position of the nut and bolt attachment on the center bracket before removal.

INSTALLATION OF QUARTER TRIM UPPER AND CENTER SUPPORT BRACKETS

INSTALL THE QUARTER TRIM UPPER AND CENTER SUPPORT BRACKETS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

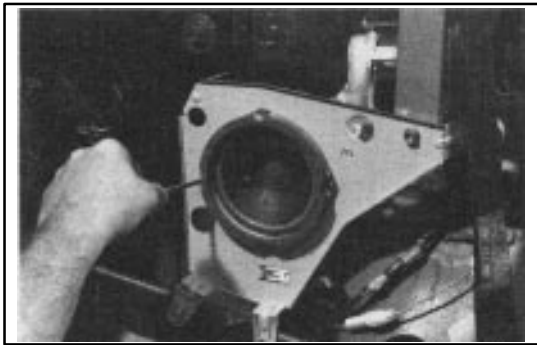

REMOVAL OF REAR SEAT SPEAKER AND SPEAKER BRACKET

1. **REMOVE QUARTER TRIM PANEL**
(See page 6-3)
2. **REMOVE REAR SEAT SPEAKER**
 - (a) Remove the four screws.



- (b) Disconnect the wire connector and remove the speaker.