

REMOVAL OF QUARTER TRIM PANEL


1. LOWER CONVERTIBLE TOP
2. REMOVE THE FOLLOWING PARTS:
 - (a) Door scuff molding.
 - (b) Front seat belt shoulder anchor.
 - (c) Rear seat cushion and back (See page [10-3](#))
 - (d) Remove rear seat back side hinge.
 - (e) Remove rear seat back striker.
3. REMOVE QUARTER TRIM PANEL
 - (a) Using a clip remover, remove the rear speaker grille.



- (b) Remove the seven inboard attaching screws.




- (c) Remove the three screws retaining the rear seat belt cover.

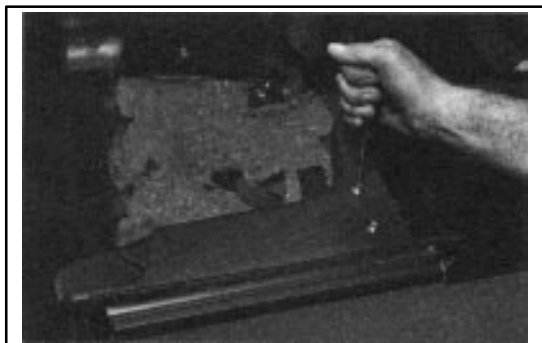

- (d) Remove the upper inboard snap.



- (e) Raise the top slightly to expose the two outboard attaching screws.
- (f) Remove the two outboard attaching screws.
- (g) Remove the quarter trim panel.

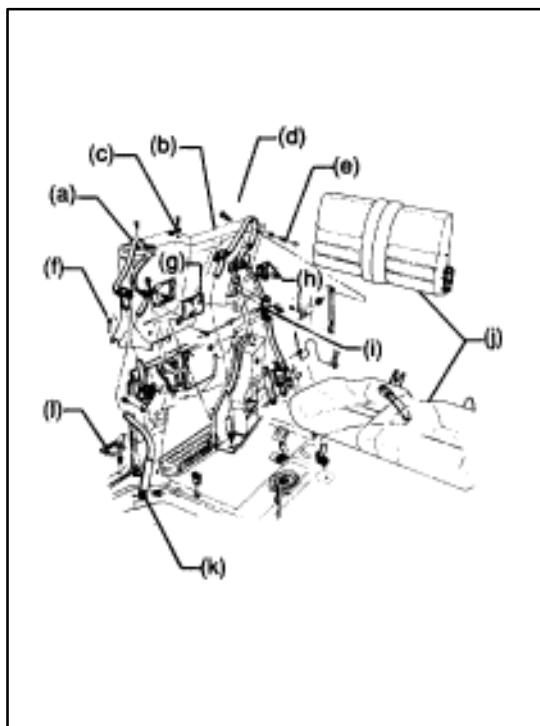

INSTALLATION OF QUARTER TRIM PANEL

1. INSTALL QUARTER TRIM PANEL:

- (a) Feed front seat belt through the quarter trim.
- (b) Install the quarter trim panel.
- (c) Install the upper inboard snap.
- (d) Install the two outboard attaching screws.
- (e) Install the three rear seat belt cover screws.
- (f) Install the seven inboard attaching screws.
- (g) Install the rear speaker grille.
- (h) Install the rear seat back striker.
- Torque: 175 kg-cm (13 ft-lb, 17 N-m)**
- (i) Install rear seat back side hinge.
- Torque: 80 kg-cm (69 in-lb, 7.8 N-m)**
- (j) Install rear seat back and cushion. (See page [10-3](#))
- (k) Install front seat belt shoulder anchor.
- Torque: 440 kg-cm (32 ft-lb, 43 N-m)**
- (l) Install the door scuff molding.