



ILLUMINATION

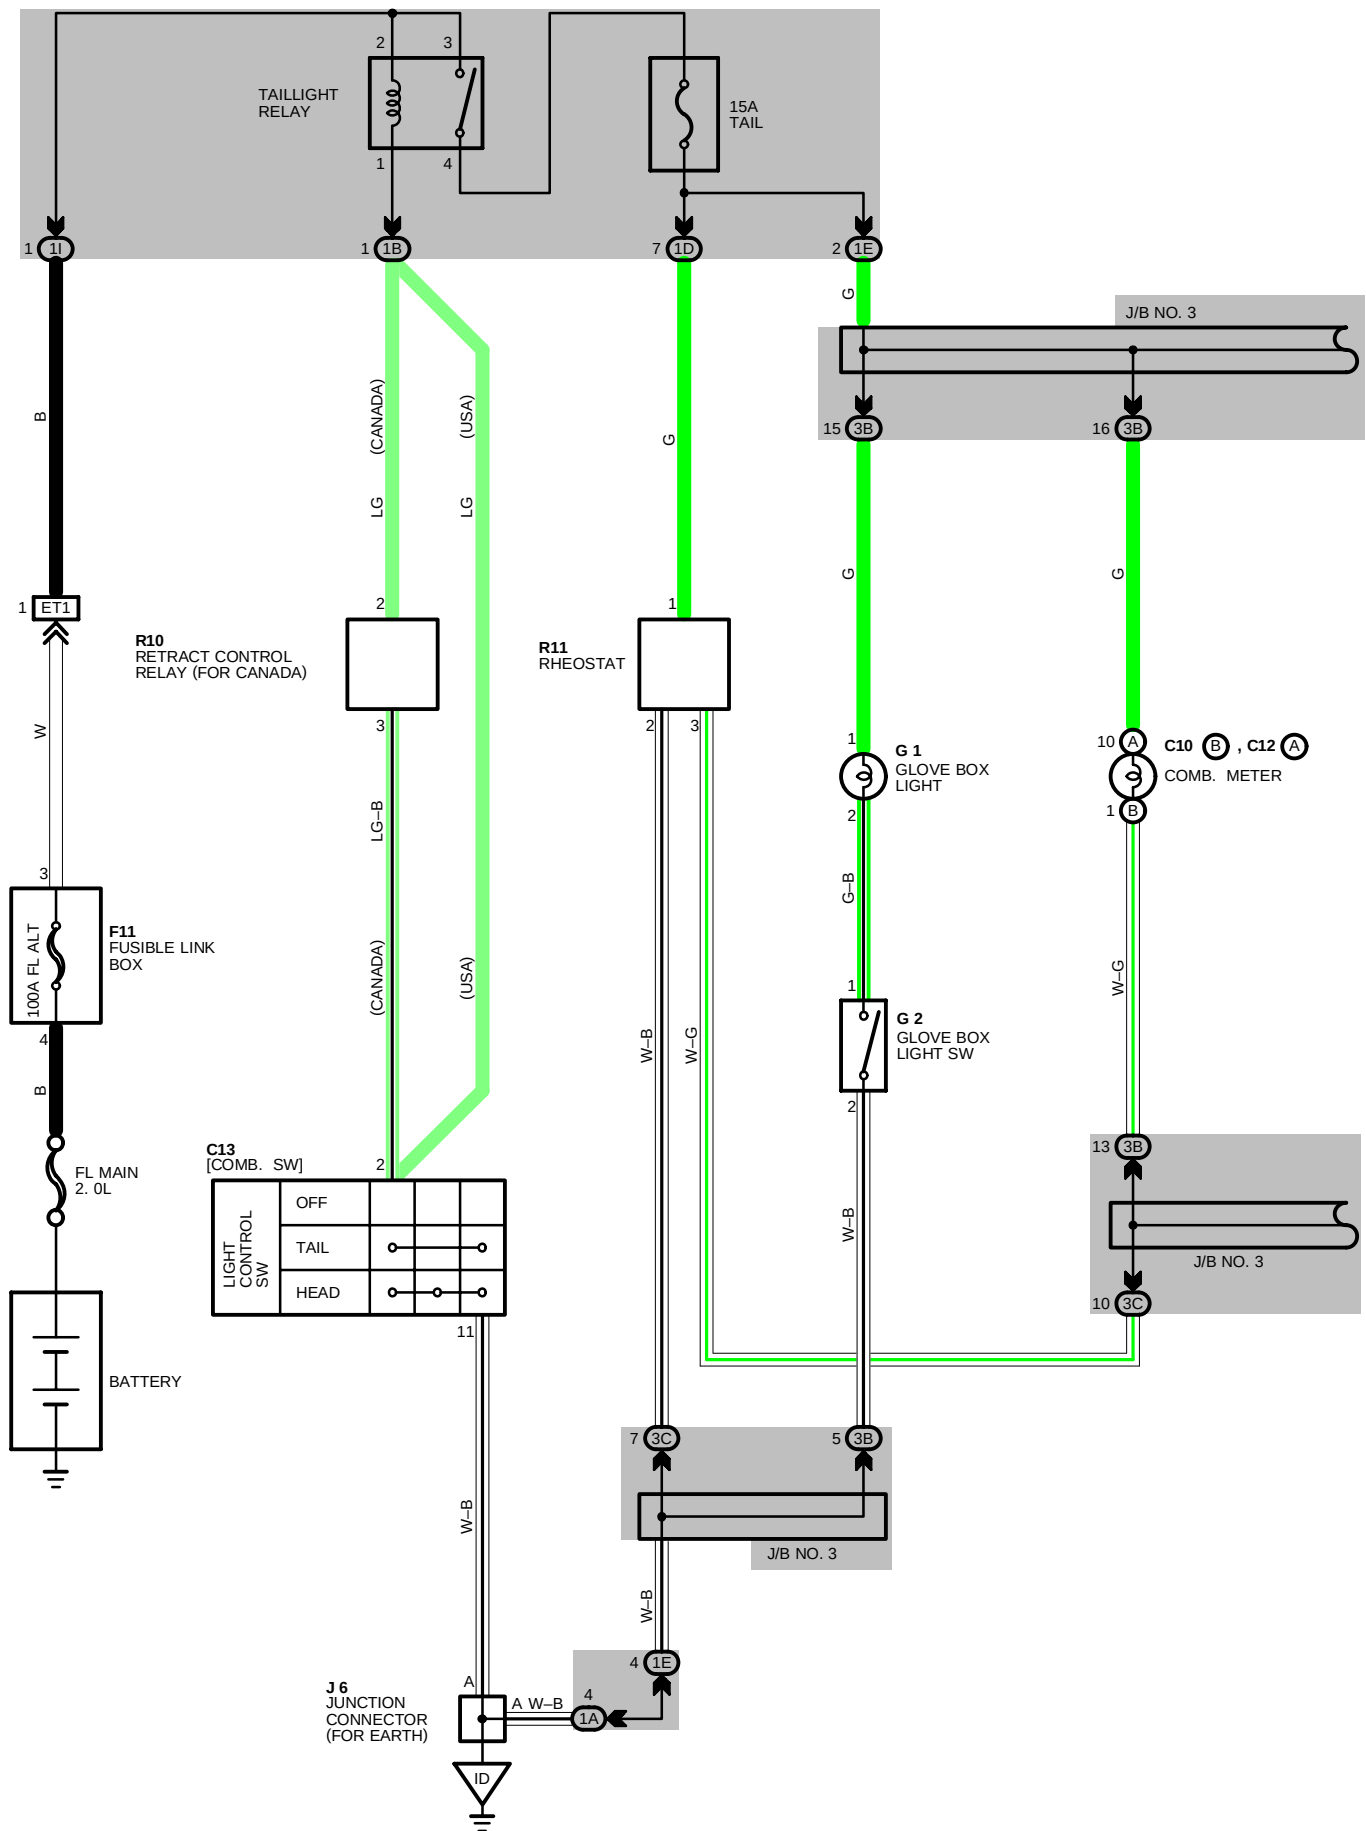

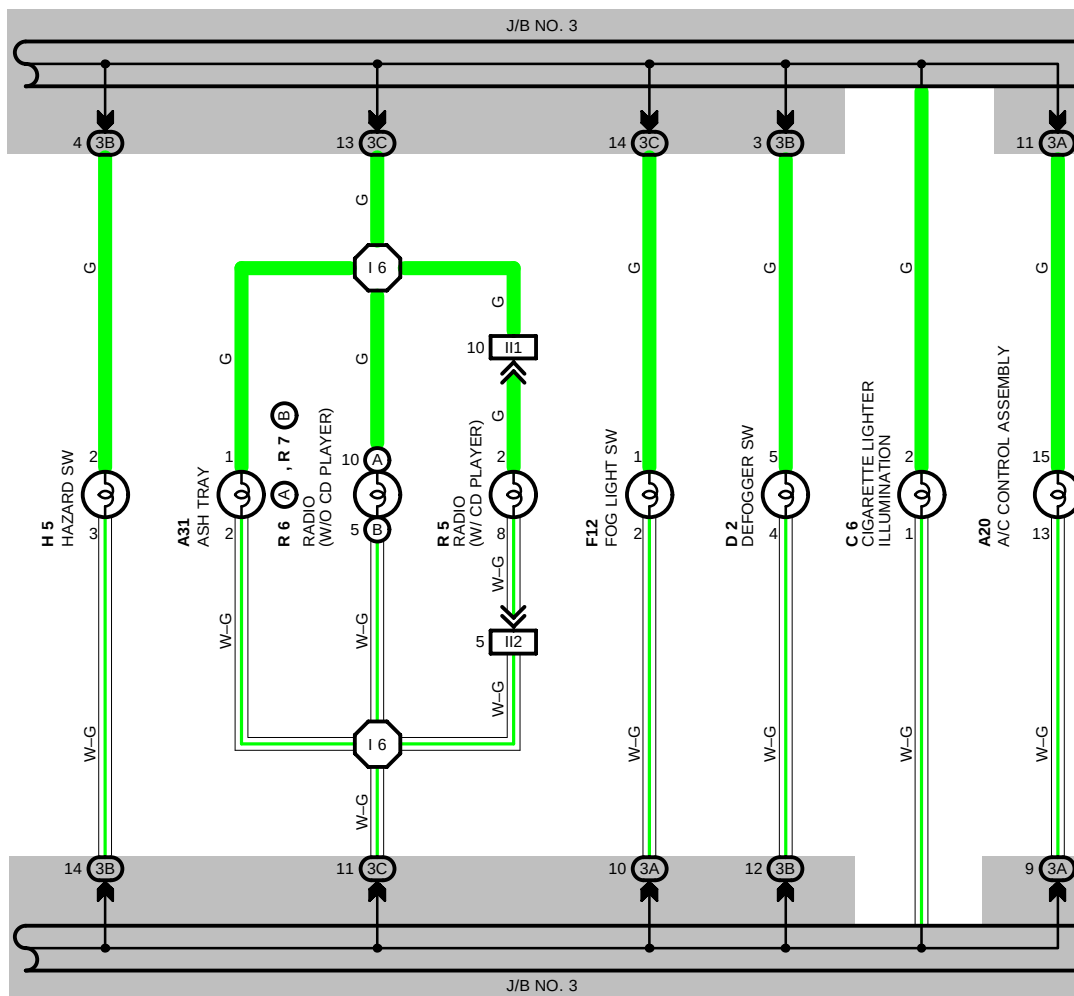

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

R 8 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

 : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A20	26	D 2	26	J 6	26
A31	26	F11	25	R 5	26
C 6	26	F12	26	R 6	A 26
C10	B 26	G 1	26	R 7	B 26
C12	A 26	G 2	26	R10	26
C13	26	H 5	26	R11	26

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1I	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS







CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	28	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
II1	32	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2		

 : GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
ID	30	LEFT KICK PANEL

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	32	COWL WIRE			

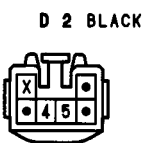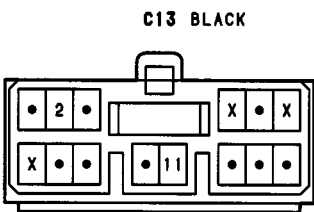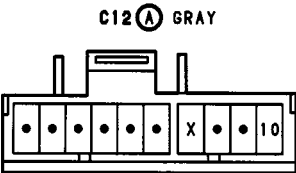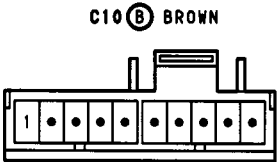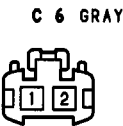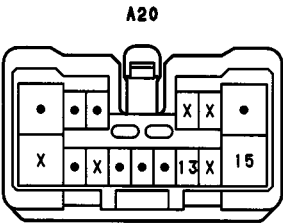

F11 BLACK

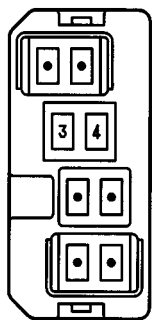

F12 BLACK




G 1 GRAY




G 2



H 5 BLACK




J 6

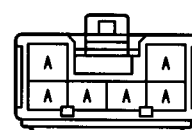

(HINT:SEE PAGE 7)


R 5

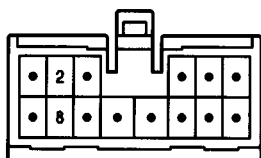


R 6 (A)



R 7 (B)

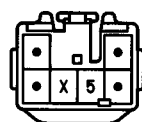

R10

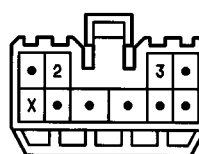

R11

