



RELAY LOCATIONS


[Engine Compartment]

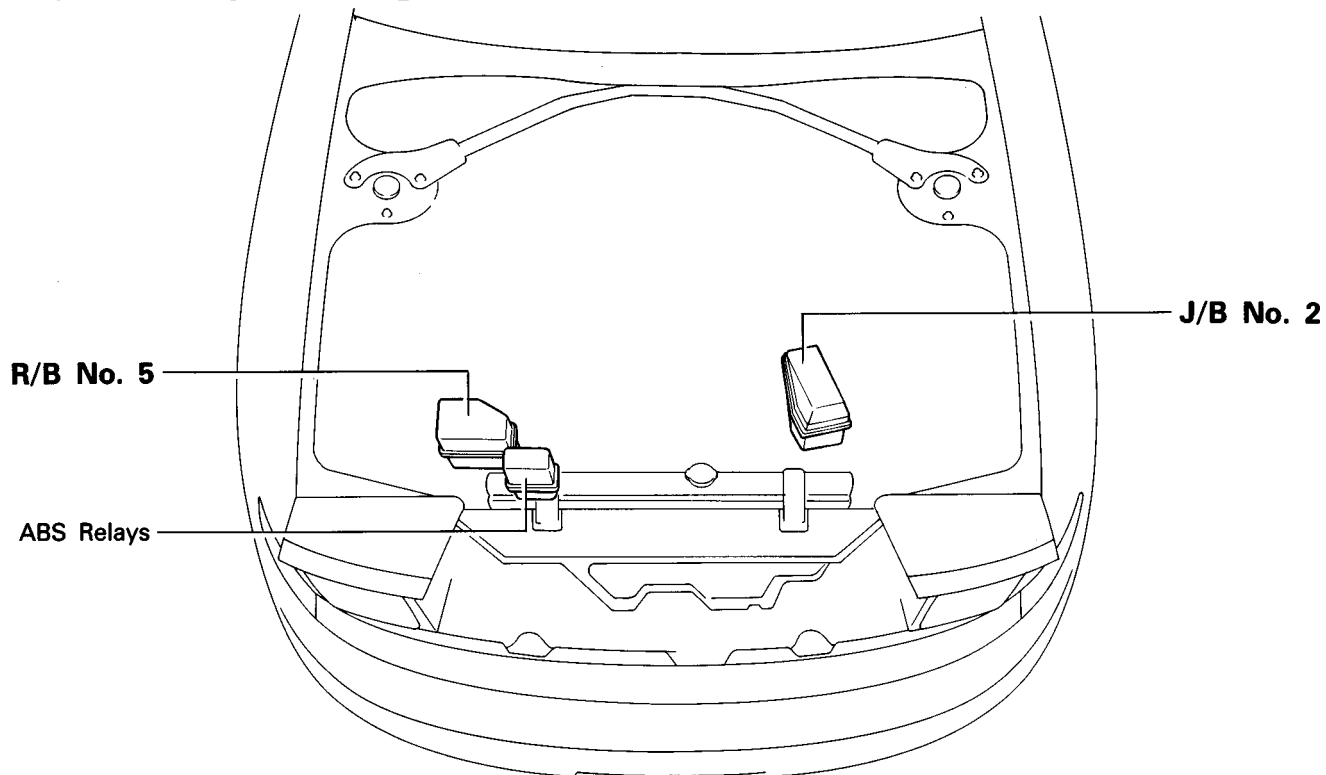

[Body]

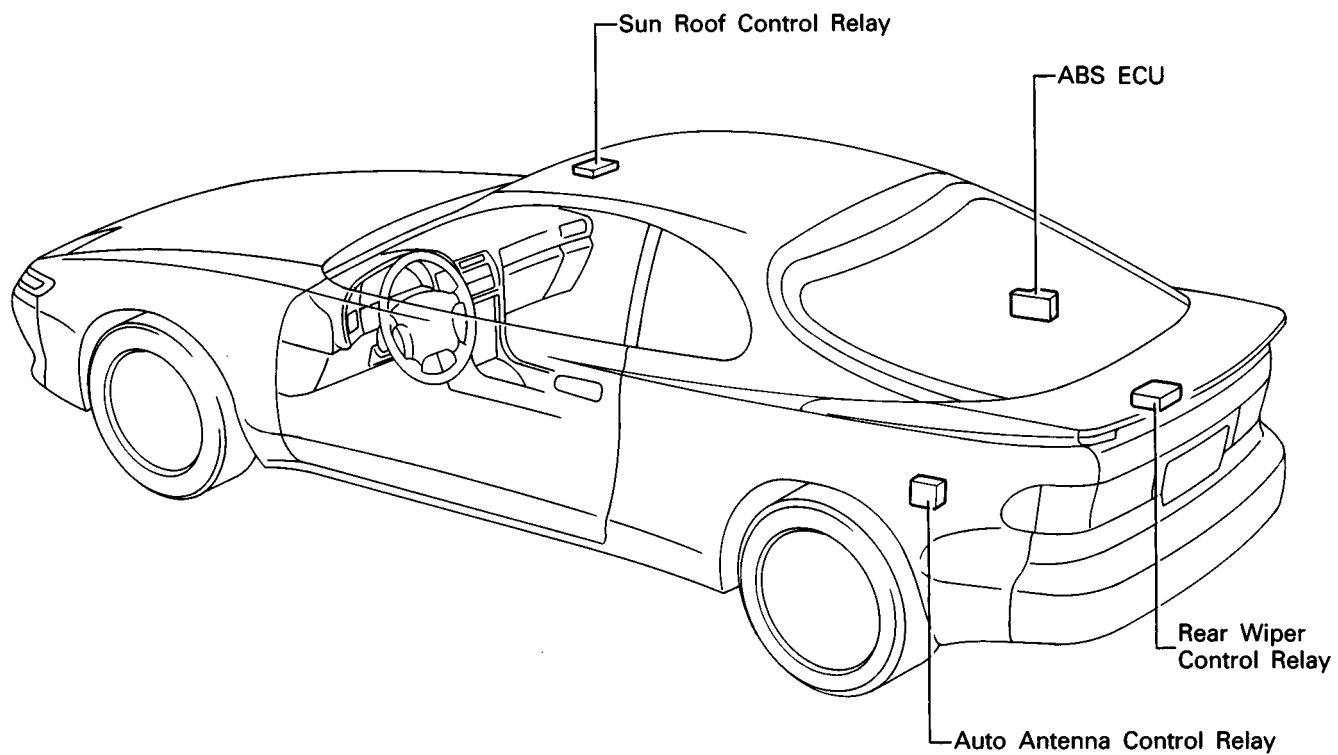


[Instrument Panel]

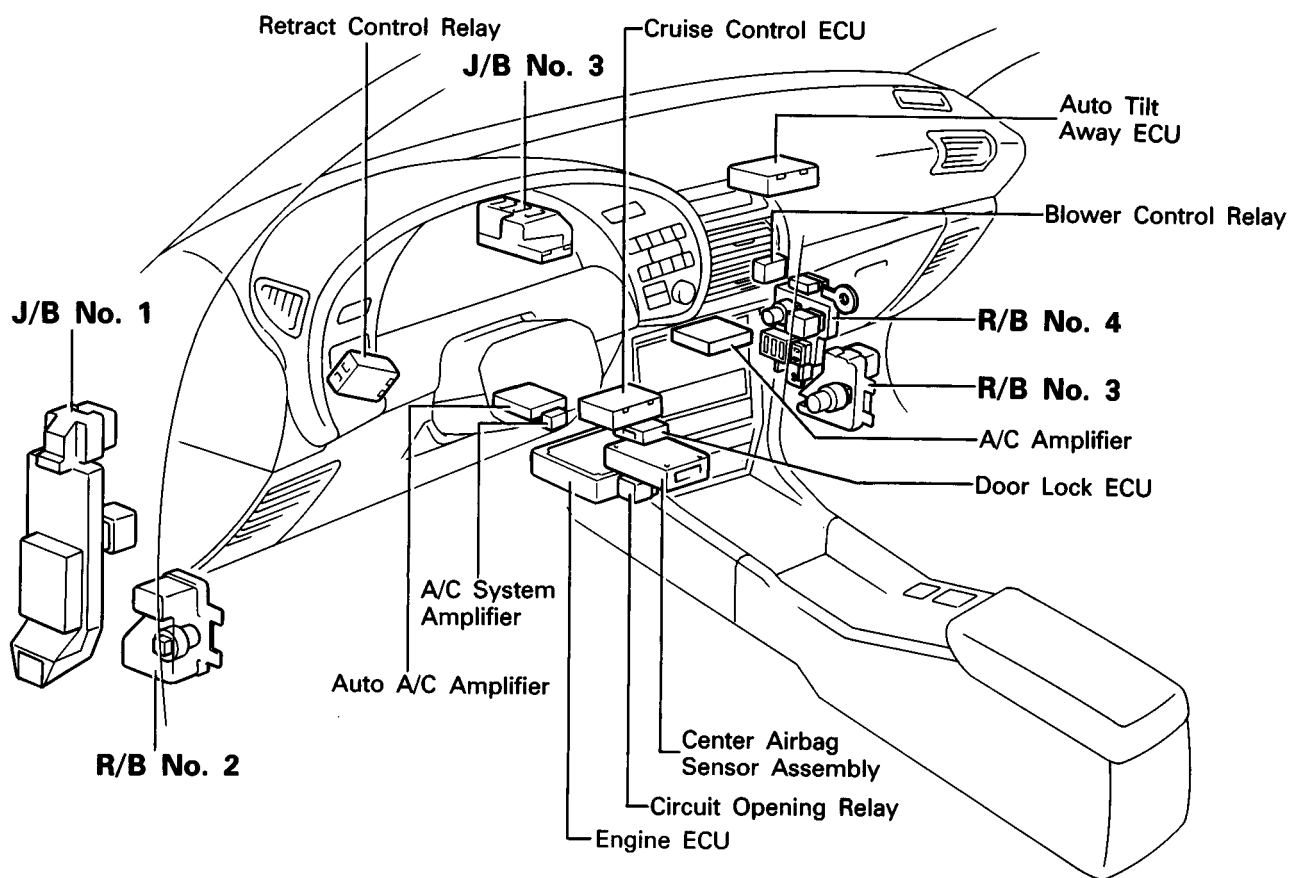


RELAY LOCATIONS

○ : J/B No. 1	Left Kick Panel	(See Page 17)
---------------	-----------------	---------------


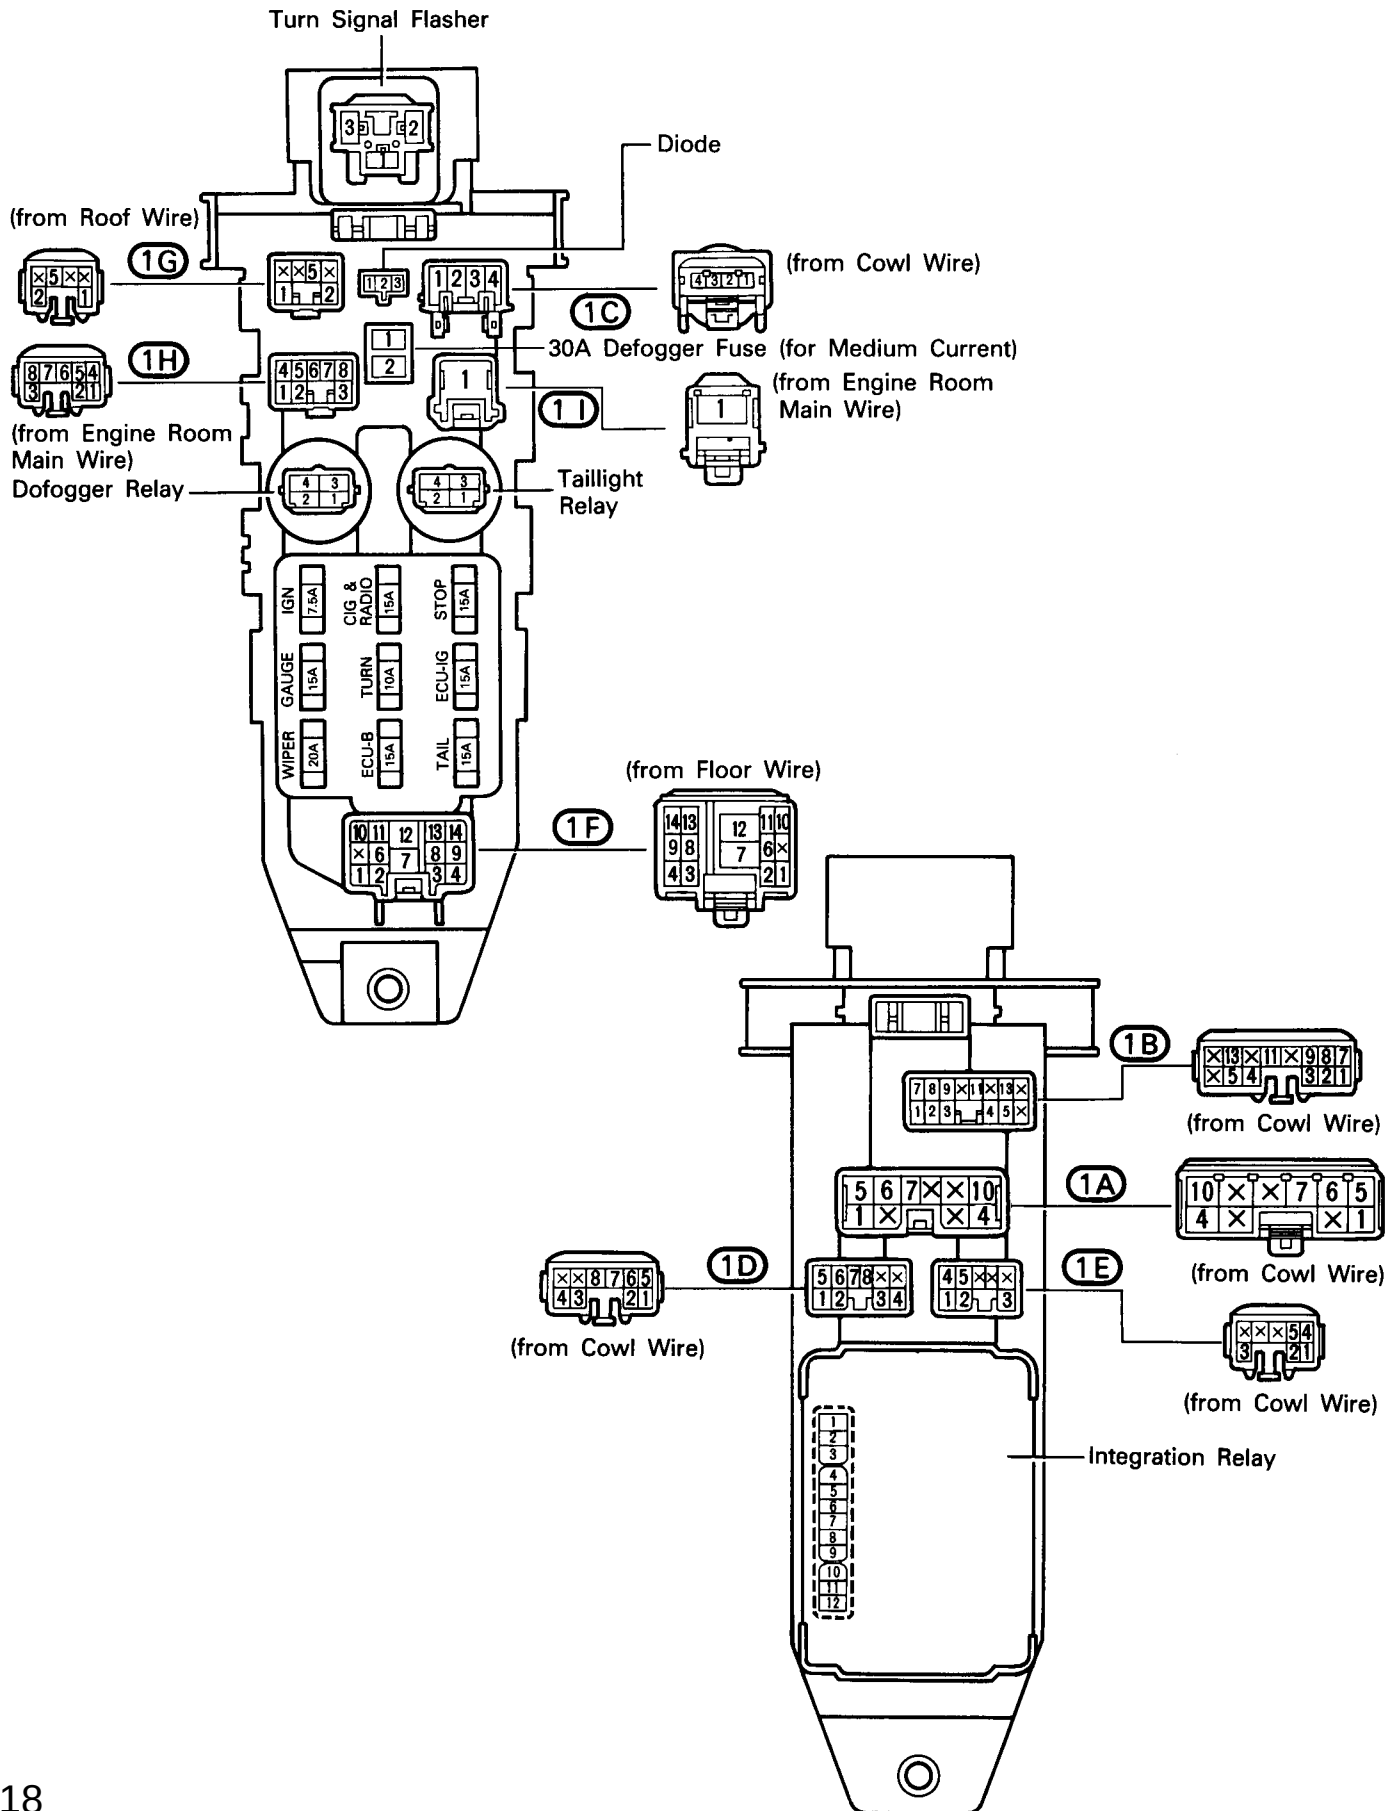


[J/B No. 1 Inner Circuit]

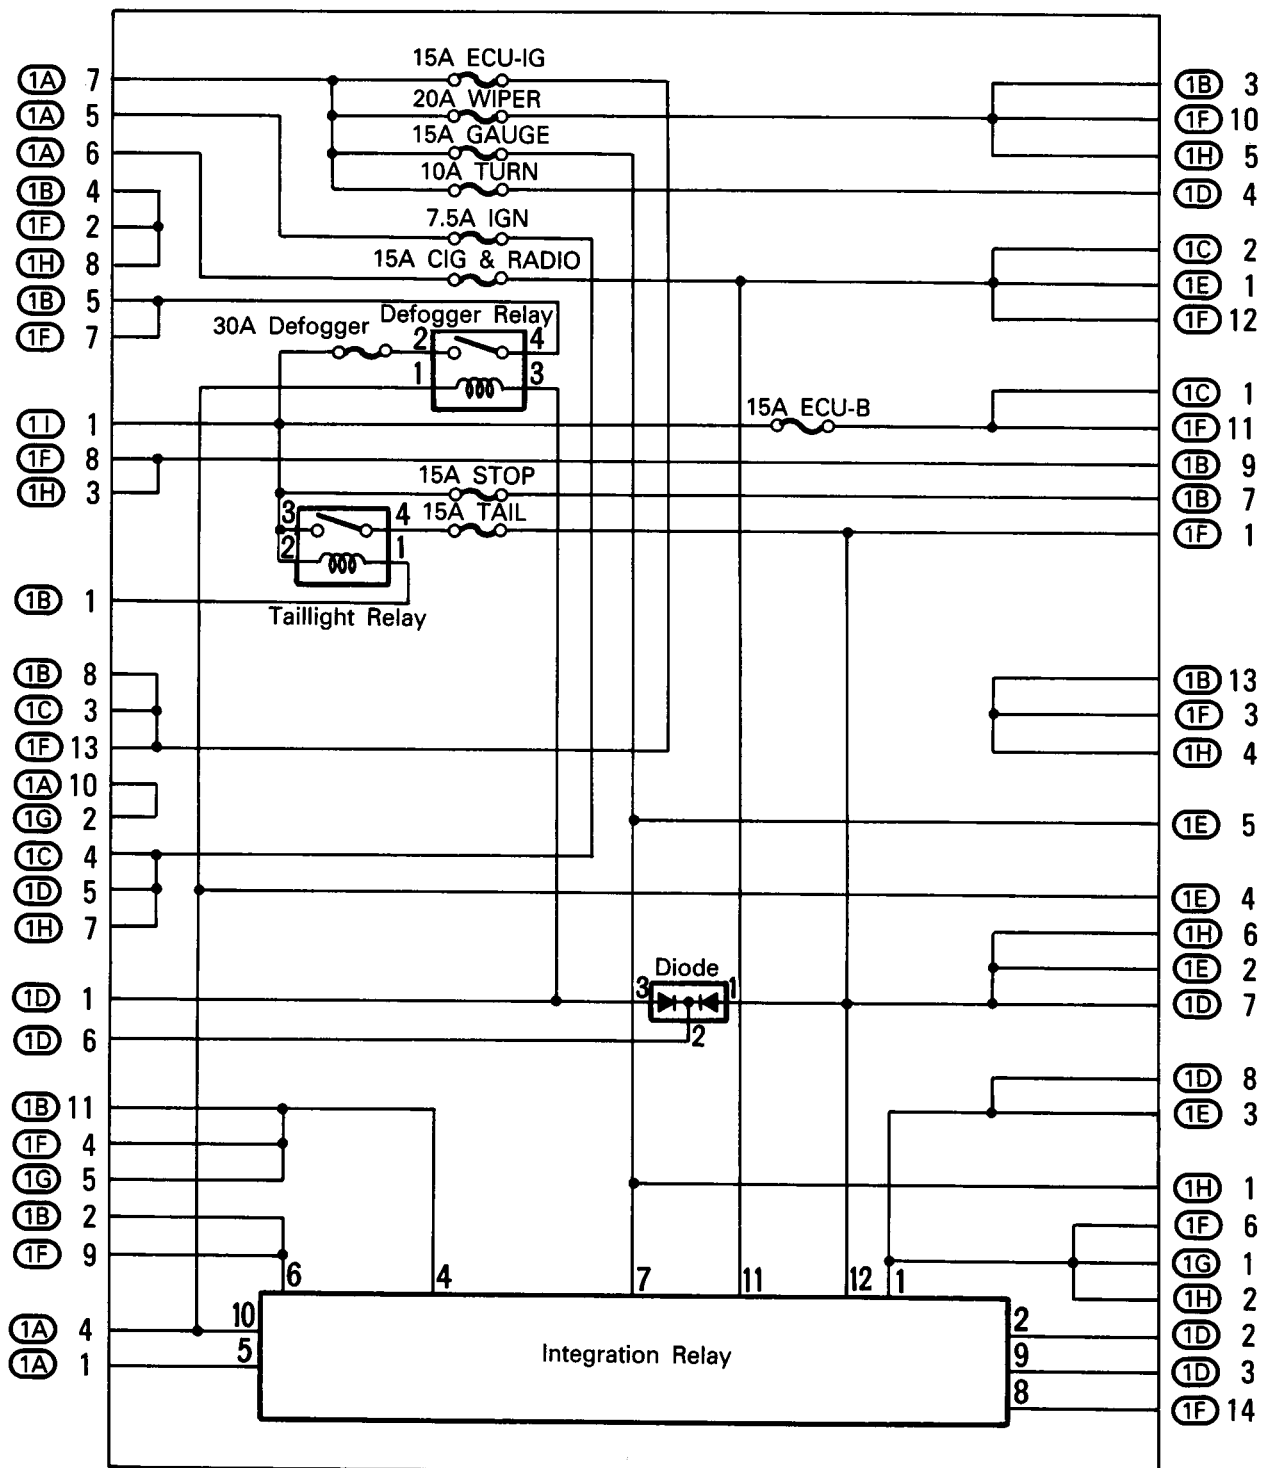


RELAY LOCATIONS

○ : J/B No. 2	Near the Battery	(See Page 16)
---------------	------------------	---------------

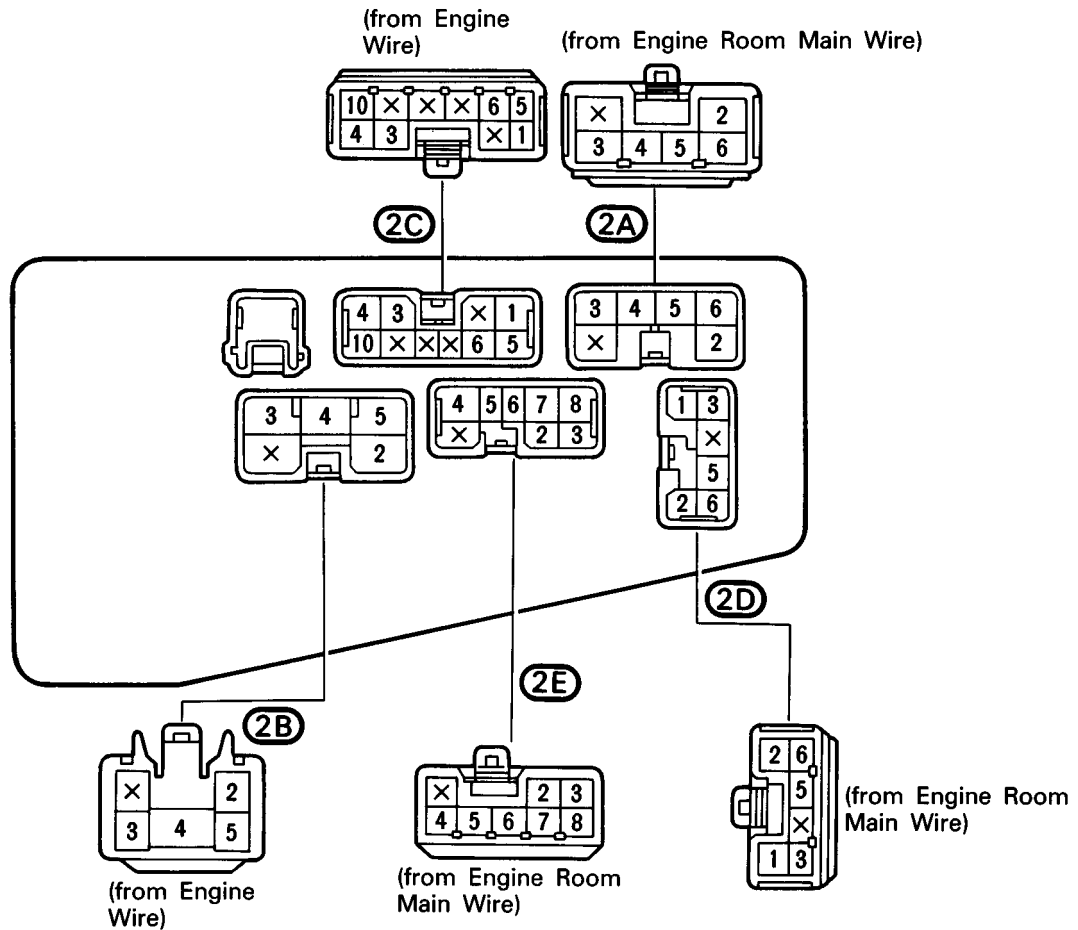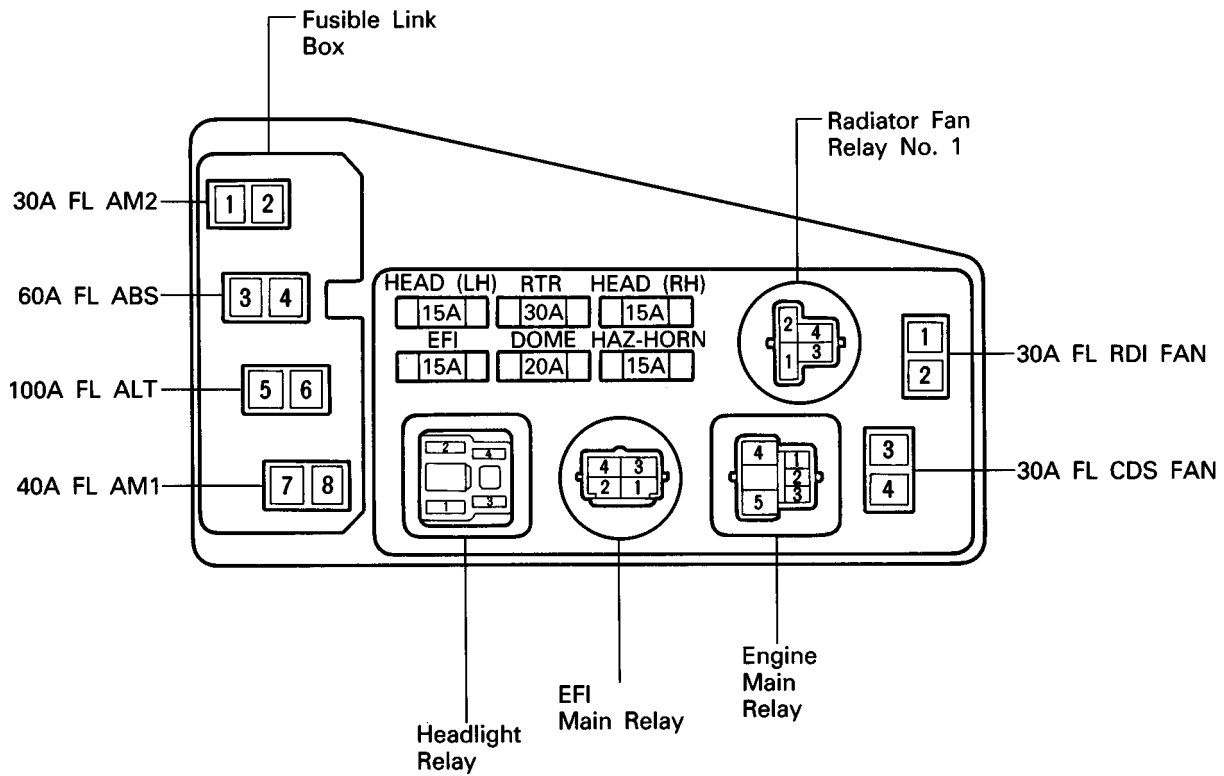


[J/B No. 2 Inner Circuit]

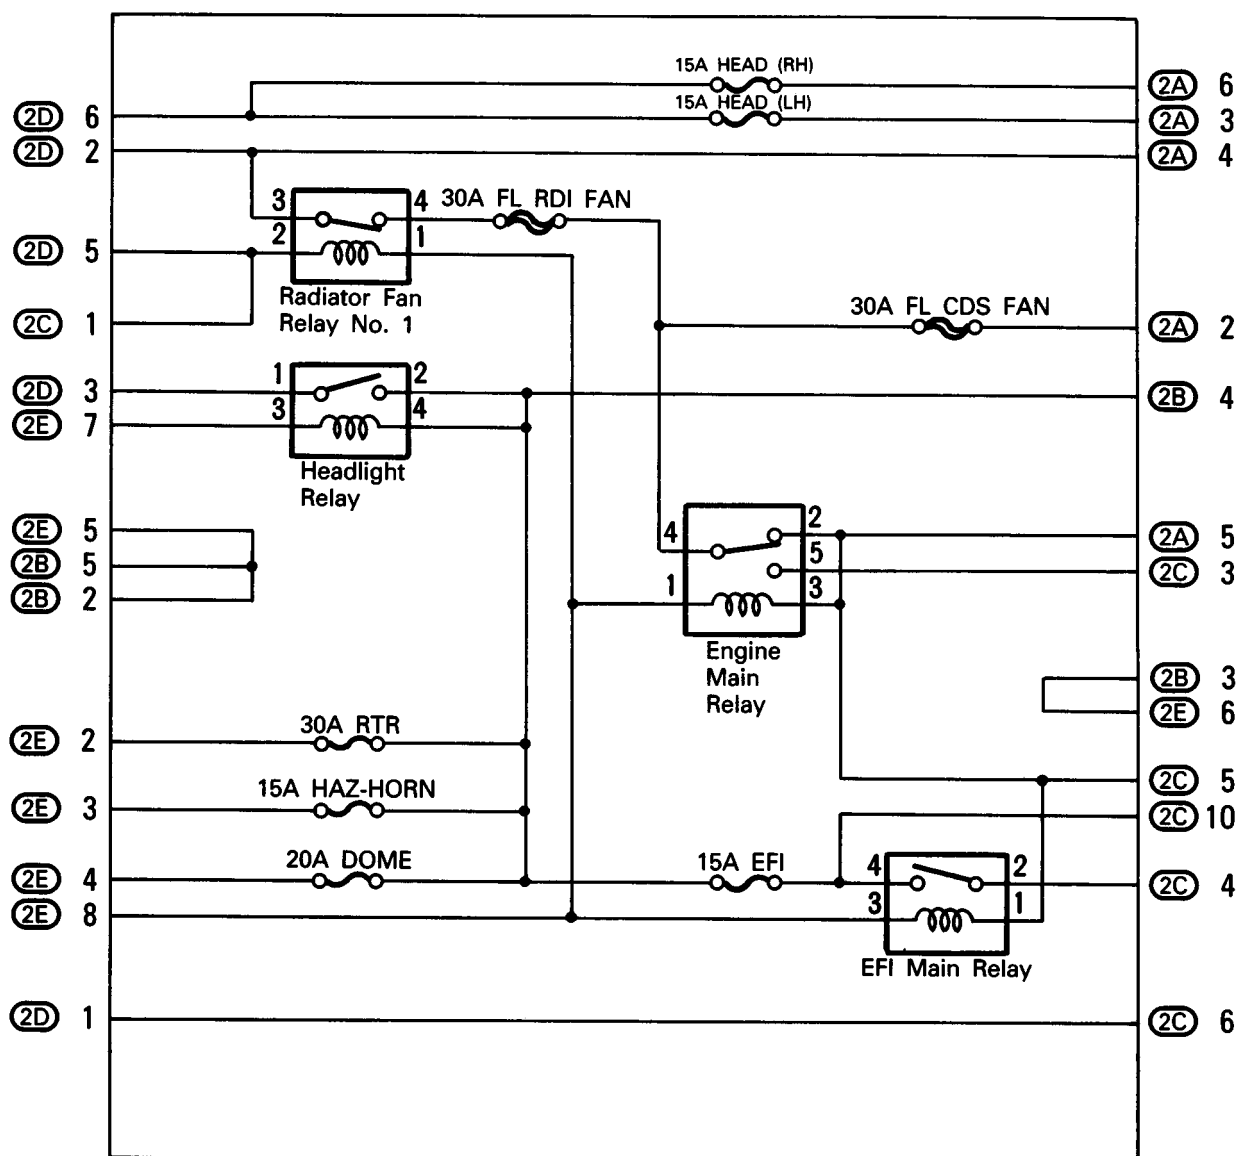


RELAY LOCATIONS

○ : J/B No. 3 Behind Combination Meter (See Page 17)

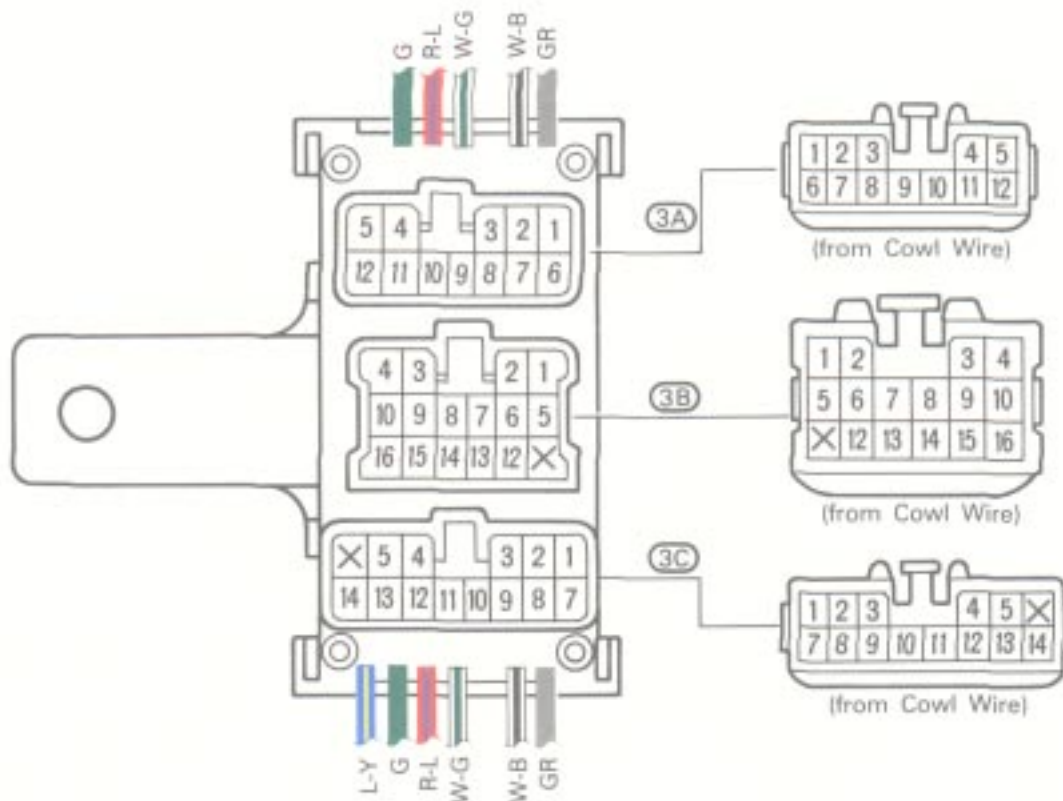


[J/B No. 3 Inner Circuit]

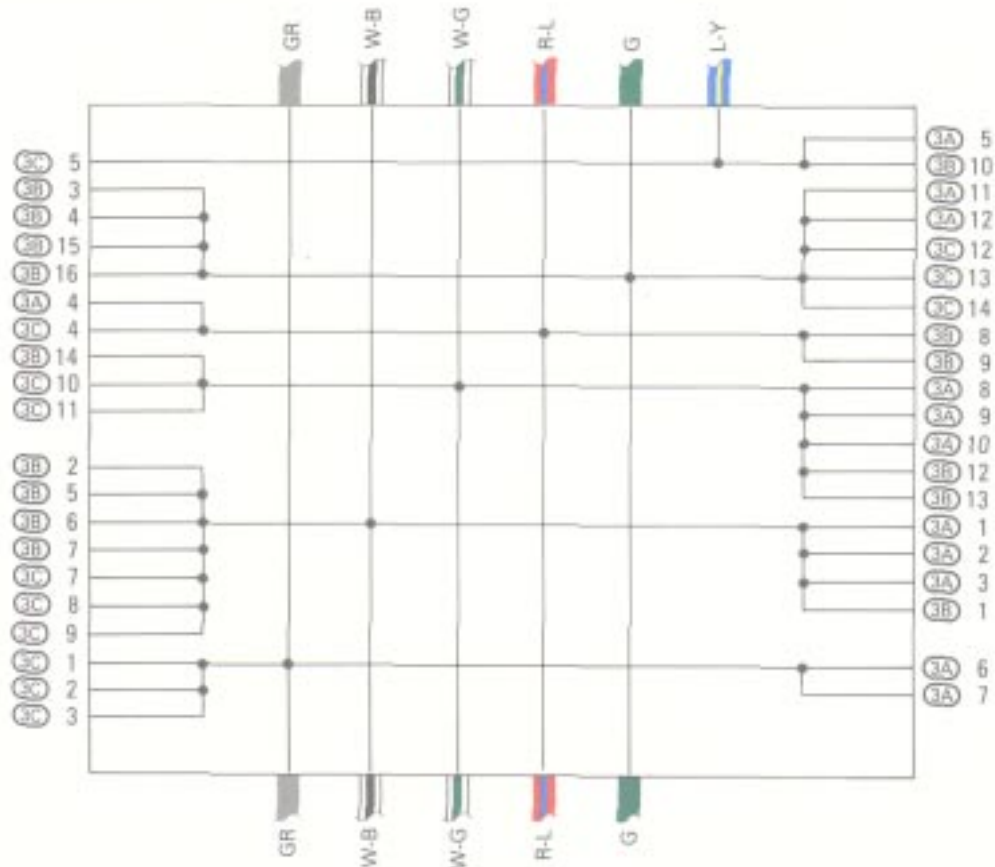

② : R/B No. 2

Left Kick Panel


(See Page 17)

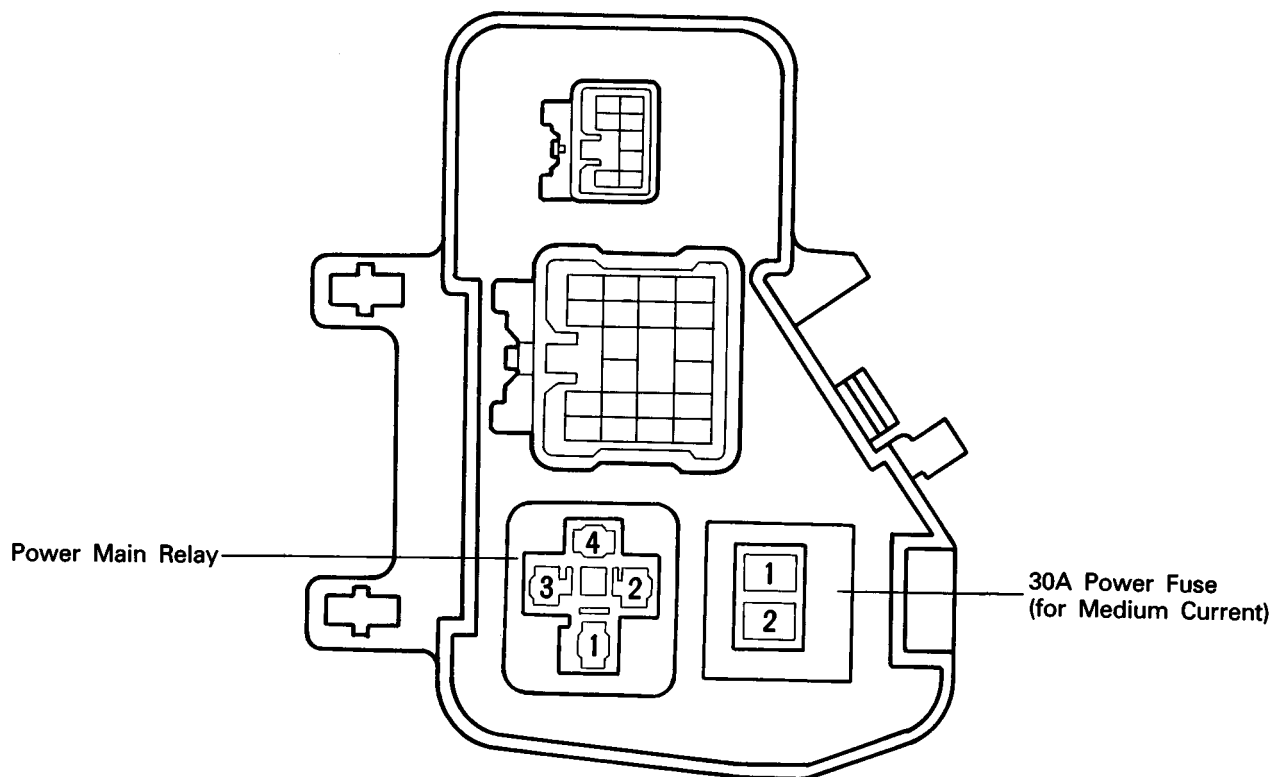

③ : R/B No. 3

Right Kick Panel

(See Page 17)

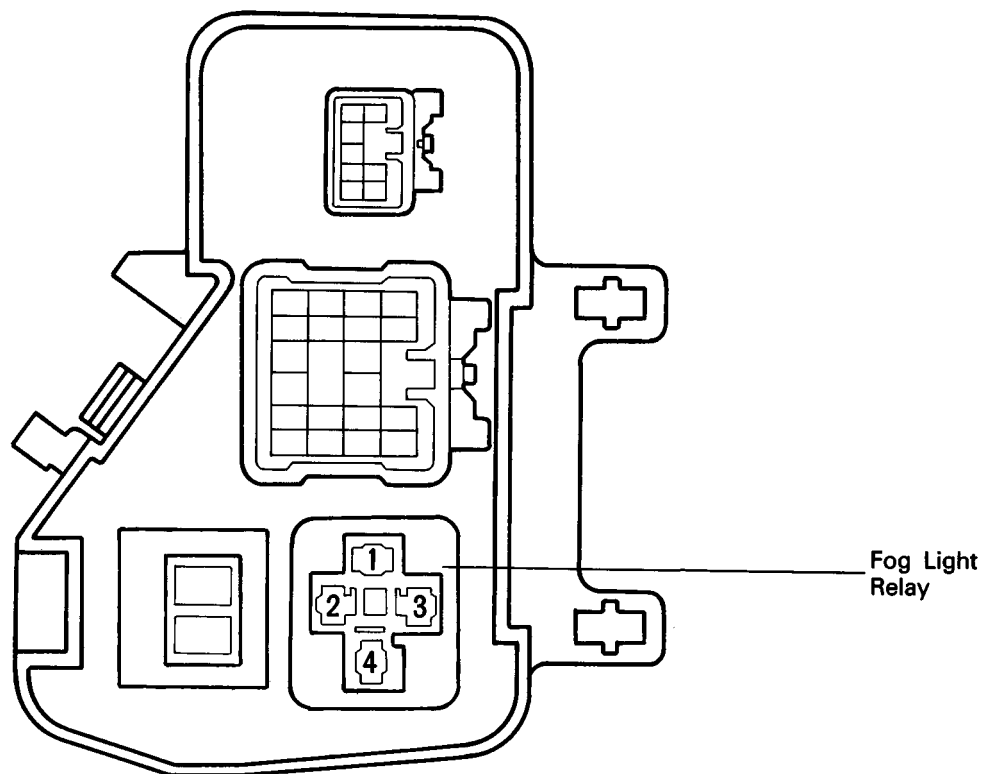


RELAY LOCATIONS

④ : R/B No. 4

Right Kick Panel

(See Page 17)

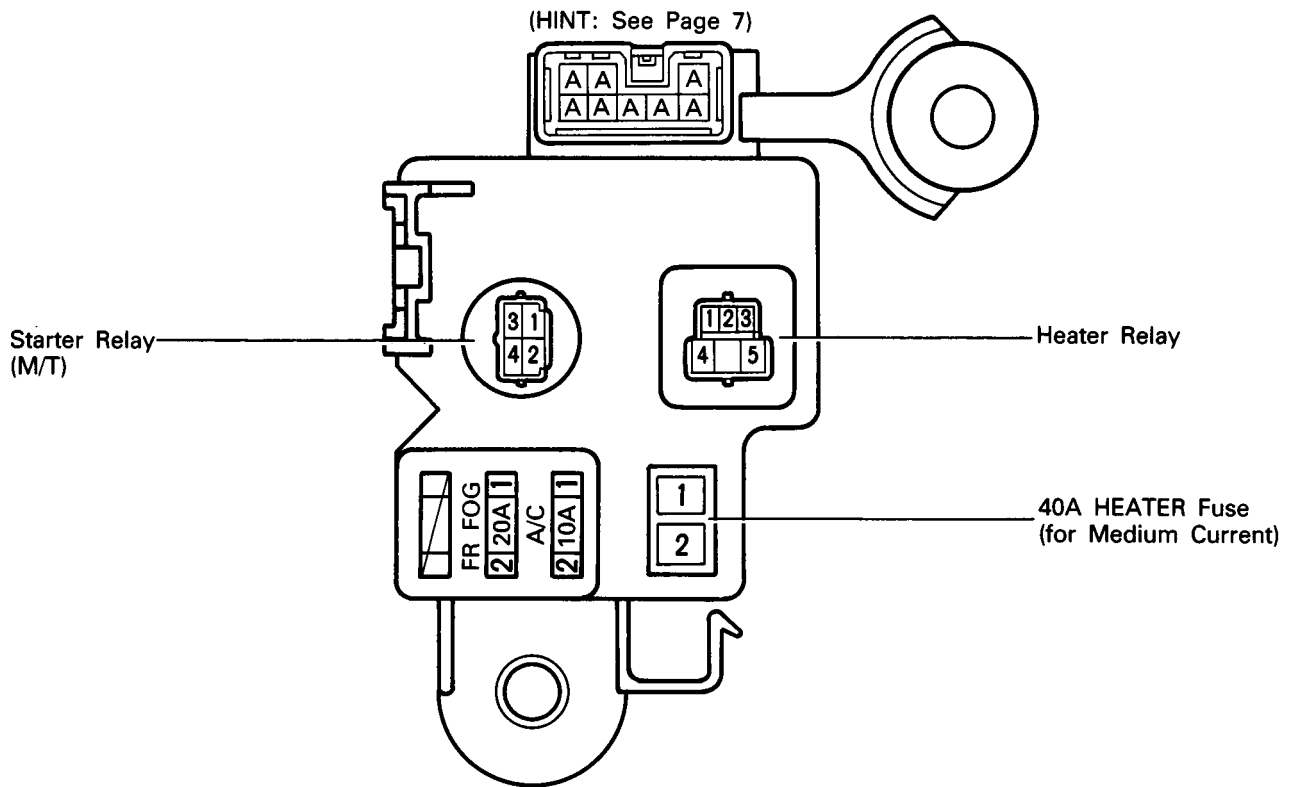

⑤ : R/B No. 5

Engine Compartment Front Right

(See Page 16)

