


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 66)

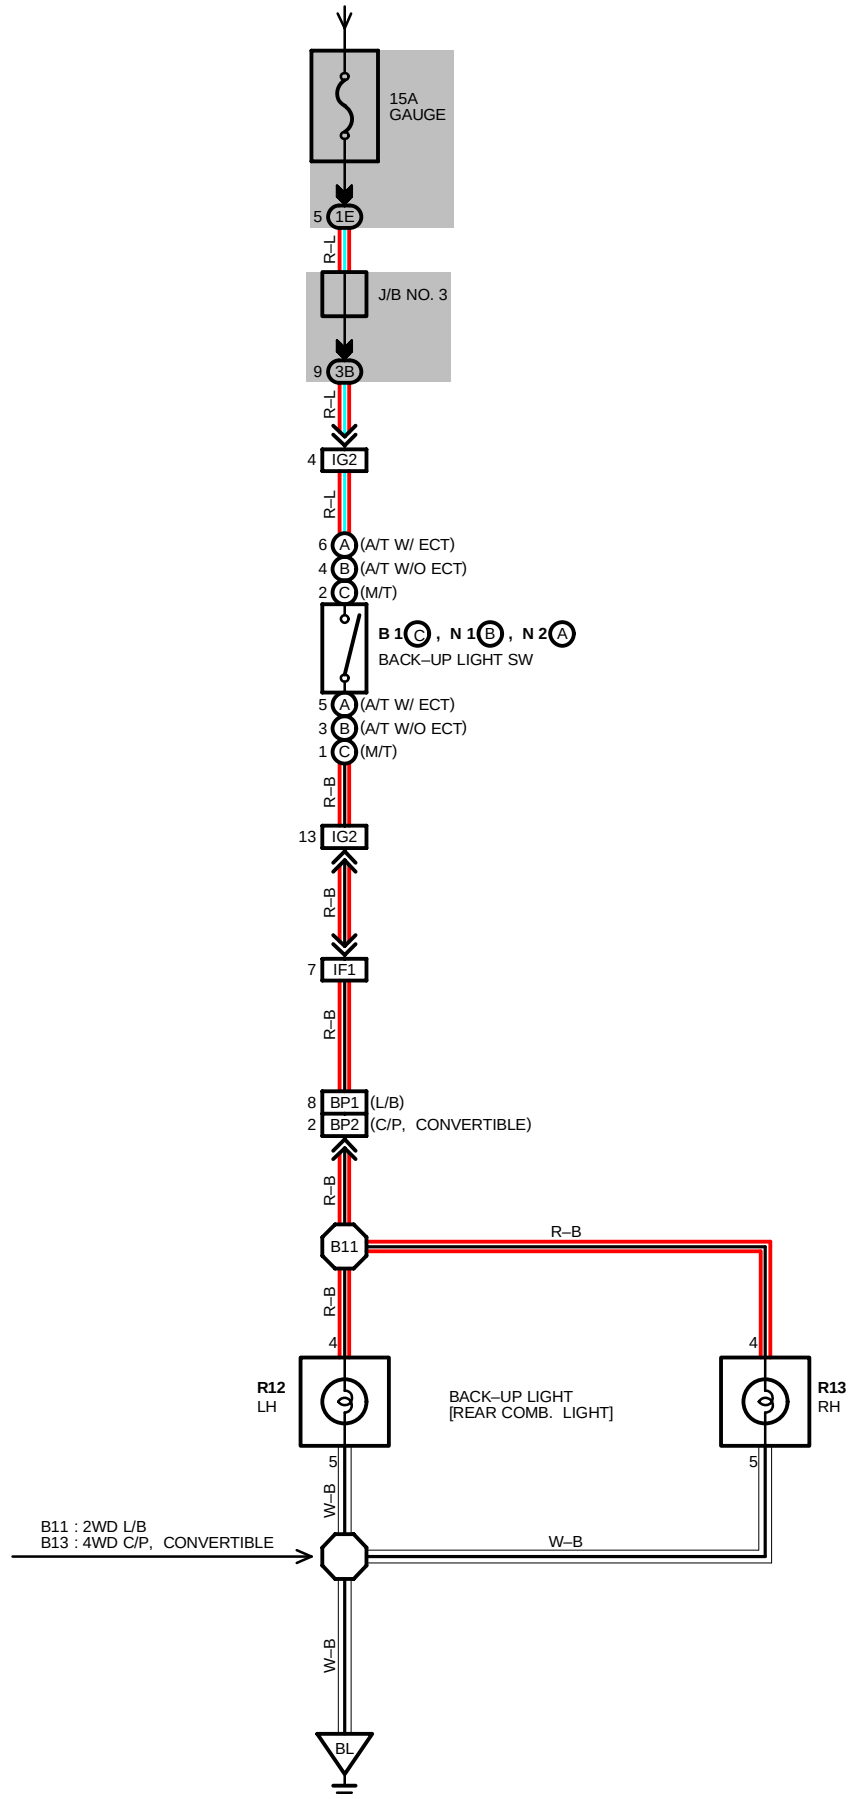

SERVICE HINTS

B 1(C), N 1(B), N 2(A) BACK-UP LIGHT SW

(A) 5-6, (B) 3-4, (C) 1-2 : CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	C	28 (3S-GTE), 30 (5S-FE)	N 1 B	31 (4A-FE)	R12 34 (L/B), 35 (C/P), 36 (CONVERTIBLE)
		31 (4A-FE)	N 2 A	30 (5S-FE)	R13 34 (L/B), 35 (C/P), 36 (CONVERTIBLE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	44	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	50 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
	50 (CONVERTIBLE)	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	
	50 (CONVERTIBLE)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B11	48 (L/B), 50 (C/P)	LUGGAGE ROOM WIRE	B13	48 (L/B), 50 (C/P)	LUGGAGE ROOM WIRE
	52 (CONVERTIBLE)			52 (CONVERTIBLE)	

