



D 6

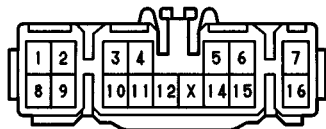


D10, D11




D12, D13




D14, D15 GRAY

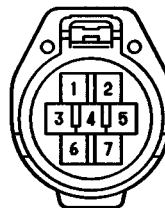

I12 BLACK

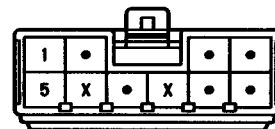

J 1




(HINT:SEE PAGE 7)

J 4



(HINT:SEE PAGE 7)

J 6

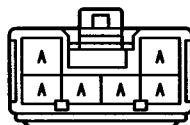

(HINT:SEE PAGE 7)





# DOOR LOCK

## SYSTEM OUTLINE

CURRENT ALWAYS FLOWS TO **TERMINAL 8** OF THE DOOR LOCK ECU.

### 1. MANUAL LOCK OPERATION

TO CHANGE DOOR LOCK SW AND KEY SW TO **LOCK** POSITION, A LOCK SIGNAL IS INPUT TO **TERMINAL 10, 12** OF THE DOOR LOCK ECU AND CAUSES THE ECU TO FUNCTION. CURRENT FLOWS FROM **TERMINAL 8** OF THE ECU → **TERMINAL 4** → **TERMINAL 7** OF THE DOOR LOCK MOTOR → **TERMINAL 5** → **TERMINAL 3** OF THE ECU → **TERMINAL 16** → TO **GROUND** AND DOOR LOCK MOTOR CAUSES THE DOOR TO LOCK.

### 2. MANUAL UNLOCK OPERATION

TO CAHNGE DOOR LOCK CONTROL SW AND KEY SW TO **UNLOCK** POSITION, AN UNLOCK SIGNAL IS INPUT TO **TERMINAL 9, 11** OF THE DOOR LOCK ECU AND CAUSES THE ECU TO FUNCTION. CURRENT FLOWS FROM **TERMINAL 8** OF THE ECU → **TERMINAL 3** → **TERMINAL 5** OF THE DOOR LOCK MOTOR → **TERMINAL 7** → **TERMINAL 4** OF THE ECU → **TERMINAL 16** → TO **GROUND** AND DOOR LOCK MOTOR CAUSES DOOR TO UNLOCK.

### 3. DOUBLE OPERATION UNLOCK OPERATION

WHEN THE DOOR LOCK KEY SW (DRIVER'S) IS TURNED TO THE UNLOCK SIDE, ONLY THE DRIVER'S DOOR IS MECHANICALLY UNLOCKED. TURNING THE DOOR LOCK KEY SW (DRIVER'S) TO THE UNLOCK SIDE CAUSES A SIGNAL TO BE INPUT TO **TERMINAL 9** OF THE ECU, AND IF THE SIGNAL IS INPUT AGAIN WITHIN **3** SECONDS BY TURNING THE SWITCH TO THE UNLOCK SIDE AGAIN, CURRENT FLOWS **TERMINAL 3** → **TERMINAL 5** OF DOOR LOCK MOTOR → **TERMINAL 7** → **TERMINAL 4** OF THE ECU → **TERMINAL 16** → **GROUND**, CAUSING THE DOOR LOCK MOTOR TO OPERATE AND UNLOCK THE PASSENGER'S DOOR.

### 4. IGNITION KEY REMINDER OPERATION

#### \* OPERATING DOOR LOCK KNOB (IN DOOR LOCK SOLENOIDS OPERATION)

WITH IGNITION KEY IN CYLINDER (UNLOCK WANING SW ON), WHEN THE DOOR IS OPENED AND LOCKED USING DOOR LOCK KNOB (DOOR LOCK MOTOR), THE DOOR IS LOCKED ONCE BUT EACH DOOR IS UNLOCKED SOON BY THE FUNCTION OF ECU. AS A RESULT, THE CURRENT FLOWS FROM **TERMINAL 8** OF THE ECU → **TERMINAL 3** → **TERMINAL 5** OF THE DOOR LOCK MOTOR → **TERMINAL 7** → **TERMINAL 4** OF THE ECU → **TERMINAL 16** → TO **GROUND** AND CAUSES ALL THE DOORS TO UNLOCK.

#### \* OPERATING DOOR LOCK CONTROL SW OR DOOR LOCK KEY SW

WITH IGNITION KEY IN CYLINDER (UNLOCK WARNING SW ON), WHEN THE DOOR IS OPENED AND LOCKED USING DOOR LOCK CONTROL SW OR KEY SW, THE DOOR IS LOCKED ONCE BUT EACH DOOR IS UNLOCK BY THE FUNCTION OF SW CONTAINED IN SOLENOIDS, WHICH THE SIGNAL IS INPUT TO **TERMINAL 6** (DRIVER'S) OR **5** (PASSENGER'S) OF THE ECU. ACCORDING TO THIS INPUT SIGNAL, THE CURRENT IN ECU FLOWS FROM **TERMINAL 8** OF THE ECU → **TERMINAL 3** → **TERMINAL 5** OF THE DOOR LOCK MOTOR → **TERMINAL 7** → **TERMINAL 4** OF THE ECU → **TERMINAL 16** → TO **GROUND** AND CAUSES ALL THE DOOR TO UNLOCK.

#### \* IN CASE OF KEY LESS LOCK

WITH IGNITION KEY IN CYLINDER (UNLOCK WARNING SW ON), WHEN THE UNLOCK FUNCTION IS DISTURBED MORE THAN **0.2** SECONDS, FOR EXAMPLE PUSHING THE DOOR LOCK KNOB ETC., THE DOOR HOLDS ON LOCK CONDITION. CLOSING THE DOOR AFTER, DOOR COURTESY SW INPUTS THE SIGNAL INTO **TERMINAL 2** OR **14** OF THE ECU. BY THIS INPUT SIGNAL, THE ECU WORKS AND CURRENT FLOWS FROM **TERMINAL 8** OF THE ECU → **TERMINAL 3** → **TERMINAL 5** OF THE DOOR LOCK MOTOR → **TERMINAL 7** → **TERMINAL 4** OF THE ECU → **TERMINAL 16** → TO **GROUND** AND CAUSES ALL THE DOORS TO UNLOCK.

## SERVICE HINTS

### I12 UNLOCK WARNING SW

1-5 : CLOSED WITH IGNITION KEY IN CYLINDER

### D14, D15 KEY LOCK AND UNLOCK SW

1-2 : CLOSED WITH DOOR LOCK CYLINDER UNLOCKED WITH KEY

2-3 : CLOSED WITH DOOR LOCK CYLINDER LOCKED WITH KEY

### D10, D11 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

- 1-GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ON** POSITION  
 9-GROUND : **0** VOLTS WITH DRIVER'S DOOR LOCK CYLINDER UNLOCKED WITH KEY  
 15-GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ON** POSITION  
 12-GROUND : **0** VOLTS WITH DRIVER'S, PASSENGER'S DOOR LOCK CYLINDER LOCKED WITH KEY

#### **D 6 DOOR LOCK ECU**

- 16-GROUND : ALWAYS CONTINUOUS  
 2-GROUND : CONTINUITY WITH DRIVER'S DOOR OPEN  
 8-GROUND : ALWAYS APPROX. **12** VOLTS  
 3-GROUND : APPROX. **12** VOLTS **0.2** SECONDS WITH FOLLOWING OPERATION  
   \* DOOR LOCK CONTROL SW UNLOCKED  
   \* DOOR LOCK CONTROL SW LOCKED WITH IGNITION KEY IN CYLINDER AND DRIVER'S DOOR OPEN (IGNITION KEY REMINDER FUNCTION)  
   \* DOOR LOCK KNOB LOCKED WITH IGNITION KEY IN CYLINDER AND DRIVER'S DOOR OPEN (IGNITION KEY REMINDER FUNCTION)  
   \* UNLOCKING THE DRIVER'S, PASSENGER'S DOOR CYLINDER WITH KEY  
 4-GROUND : APPROX. **12** VOLTS **0.2** SECONDS WITH FOLLOWING OPERATION  
   \* DOOR LOCK CONTROL SW LOCKED  
   \* LOCKING THE DRIVER'S, PASSENGER'S DOOR CYLINDER WITH KEY  
 10-GROUND : **0** VOLTS WITH DOOR LOCK CONTROL SW LOCKED  
 14-GROUND : CONTINUITY WITH PASSENGER'S DOOR OPEN  
 6-GROUND : CONTINUITY WITH DRIVER'S DOOR LOCK KNOB UNLOCKED  
 5-GROUND : CONTINUITY WITH PASSENGER'S DOOR LOCK KNOB UNLOCKED  
 11-GROUND : **0** VOLTS WITH DOOR LOCK CONTROL SW UNLOCKED, PASSENGER'S DOOR LOCK CYLINDER UNLOCKED WITH KEY

#### : PARTS LOCATION

| CODE       | SEE PAGE                                          | CODE       | SEE PAGE                                          | CODE       | SEE PAGE           |
|------------|---------------------------------------------------|------------|---------------------------------------------------|------------|--------------------|
| <b>D 6</b> | <a href="#">32</a>                                | <b>D13</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>J 1</b> | <a href="#">33</a> |
| <b>D10</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>D14</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>J 4</b> | <a href="#">33</a> |
| <b>D11</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>D15</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>J 6</b> | <a href="#">33</a> |
| <b>D12</b> | <a href="#">34 (L/B), 35 (C/P), 36 (CONVERT.)</a> | <b>I12</b> | <a href="#">33</a>                                |            |                    |

#### : RELAY BLOCKS

| CODE     | SEE PAGE           | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|----------|--------------------|-------------------------------------|
| <b>2</b> | <a href="#">26</a> | R/B NO. 2 (LEFT KICK PANEL)         |
| <b>4</b> | <a href="#">27</a> | R/B NO. 4 (RIGHT KICK PANEL)        |

#### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE      | SEE PAGE           | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|-----------|--------------------|------------------------------------------------------|
| <b>1B</b> | <a href="#">20</a> | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)            |
| <b>1E</b> |                    |                                                      |
| <b>1F</b> | <a href="#">20</a> | FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)           |

#### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE       | SEE PAGE           | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|--------------------|------------------------------------------------------------|
| <b>IC1</b> | <a href="#">44</a> | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)         |
| <b>IF1</b> | <a href="#">44</a> | FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)                 |
| <b>IK1</b> | <a href="#">46</a> | FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)        |

#### : GROUND POINTS

| CODE      | SEE PAGE           | GROUND POINTS LOCATION |
|-----------|--------------------|------------------------|
| <b>ID</b> | <a href="#">44</a> | LEFT KICK PANEL        |
| <b>IG</b> | <a href="#">44</a> | R/B NO. 4 SET BOLT     |

#### : SPLICE POINTS

| CODE | SEE PAGE         | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE         | WIRE HARNESS WITH SPLICE POINTS |
|------|------------------|---------------------------------|------|------------------|---------------------------------|
| I 1  | 46               | COWL WIRE                       | B 3  | 48 (L/B)         | FRONT DOOR RH WIRE              |
| I 2  |                  |                                 |      | 50 (C/P)         |                                 |
| I 4  |                  |                                 |      | 52 (CONVERTIBLE) |                                 |
| I 5  |                  |                                 | B14  | 48 (L/B)         |                                 |
| B 2  | 50 (C/P)         |                                 |      |                  |                                 |
|      | 52 (CONVERTIBLE) |                                 |      |                  |                                 |
|      |                  | FRONT DOOR LH WIRE              |      |                  |                                 |